




REVO-AT

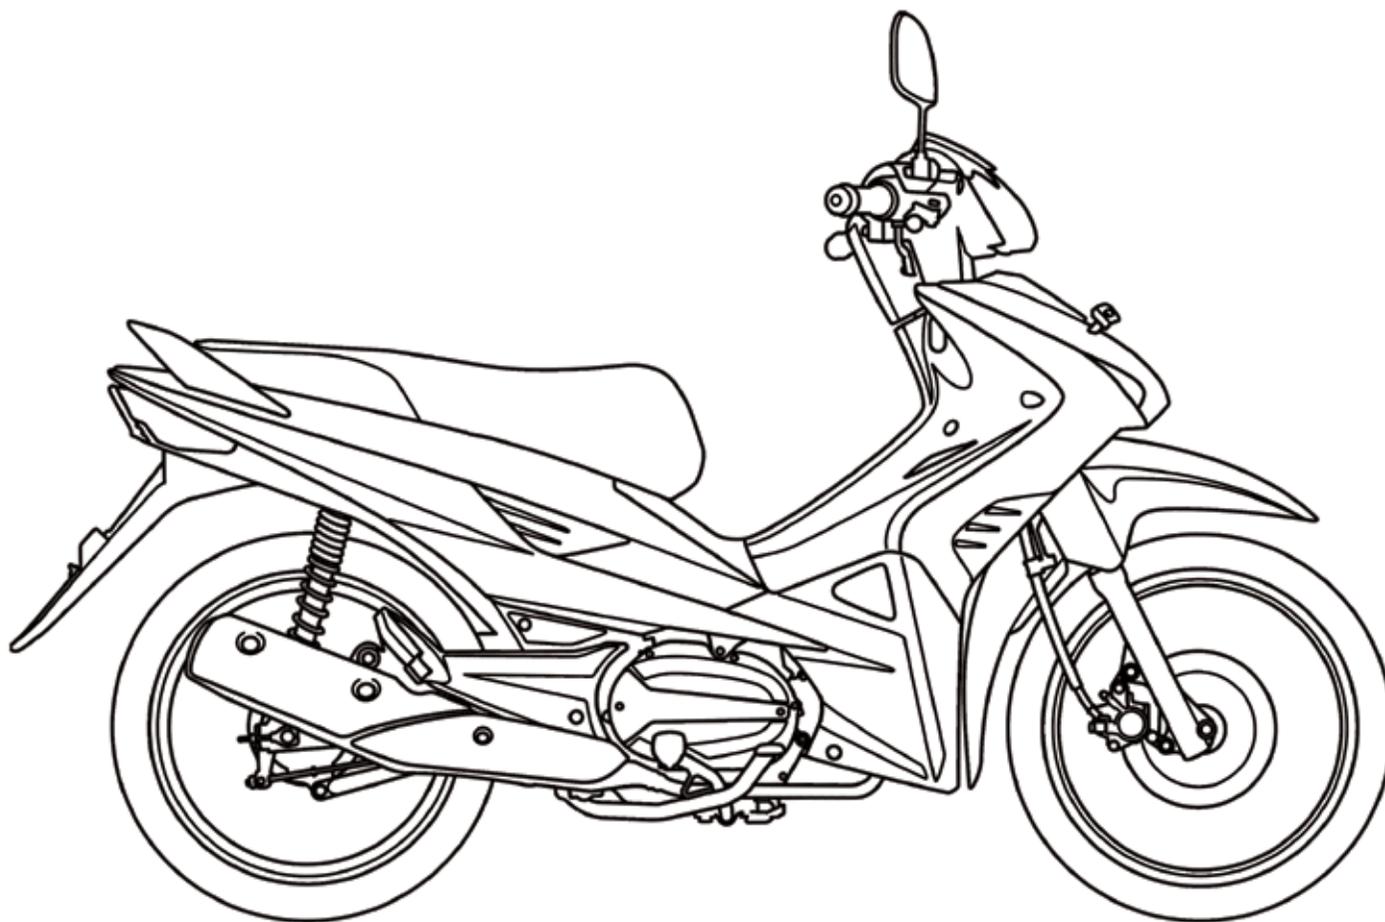

PARTS CATALOG EDISI 1

18KWZBI1

PT Astra Honda Motor

DAFTAR ISI

PETUNJUK PEMAKAIAN

1

KELOMPOK MESIN

2

KELOMPOK RANGKA

3

INDEKS PART NUMBER

4

INDEKS DESCRIPTION

5

PETUNJUK PEMAKAIAN PARTS CATALOG

Parts catalog ini digunakan untuk memesan/mencari parts pengganti; di dalamnya terdapat semua parts dan waktu kerja standard (F.R.T.) untuk tipe sepeda motor **HONDA REVO-AT**.

I. CARA MEMESAN PARTS

1. Informasi yang diperlukan

Pemesan parts pengganti sebaiknya mencantumkan Part Number dan Nomor seri seperti diterangkan dibawah. Hal ini diperlukan oleh karena setiap perubahan dan modifikasi pada parts telah didaftarkan di HONDA berikut nomor part dan Nomor seri yang bersangkutan.

Nomor-nomor yang dibutuhkan :

- (a) Parts mesin : Part Number dan Nomor seri mesin
- (b) Parts rangka : Part Number dan Nomor seri rangka
- (c) Parts Throttlebody : Part Number dan Nomor identifikasi Throttlebody


2. Perubahan-perubahan

Perubahan-perubahan pada parts catalog ini akan dimuat dalam Parts Catalog News yang diterbitkan sebagai pelengkap dari pada parts catalog ini. Bila jumlah perubahan-perubahan cukup banyak, pada suatu waktu dapat diterbitkan edisi baru yang disesuaikan daripada parts catalog ini, dan masing-masing edisi akan diberikan nomor urut pada sampulnya. Kami menganjurkan agar Sdr. selalu menyimpan Parts Catalog News bersama parts catalog ini, agar informasi parts Sdr. selalu lengkap dan up-to-date.


II. CARA MEMBACA PARTS CATALOG

1. Susunan nomor part

(contoh) Parts umum (General parts)

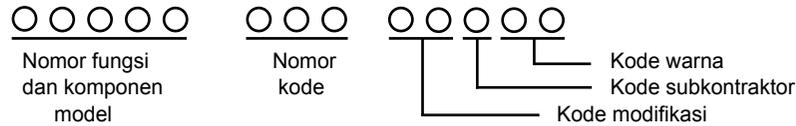

(contoh) Baut-baut, mur-mur dan standar parts lain.

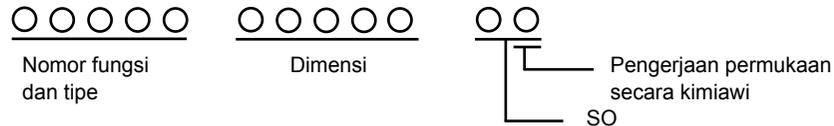

2. Kode warna

Kode warna pada bagian belakang nomor part menunjukkan warna part tersebut. Kode-kode ZA, ZB, ZC dan seterusnya tidak secara langsung menunjukkan warna part, melainkan warna dapat dilihat dari kode HONDA pada kolom "Part Number" di sebelahnya nomor part yang bersangkutan.

Kode Warna		Warna
Kode pabrik	Kode HONDA	
AFB	NHB12M	Affinity Black Mettalic
POV	P101P	Pearl Odyssey Violet
CSR	R333C	Candy Scarlet Red

3. Singkatan-singkatan

Dibawah ini adalah daftar singkatan-singkatan yang digunakan di dalam parts catalog, sebagai berikut :

ASSY..... Assembly	L.E.D Light emitting diode
COMP Complete.	MPH Miles per hour
R..... Right	L (100L)..... Link(100 Links)
L Left	A.C Alternating current
STD Standard	D.C Direct current
MM Milimeter	IN..... Inlet
G Gram	EX Exhaust
T(22)..... Tooth (22Teeth)	FR Front
A..... Ampere	RR..... Rear
V..... Volt	Hex..... Hexagonal
W..... Watt	A.M..... Attaching mark
WL..... With labelling	T.M Transcript mark
WOL..... Without labelling	C.D.I..... Capacitive
KPH..... Kilometers per hour	Discharge Ignition

4. Dimensi-dimensi

Semua ukuran diberikan dalam satuan milimeter (mm) kecuali untuk peluru baja (steel balls), ban luar (tires) dan ban dalam (tire tubes).

Part	Contoh	Pengertian
Bolt (Screw)	6x12	diameter 6mm, panjang 12mm
Pin	8x14	diameter 8mm, panjang 14mm
O-Ring	9.5x1.6	diameter 9,5mm, tebal 1,6mm
Oil seal	14x24x5	diameter dalam 14 mm, diameter luar 24 mm, tebal 5mm
Tube	5x130	diameter dalam 5mm, panjang 130mm

5. Parts yang digantikan oleh part lain

Nomor part yang diletakkan dibawah nama part pada kolom "Description" menunjukkan bahwa nomor part disebelahnya telah diganti dengan nomor part tersebut. Pergantian parts sedemikian (supersedence) dapat dilakukan oleh HONDA tanpa pemberitahuan apapun.

6. Part yang dipersatukan (Assemblies)

Part pada gambar yang dikelilingi dengan garis terputus-putus tersedia sebagai parts yang dipersatukan. Masing-masing komponen daripada susunan parts itu dapat juga diperoleh secara terpisah.

7. Jumlah yang diperlukan

Angka didalam kolom "Q'ty" menunjukkan jumlah part tersebut yang dipakai di dalam bagian yang bersangkutan.

8. Ilustrasi

Gambar-gambar parts yang dimuat di dalam part catalog ini disediakan untuk mempermudah pengenalan part dan mungkin berbeda daripada bentuk part sebenarnya.

9. Nama part

Nama part tidak diterjemahkan kedalam bahasa Indonesia, melainkan tetap menggunakan istilah resminya didalam bahasa Inggris, agar seragam dengan istilah internasional yang dipakai di seluruh dunia oleh Honda Motor Co.,Ltd.

10. Model dan nomor seri yang berlaku


Model-model, kode daerah pemasaran dan nomor seri yang berlaku didalam parts catalog ini dapat diidentifikasi sebagai berikut dibawah ini.

Model	Kode daerah pemasaran	Tipe	No. Seri Mesin yang berlaku mulai	No. Seri Rangka yang berlaku mulai	No. Identifikasi Throttle body yang berlaku
NCF110CSFB	1N	Indonesia	JBD1E-1000001~	MH1JBD11*AK000001~	GQR9A B
	2IN	Indonesia			


* Dari nomor identifikasi throttle body, hanya dipakai bagian yang digaris bawah didalam contoh dibawah

GQR9A B KC 7

11. Lokasi nomor seri pada sepeda motor

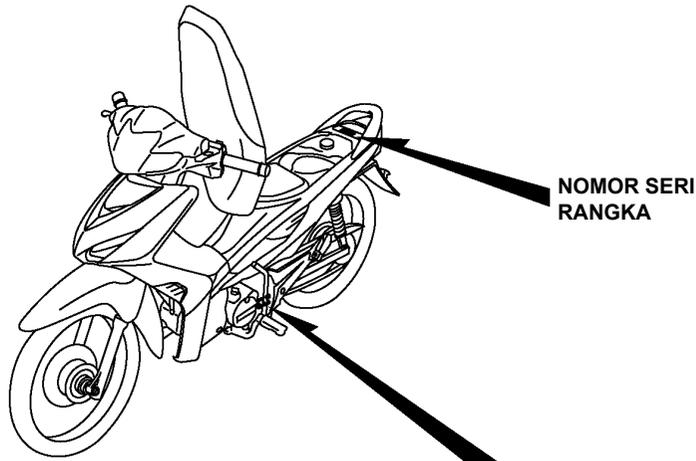

NOMOR IDENTIFIKASI THROTTLE BODY

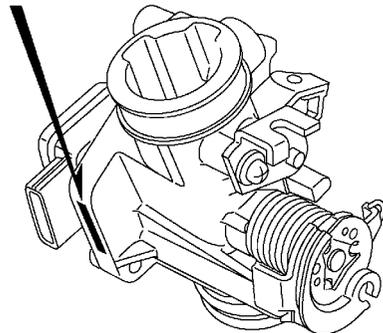

III. CARA MEMAKAI FLAT RATE TIME (F.R.T.)

F.R.T. (Flate Rate Time) yang terletak di halaman paling akhir buku ini dipakai untuk menentukan waktu kerja standard yang diperbolehkan untuk penggantian parts.

F.R.T untuk parts yang tidak tercantum didalam buku ini harus ditentukan dari jenis pekerjaan yang erat hubungannya dengan penggantian parts tersebut.

1. F.R.T. didasarkan atas kondisi servis sebagai berikut :

- a. Disamping waktu servis yang sebenarnya ditambahkan lagi waktu ekstra.
- b. Waktu standard yang ditentukan didasarkan atas persyaratan bahwa alat-alat servis yang diperlukan seperti terdaftar didalam buku pedoman reparasi sudah siap tersedia, dan pekerjaan dilakukan oleh seorang mekanik dengan ketrampilan normal.
- c Waktu yang dibutuhkan untuk pemeriksaan dan percobaan pemakaian setelah diservis, dimasukkan juga kedalam F.R.T.

2. Metode perhitungan

Waktu pekerjaan ditulis dalam sepersepuluh jam untuk mempermudah perhitungan.
 (contoh) 0,3 = 18 menit
 5,6 = 5 jam dan 36 menit

DAFTAR KONVERSI			
Jam	Menit	Jam	Menit
0,1	6	0,6	36
0,2	12	0,7	42
0,3	18	0,8	48
0,4	24	0,9	54
0,5	30	1,0	60

3. Menghitung F.R.T.

Jika beberapa pekerjaan dilakukan sekaligus, hitunglah sebagai berikut :

- a. Pekerjaan yang tidak berhubungan
 F.R.T. untuk pekerjaan diperoleh dengan menjumlahkan F.R.T. untuk setiap part yang diganti
 (contoh) Penggantian cylinder dan clutch spring

Service item/Bagian yang diservis	F.R.T.
Cylinder	1,4
Clutch spring	0,7

F.R.T. untuk pekerjaan ini adalah : 1,4 + 0,7 = 2,1

b. Pekerjaan yang terulang

Ambillah F.R.T. untuk part terakhir yang akan diganti.

(contoh) Penggantian piston dan cylinder head gasket.

Service item/Bagian yang diservis	F.R.T.
Cylinder head gasket	1,0
Piston	1,5

F.R.T. untuk pekerjaan ini adalah : 1,5

c. Pekerjaan yang sebagian berhubungan

Jumlahkan F.R.T. untuk semua parts yang diganti dan kurangi dengan F.R.T. untuk pekerjaan yang terulang.

(contoh) Penggantian gear shift drum dan crankshaft assembly.

Service item/Bagian yang diservis	F.R.T.
Gearshift drum	* 3,9
Crankshaft	* 4,1
Pembongkaran crankcase	* 3,7

F.R.T. untuk pekerjaan ini adalah : $(3,9 + 4,1) - 3,7 = 4,3$

Pekerjaan yang terulang adalah pembongkaran crankcase.

* F.R.T. dengan tanda (*) termasuk menurunkan dan memasang kembali mesin.

4. Pekerjaan lain disamping penggantian parts

a. Penurunan dan pemasangan

No.	Service item/Bagian yang diservis	F.R.T.
1.	Mesin	1,5
2.	Kepala silinder	1,1
3.	Throttlebody	0,4

No.	Service item/Bagian yang diservis	F.R.T.
1.	Pemeriksaan waktu pengapian	0,2
2.	Penyetelan dan pembersihan busi	0,1
3.	Penyetelan tappet	0,3
4.	Penyetelan stasioner Throttlebody	0,1
5.	Pemeriksaan oli mesin (tidak termasuk penggantian oli mesin)	0,1
6.	Penyetelan kopling	0,1
7.	Pembersihan elemen saringan udara	0,3
8.	Pengukuran tekanan kompresi	0,1
9.	Pemeriksaan cairan baterai dan berat jenisnya	0,2
10.	Pengukuran tinggi pelampung Throttlebody	0,6
11.	Pembersihan saringan oli mesin	0,6
12.	Penyetelan gas tangan	0,1

Rangka

No.	Service item/Bagian yang diservis	F.R.T.
1.	Penyetelan rem depan	0,1
2.	Penyetelan rem belakang	0,1
3.	Pemeriksaan cara kerja rem	0,1
4.	Penyetelan arah lampu depan	0,1
5.	Rantai roda (termasuk penyetelan tegangan rantai tetapi tidak termasuk penggantian sprocket)	0,1

b. Pembongkaran

No.	Service item/Bagian yang diservis	F.R.T.
1.	Throttlebody	0,7

KELOMPOK MESIN

E-2 CYLINDER HEAD COVER

FR.

KWZIC000

E-3 CYLINDER HEAD

FR.

KWZIC000

E-4 CAMSHAFT / VALVE

FR.

KWZIC000

E-5 CAM CHAIN / TENSIONER

FR.

KWZIC000

E-6 CYLINDER

FR.

KWZIC000

E-7 RIGHT CRANKCASE COVER

FR.

KWZIC000

E-8 GENERATOR

FR.

KWZIC000

E-11 OIL PUMP

FR.

KWZIC100


E-12 STARTER MOTOR

FR.

KWZIC100


KELOMPOK MESIN

E-13 LEFT CRANKCASE COVER

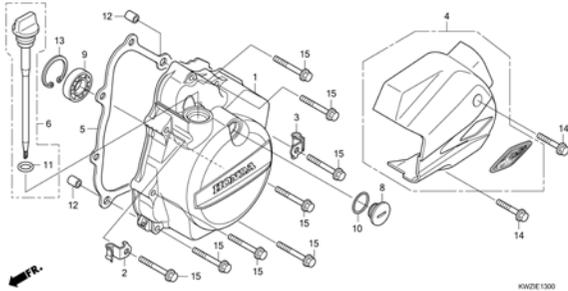


KWZIE1300

E-15 KICK STARTER SPINDLE

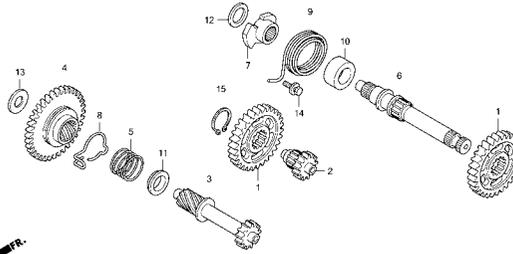


KWZIF1500

E-16 DRIVE FACE

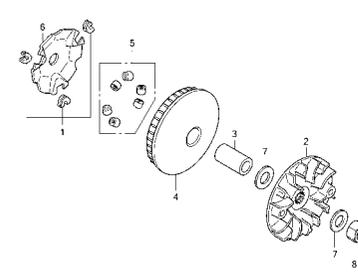


KWZIF1600

E-17 DRIVEN FACE

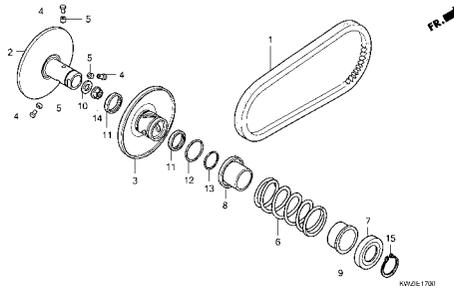


KWZIE1700

E-17-10 TRANSMISSION

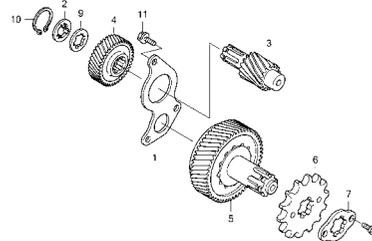


KWZIE1710

E-17-20 CLUTCH

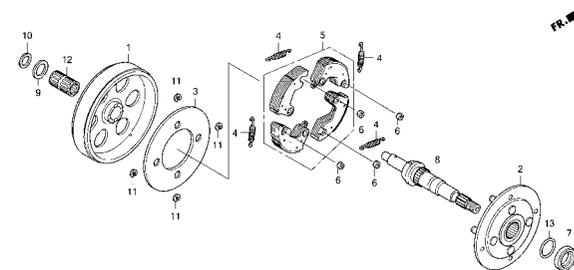


KWZIE1720

E-19 CRANKCASE

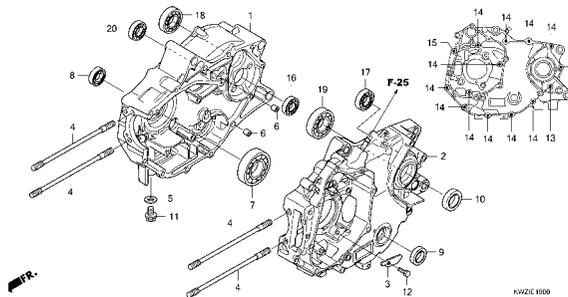


KWZIE1800

E-20 CRANKSHAFT / PISTON

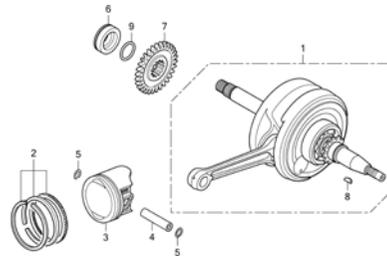


KWZIE2000

E-22 THROTTLE BODY

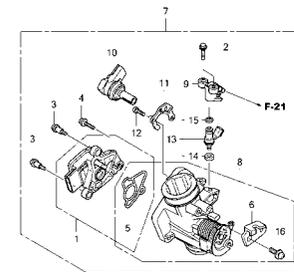

KWZIE2200


F - 14 - 40 Front Wheel

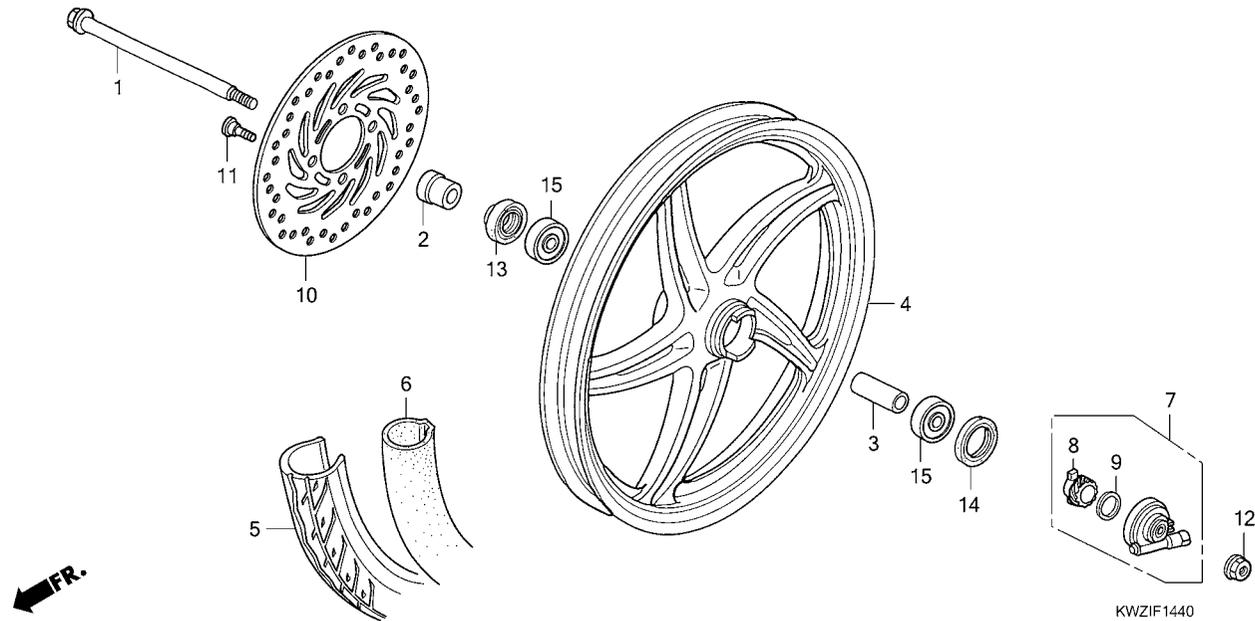

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	AXLE, FRONT WHEEL.....	0,2	1	44301-KWB-600	AXLE, FR. WHEEL	1	
4	FRONT WHEEL.....	0,8	2	44311-KWB-920	COLLAR, FR. WHEEL SIDE	1	
5	FRONT TIRE	0,7	3	44620-KPH-951	COLLAR, FR. AXLE DISTANCE	1	
6	TUBE, FRONT TIRE(SATU).....	0,7	4	44601-KWB-921	WHEEL., FR	1	
7	GEARBOX ASSY., SPEEDOMETER.....	0,2	5	44711-KWW-010	TIRE, FR	1	
10	DISC, FRONT BRAKE.....	0,3	6	22517-25017-0000	TUBE, TIRE	1	
15	(3) BEARING, FRONT WHEEL(SATU).....	0,4	7	44800-KWB-600	BOX ASSY., SPEEDOMETER GEAR	1	
			8	44806-KWB-600	GEAR, SPEEDOMETER (19T).....	1	
			9	44809-KFM-900	WASHER, SPEEDOMETER GEAR	1	
			10	45251-KWB-921	DISK, FR. BRAKE	1	
			11	90105-KGH-901	BOLT, BRAKE DISK, 8X24	4	
			12	90306-KGH-901	NUT, U, 12MM	1	
			13	91251-KPH-901	DUST SEAL, 21X37X7	1	
			14	91251-KWB-601	DUST SEAL, 42X54X7	1	
			15	HB62012-RS	BEARING, RADIAL BALL, 6201UU	2	

F - 12

Front Brake Caliper

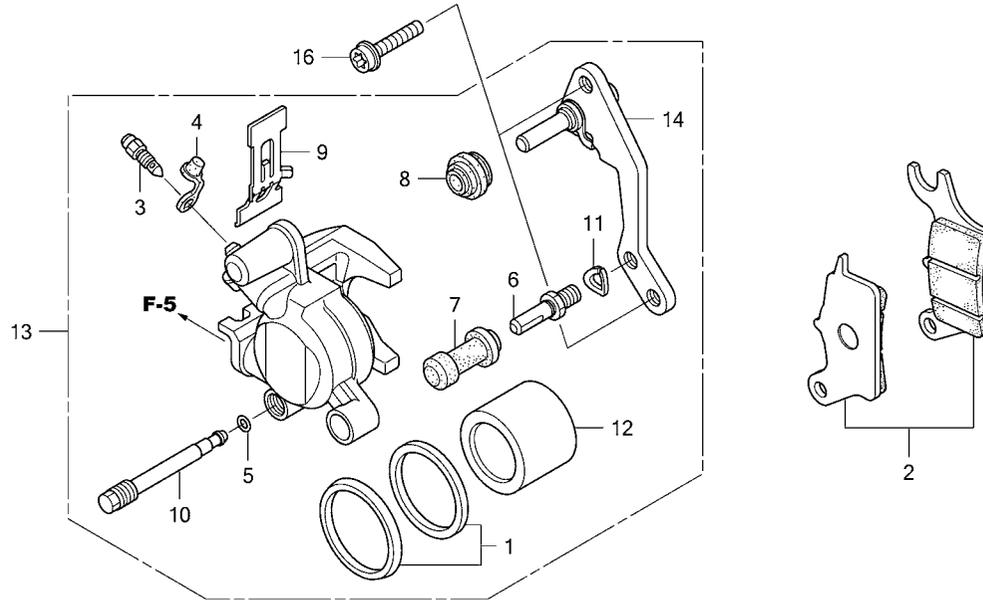


KWZIF1200 **FR.** →

3

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
2 SHOE(PAD) SET, BRAKE :FRONT	0,1	1	06451-961-405	SEAL SET, PISTON	1	
12 (1) PISTON, FRONT BRAKE CALIPER	0,5	2	06455-KWB-601	PAD SET, FR	1	
.TERMASUK: Mengeluarkan minyak rem		3	43352-568-004	SCREW, BLEEDER	1	
13 CALIPER, FRONT BRAKE.....	0,4	4	43353-461-772	CAP, BLEEDER	1	
.TERMASUK: Mjengelurkan minyak rem		5	45111-MAJ-G42	RING, STOPPER	1	
14 BRACKET, FRONT CALIPER	0,2	6	45131-GZ0-007	BOLT, PIN	1	
		7	45132-166-017	BOOT, PIN BUSH	1	
		8	45133-MA3-007	BOOT B	1	
		9	45208-KWB-601	SPRING, PAD	1	
		10	45215-KPH-951	PIN, HANGER	1	
		11	45216-166-007	WASHER, WAVE	1	
		12	45218-KWB-601	PISTON	1	
		13	45250-KWB-921	CALIPER SUB ASSY., R. FR	1	
		14	45290-KWB-601	BRACKET SUB ASSY., FR	1	
		16	90131-KPH-881	BOLT, TORX, 8X25	2	

F - 5

Fr. Brake Master Cylinder

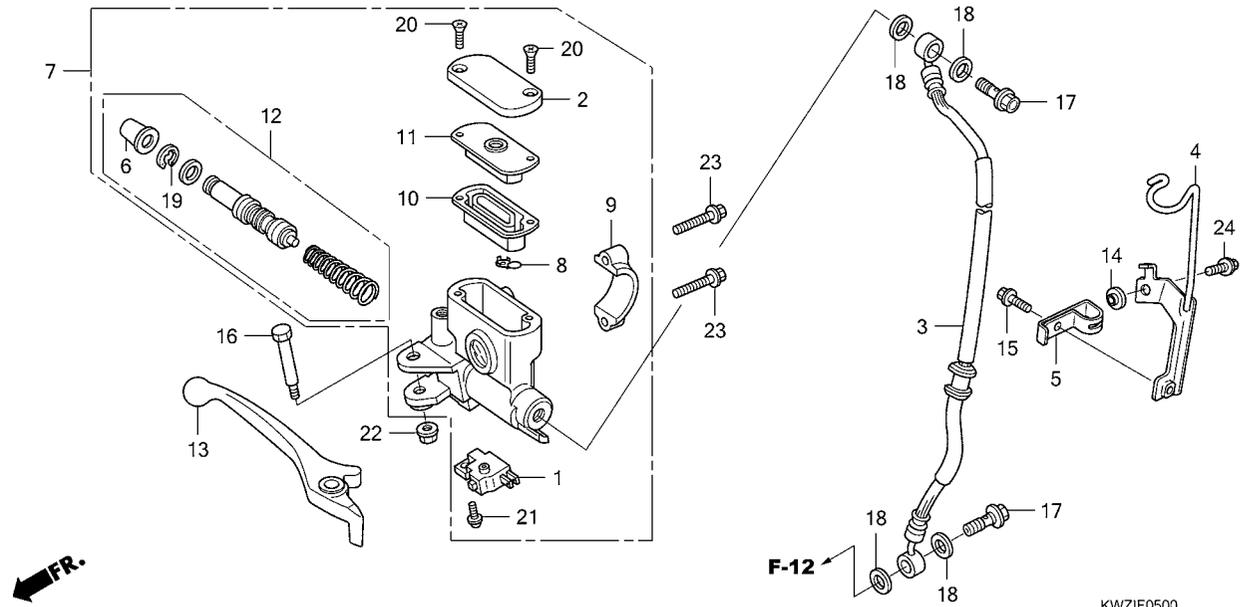


3

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	SWITCH, FRONT STOP	0,5	1	35340-KWB-601	SWITCH ASSY., FR. STOP	1	
3	HOSE, FRONT BRAKE	0,6	2	43513-KBP-882	CAP, MASTER CYLINDER	1	
	.TERMASUK: Mengeluarkan minyak rem		3	45126-KWW-A40	HOSE COMP., FR. BRAKE	1	
7	CYLINDER, FRONT BRAKE MASTER..	0,8	4	45156-KWW-A40	CLAMPER, BRAKE HOSE	1	
	.TERMASUK: Mengeluarkan minyak rem		5	45157-KWW-A00	CLAMPER B, BRAKE HOSE	1	
10	DIAPHRAGM, FRONT BRAKE MASTER CYLINDER	0,1	6	45504-410-004	BOOT COMP	1	
12	PISTON SET, FRONT BRAKE MASTER	0,8	7	45510-KWB-600	CYLINDER SUB ASSY., FR. BRAKE	1	
	.TERMASUK: Mengeluarkan minyak rem		8	45512-MA6-007	PROTECTOR	1	
13	LEVER, HANDLE :RIGHT	0,3	9	45517-GW0-751	HOLDER, MASTER CYLINDER	1	
			10	45520-GW0-912	DIAPHRAGM	1	
			11	45521-GW0-913	PLATE, DIAPHRAGM	1	
			12	45530-KVY-911	CYLINDER SET, MASTER	1	
			13	53175-KRS-T80	LEVER, R. STEERING HANDLE	1	
			14	81312-KPH-900	COLLAR, FR. FENDER	1	
			15	90102-KGH-900	BOLT, FLANGE, 6X10	1	
			16	90114-KGH-901	BOLT, HANDLE LEVER PIVOT	1	
			17	90145-GAZ-981	BOLT, OIL, 10X22	2	
			18	90545-300-000	WASHER, OIL BOLT	4	
			19	90651-MA5-672	CIRCLIP	1	
			20	93600-04012-1G	SCREW, FLAT, 4X12	2	
			21	93893-04012-18	SCREW-WASHER, 4X12	1	
			22	94050-0600	NUT, FLANGE, 6MM	1	
			23	95701-06022-01	BOLT, FLANGE, 6X22	2	
			24	96001-06014-00	BOLT, FLANGE, 6X14	1	

KELOMPOK RANGKA


F-1

HEADLIGHT

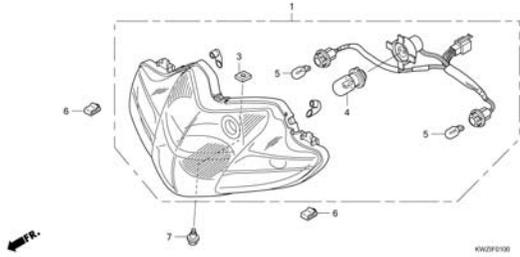


F-2

METER

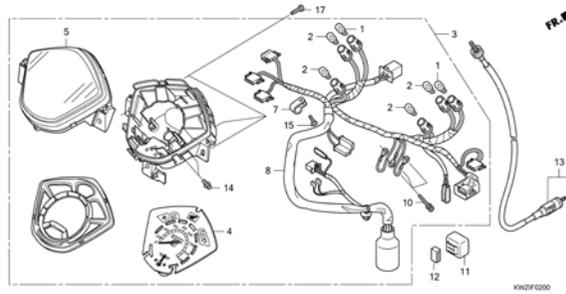


F-4

SWITCH / CABLE / MIRROR

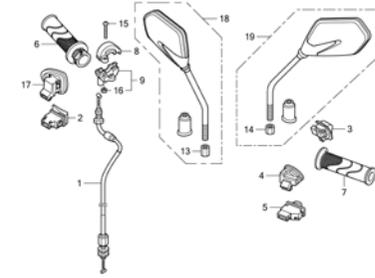


F-5

FR. BRAKE MASTER CYLINDER

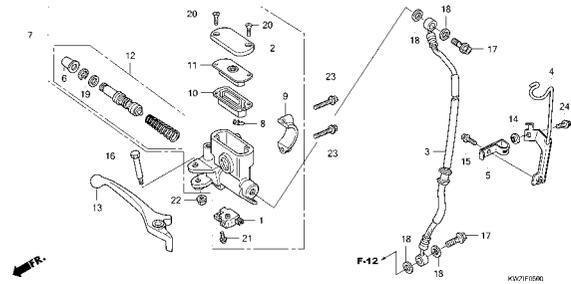


F-7

HANDLE PIPE / HANDLE COVER

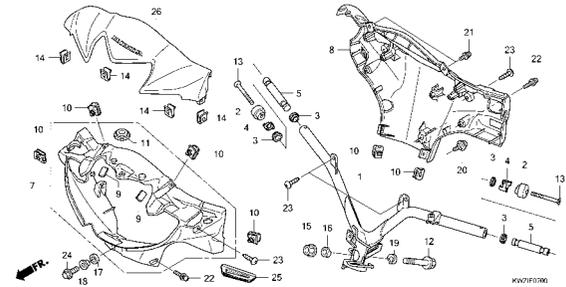


F-9

STEERING STEM

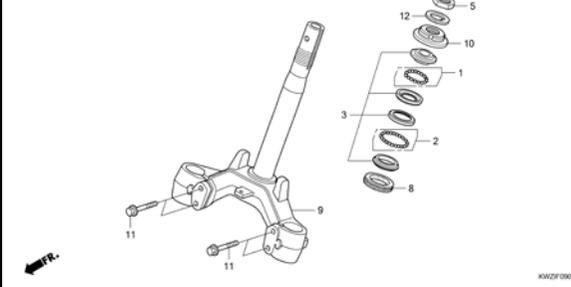


F-10

FRONT FENDER

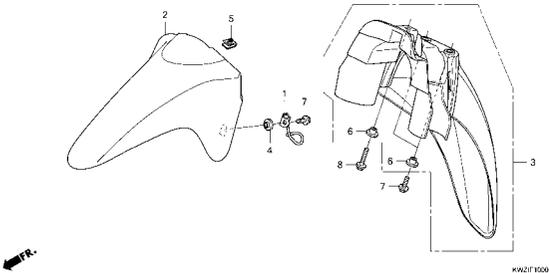


F-11

FRONT FORK

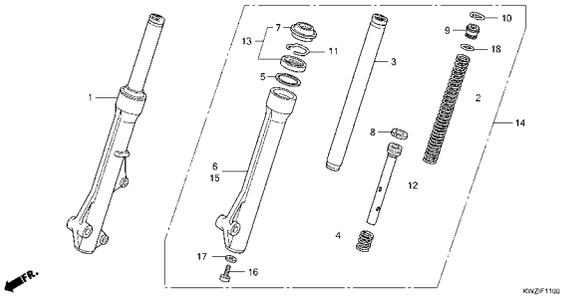

F-12


FRONT BRAKE CALIPER

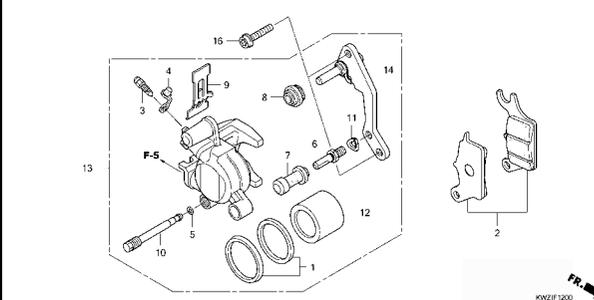


3

KELOMPOK RANGKA


F-14 - 40 FRONT WHEEL

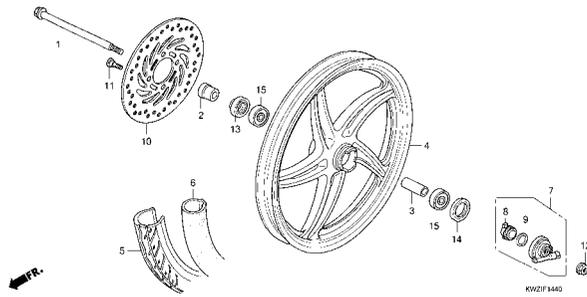


F-18 REAR BRAKE PANEL

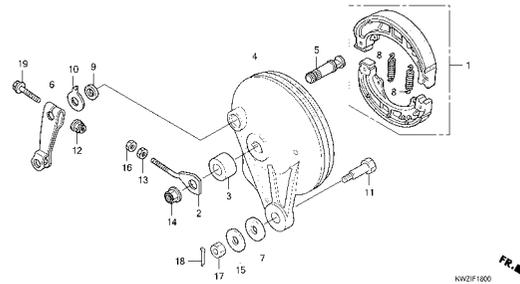


F-19 - 30 REAR WHEEL

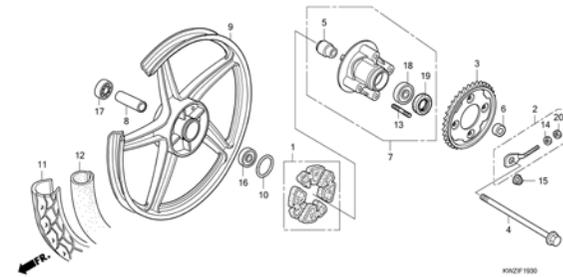


F-21 FUEL TANK / FUEL PUMP

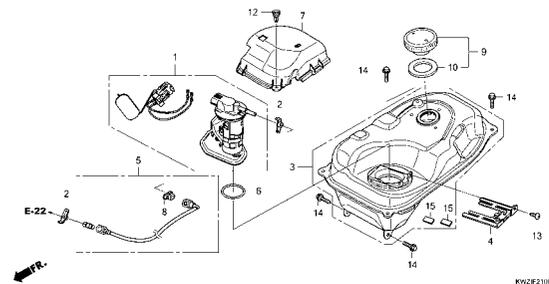


F-23 SEAT/GRAB RAIL / LUGGAGE BOX

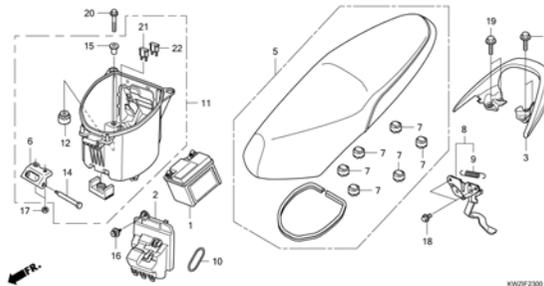


F-25 AIR CLEANER

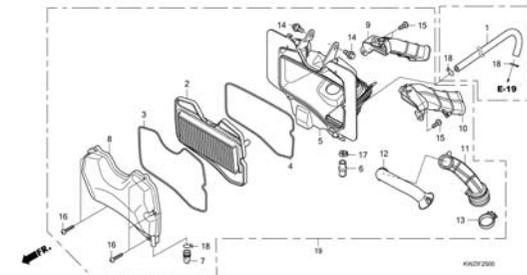


F-27 EXHAUST MUFFLER

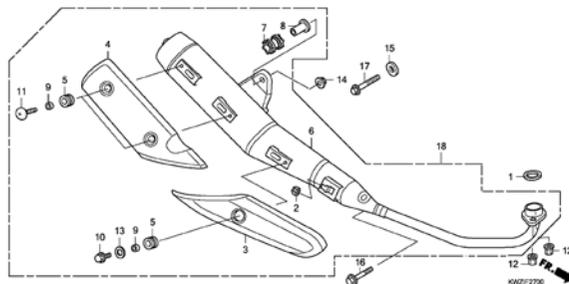

F-29 PEDAL / KICK ARM

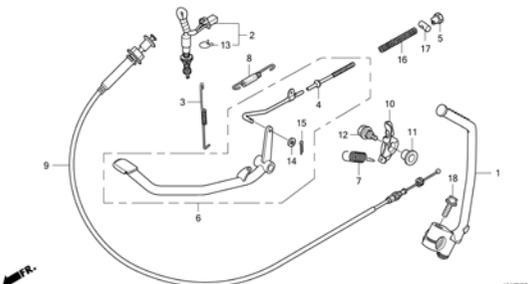

F-30 STEP

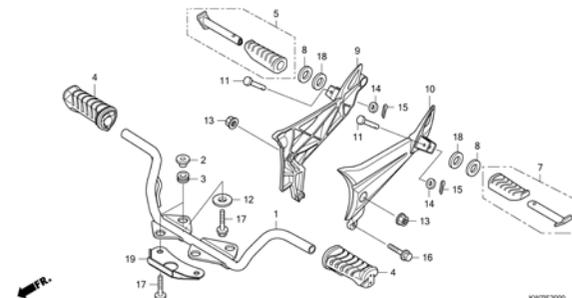


KELOMPOK RANGKA

<p>F-31 STAND</p> <p>FR.</p> <p>KWZF3100</p>	<p>F-32 SWINGARM</p> <p>FR.</p> <p>KWZF3300</p>	<p>F-33 REAR CUSHION</p> <p>FR.</p> <p>9-3300</p>
<p>F-34 REAR FENDER</p> <p>FR.</p> <p>KWZF3400</p>	<p>F-36-10 REAR COMBINATION LIGHT</p> <p>FR.</p> <p>KWZF3610</p>	<p>F-38 WIRE HARNESS</p> <p>FR.</p> <p>KWZF3800</p>
<p>F-39 FRAME BODY</p> <p>FR.</p> <p>KWZ33900</p>	<p>F-44 FRONT TOP COVER / POSITION LIGHT</p> <p>FR.</p> <p>KWZF4400</p>	<p>F-44-10 MAIN PIPE COVER</p> <p>FR.</p> <p>KWZF4410</p>

KELOMPOK RANGKA


F-45

BODY COVER

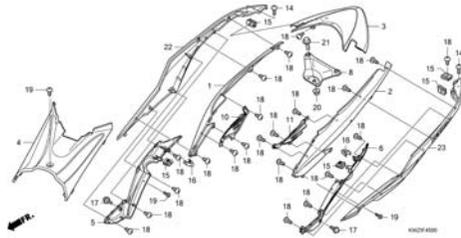


F-48

TOOLS

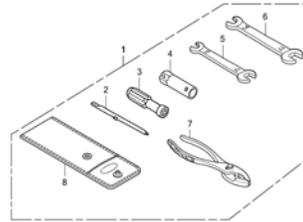


F-49

CAUTION LABEL

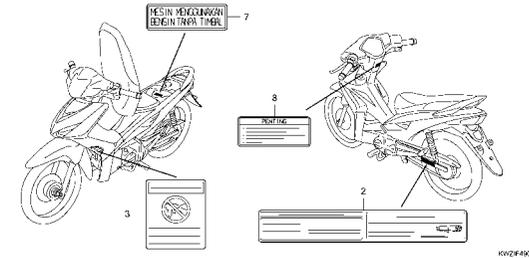

F-50


MARK / EMBLEM

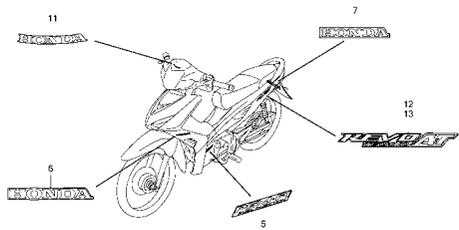

3

E - 2

Cylinder Head Cover

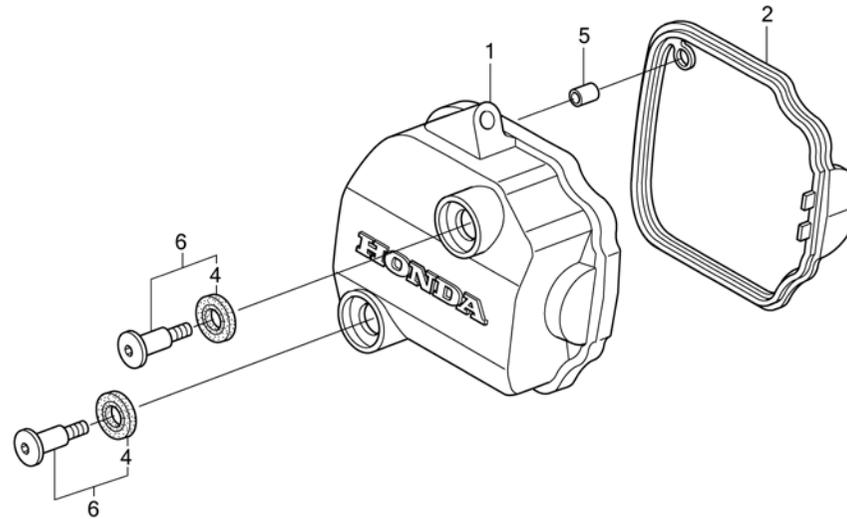


KWZIE0200

2

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1 COVER, CYLINDER HEAD	0,1	1	12310-KWZ-900	COVER COMP, CYLINDER HEAD	1	
2 GASKET, CYLINDER HEAD COVER	0,1	2	12391-KWB-600	GASKET, HEAD COVER	1	
			12391-KWW-600	GASKET, HEAD COVER	1	
		4	90543-MV9-671	RUBBER, MOUNTING	2	
		5	90701-KFM-901	DOWEL PIN, SPECIAL, 8X14	1	
		6	9001A-KWC-900	BOLT, HEAD COVER ASSY	2	

E - 3 Cylinder Head

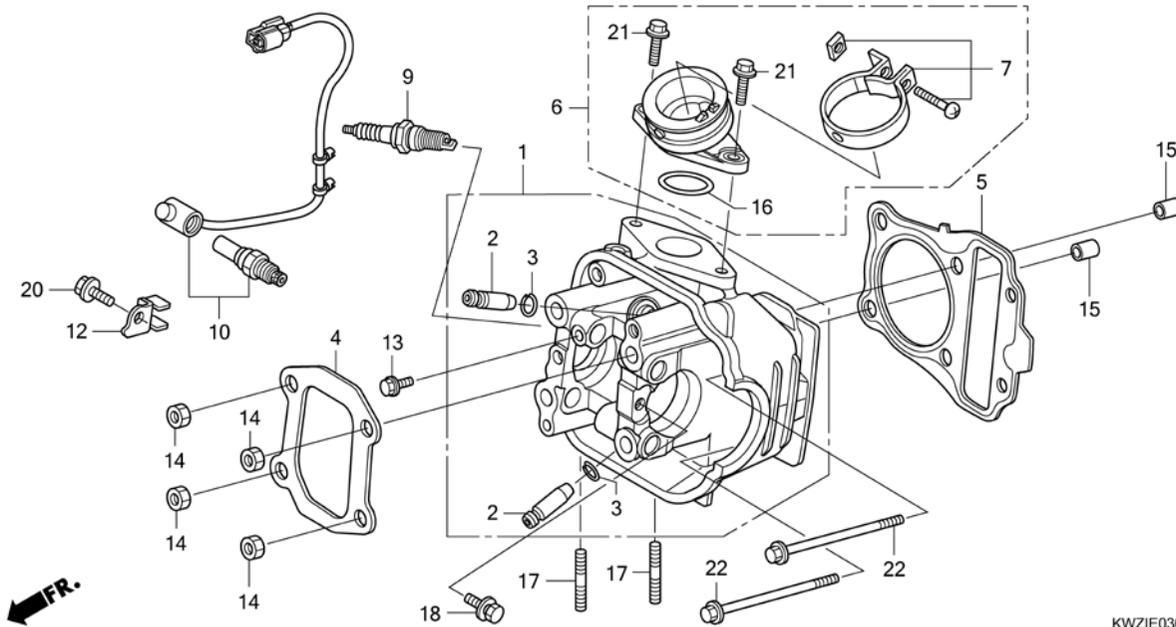


KWZIE0300

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	HEAD, CYLINDER	1,8	1	1220A-KWZ-750	HEAD SUB ASSY., CYLINDER	1	
	.TERMASUK: Penyetelan dan skir klep		2	12204-KVY-901	GUIDE, VALVE (OS).....	2	
			3	12206-KPL-900	CLIP, VALVE GUIDE	2	
2	GUIDE, INTAKE VALVE(SATU)	1,8	4	12212-KWZ-900	PLATE, CYLINDER HEAD	1	
	.TERMASUK: Reaming		5	12251-KWB-601	GASKET, CYLINDER HEAD	1	
	.TERMASUK: Penyetelan dan skir klep			12251-KWZ-901	GASKET, CYLINDER HEAD.....	1	
	GUIDE, EXHAUST VALVE(SATU)	1,8	6	1620A-KWZ-750	INSULATOR ASSY., THROTTLE BODY.....	1	
	.TERMASUK: Reaming		7	16217-KPH-700	BAND, INSULATOR	1	
	.TERMASUK: Penyetelan dan skir klep		9	31916-KWB-601	PLUG, SPARK (CPR6EA-9S).....	1	
	GUIDE, VALVE : UNTUK 1 KENDARAAN	2,1		31926-KWB-601	PLUG, SPARK (U20EPR9S)	(1)	
	.TERMASUK: Reaming		10	36532-KWZ-901	SENSOR, OXYGEN	1	
	.TERMASUK: Penyetelan dan skir klep		12	36535-KWB-600	GUARD, OXYGEN SENSOR	1	
5	GASKET, CYLINDER HEAD.....	0,9	13	90002-KWB-600	BOLT, FLANGE, 5X12	1	
			14	90201-GCC-000	NUT, HEX., 7MM	4	
6	INSULATOR, THROTTLE BODY	0,4	15	90701-KFM-901	DOWEL PIN, SPECIAL, 8X14	2	
9	PLUG, SPARK.....	0,1	16	91304-KPH-700	O-RING, 29X2.4	1	
10	SENSOR, OXYGEN.....	0,6	17	92900-08032-1E	BOLT, STUD, 8X32	2	
			18	93404-06012-00	BOLT-WASHER, 6X12	1	
			20	95701-06014-0	BOLT, FLANGE, 6X14	1	
			21	95701-06020-00	BOLT, FLANGE, 6X20	2	
			22	96001-06100-0	BOLT, FLANGE, 6X100	2	

E - 4

Camshaft / Valve

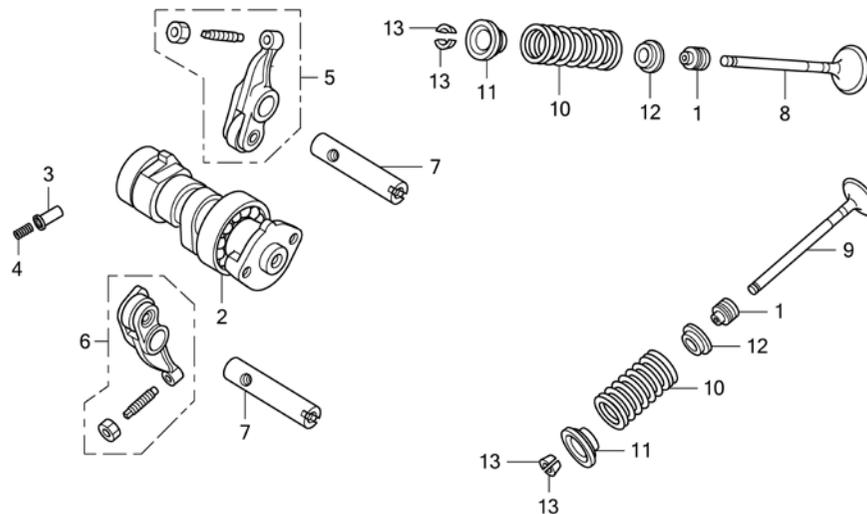


FR.

KWZIE0400


Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
2	CAMSHAFT	1,0	1	12209-GB4-682	SEAL, VALVE STEM	2	
	.TERMASUK: Penyetelan klep		2	14100-KWZ-901	CAMSHAFT COMP	1	
5	ARM, INTAKE VALVE ROCKER(SATU)	1,0	3	14125-KVY-900	PLUNGER, CAM SETTING	1	
	.TERMASUK: Penyetelan klep		4	14126-KPG-T00	SPRING, PLUNGER	1	
6	ARM, EXHAUST VALVE ROCKER (SATU)	1,0	5	1443A-KWB-920	ARM ASSY., IN. VALVE ROCKER	1	
	.TERMASUK: Penyetelan klep		6	1444A-KWB-920	ARM ASSY., EX. VALVE ROCKER	1	
	ARM, VALVE ROCKER :UNTUK 1 KENDARAAN	1,0	7	14451-KWB-600	SHAFT, ROCKER ARM	2	
	.TERMASUK: Penyetelan klep		8	14711-KWB-600	VALVE, IN.	1	
8	VALVE, INTAKE(SATU)	1,4	9	14721-KVY-900	VALVE, EX.	1	
	.TERMASUK: skir klep		10	14751-KWB-921	SPRING, VALVE	2	
9	VALVE, EXHAUST(SATU)	1,4	11	14771-GB4-680	RETAINER, VALVE SPRING	2	
	.TERMASUK: skir klep		12	14775-KVY-900	SEAT, VALVE SPRING	2	
	VALVE :UNTUK 1 KENDARAAN	1,6	13	14781-MA6-000	COTTER, VALVE	4	
	.TERMASUK: skir klep						
10	(1,9,10,11) SPRING DAN/ATAU STEM SEAL, INTAKE VALVE(SATU)	1,2					
	SPRING DAN/ATAU STEM SEAL, EXHAUST VALVE(SATU)	1,2					
	SPRING DAN/ATAU STEM SEAL, VALVE :UNTUK 1 KENDARAAN	1,3					

E - 5 Cam Chain / Tensioner

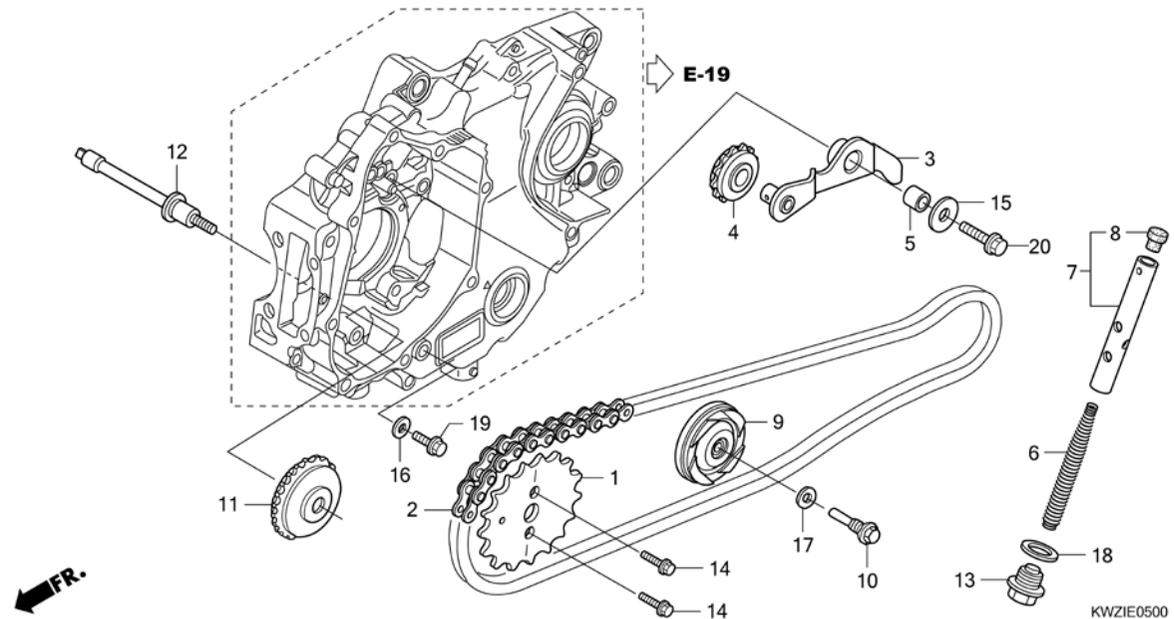

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	SPROCKET, CAM.....	0,4	1	14321-KWB-600	SPROCKET, CAM (32T)	1	
2	CHAIN, CAM	1,8	2	14401-KWB-920	CHAIN, CAM (90L).....	1	
3	ARM, CAM CHAIN TENSIONER	0,9	3	14500-KWB-600	ARM COMP., CAM CHAIN TENSIONER	1	
4	ROLLER(S), CAM CHAIN TENSIONER	0,9	4	14502-086-001	ROLLER, CAM CHAIN TENSIONER	1	
			5	14531-KWB-600	COLLAR, CAM CHAIN TENSIONER.....	1	
7	(6,8)		6	14541-GB4-682	SPRING, CAM CHAIN TENSIONER.....	1	
	ROD, CAM CHAIN TENSIONER PUSH	0,9	7	1455A-KTL-GB0	PUSH ROD ASSY., TENSIONER.....	1	
9	ROLLER, CAM CHAIN GUIDE	1,0	8	14566-086-031	HEAD, CAM CHAIN TENSIONER PUSH	1	
			9	14610-KWB-600	ROLLER COMP., CAM CHAIN GUIDE	1	
11	SPROCKET, CAM CHAIN GUIDE	3,5	10	14615-KFL-851	PIN, GUIDE ROLLER.....	1	
	.TERMASUK: Pelepasan dan pemasangan mesin		11	14670-KWB-600	SPROCKET COMP., CAM CHAIN	1	
12	BOLT, CAM CHAIN GUIDE ROLLER.....	3,5	12	14675-KWB-600	SPINDLE, CAM CHAIN GUIDE.....	1	
	.TERMASUK: Pelepasan dan pemasangan mesin		13	90081-035-000	BOLT, SEALING, 14MM	1	
			14	90083-KWB-8A0	BOLT, KNOCK, 5MM	2	
			15	90404-KWB-600	WASHER, 8.5X26X2.3	1	
			16	90463-ML7-000	WASHER, SEALING, 6.5MM	1	
			17	90475-KWB-600	WASHER, 8MM	1	
			18	90544-KF0-000	WASHER, SEALING, 14MM	1	
			19	95701-06018-01	BOLT, FLANGE, 6X18	1	
			20	95701-08025-00	BOLT, FLANGE, 8X25	1	

E- 6 Cylinder

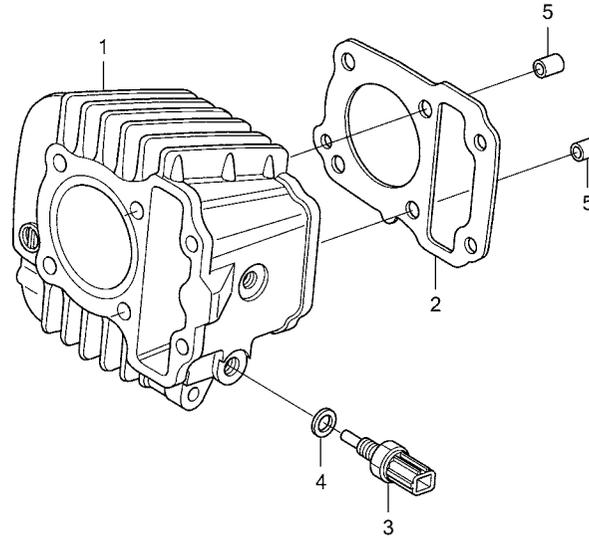


FR.

KWZIE0600

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1 CYLINDER.....	1,2	1	12100-KWZ-750	CYLINDER COMP	1	
2 GASKET, CYLINDER	1,1	2	12191-KWB-921	GASKET, CYLINDER	1	
3 SENSOR, THERMO	0,4	3	37750-KPH-701	SENSOR ASSY., THERMOSTAT OIL	1	
		4	90443-MB0-000	WASHER, SEALING, 10MM	1	
		5	90701-KFM-901	DOWEL PIN, SPECIAL, 8X14	2	


E - 7 Right Crankcase Cover

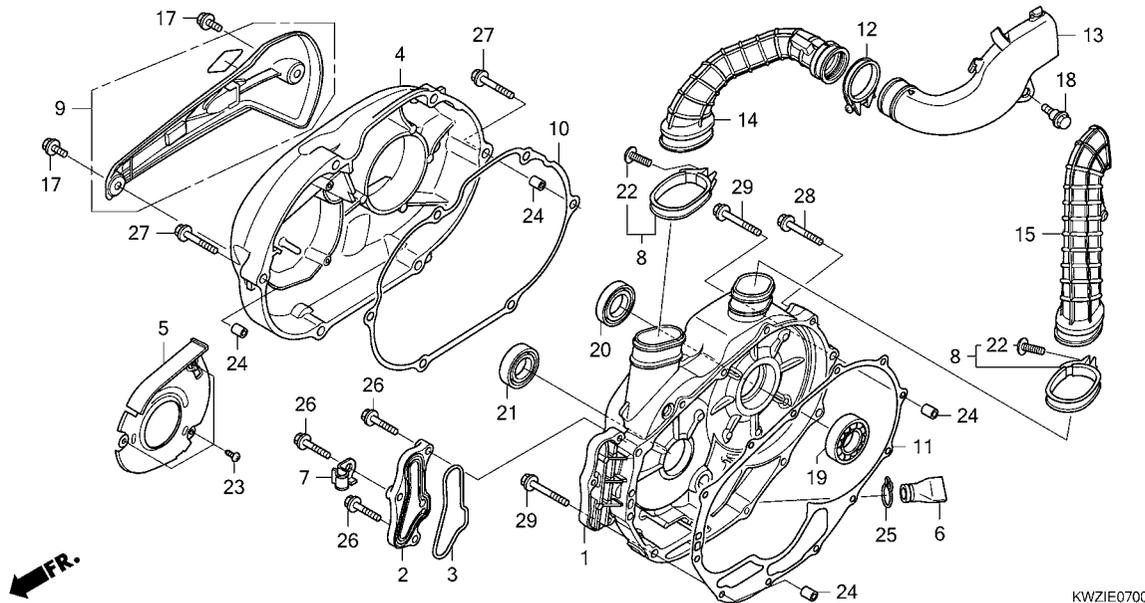

KWZIE0700

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	COVER, CLUTCH.....	1,4	1	11321-KWZ-900	COVER., CLUTCH.....	1	
2	(3)		2	11322-KWZ-900	COVER, OIL COOLER	1	
	OIL COOLER COVER ATAU GASKET ..	0,4	3	11323-KWZ-901	GASKET, OIL COOLER COVER	1	
4	COVER, CRANKCASE :RIGHT	0,2	4	11331-KWZ-900	COVER, R.....	1	
			5	11332-KWZ-900	DUCT, AIR FEED	1	
9	EMBLEM, SIDE COVER :RIGHT	0,1					
10	GASKET, CRANKCASE COVER : RIGHT	0,1	6	1134B-KVY-900	TUBE ASSY, DRAIN	1	
			7	11346-KTR-940	CLAMPER A, OIL TEMP SENSOR.....	1	
			8	11346-KWZ-900	BAND, CLUTCH COVER DUCT.....	2	
11	GASKET, CLUTCH COVER BASE	1,2	9	11370-KWZ-900	EMBLEM COMP., R. COVER.....	1	
13	DUCT A, AIR INTAKE.....	0,5	10	11394-KWZ-900	GASKET, R. CRANKCASE COVER.....	1	
14	DUCT B, AIR INTAKE	0,5					
15	DUCT, AIR OUTLET	0,3	11	11395-KWZ-900	GASKET, CLUTCH COVER	1	
19	BEARING, DRIVESHAFT :RIGHT	1,4	12	17254-KVB-T00	BAND, CONNECTING TUBE (40)	1	
20	OIL SEAL, DRIVESHAFT.....	1,3	13	19741-KWZ-900	DUCT A, R. COVER INLET	1	
21	OIL SEAL, CRANKSHAFT :RIGHT.....	1,3	14	19742-KWZ-900	DUCT B, R. COVER INLET	1	
			15	19743-KWZ-900	DUCT, R. COVER OUTLET	1	
			17	90005-GHB-610	BOLT, FLANGE, 6X12	2	
			18	90114-126-900	BOLT, FLANGE, 6MM.....	1	
			19	91005-KWZ-901	BEARING, RADIAL BALL, 6204	1	
				91102-GE0-003	BEARING, RADIAL BALL, 6204	1	
			20	91201-KWZ-902	OIL SEAL, 30X42X5	1	

E - 7 Right Crankcase Cover

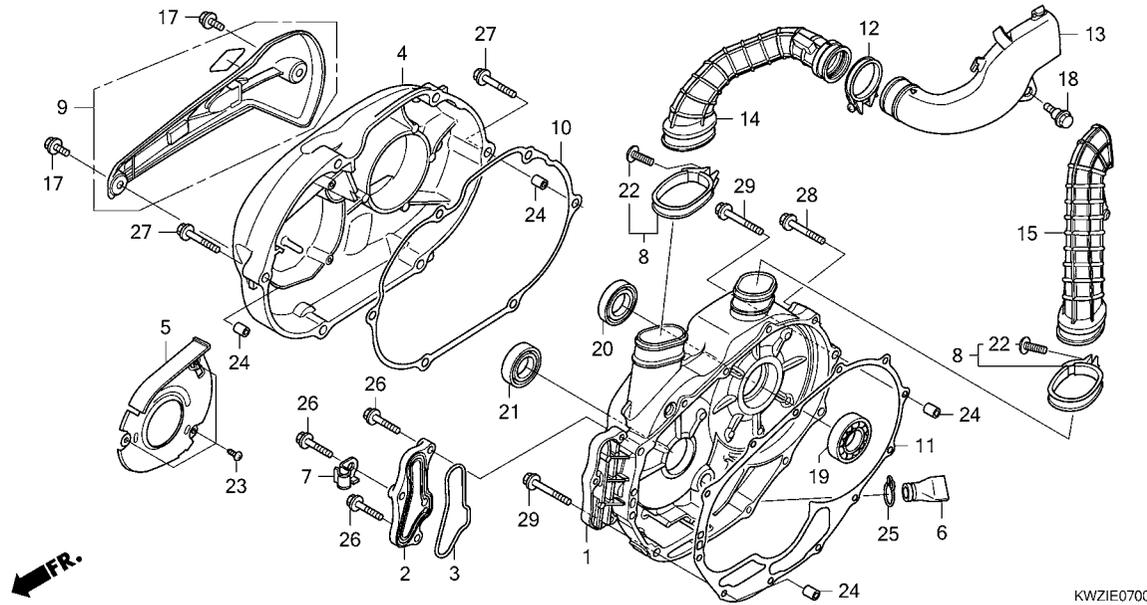


KWZIE0700

2

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
		21	91203-459-771	OIL SEAL, 27X37X7.....	1	
		22	93500-04025-0G	SCREW, PAN, 4X25	2	
		23	93903-34120	SCREW, TAPPING, 4X8	3	
		24	94301-08141	DOWEL PIN, 8X14	4	
		25	95002-80001	CLIP, TUBE (C12)	1	
		26	96001-06025-00	BOLT, FLANGE, 6X25	3	
		27	96001-06035-00	BOLT, FLANGE, 6X35	6	
		28	96001-06040-00	BOLT, FLANGE, 6X40	10	
		29	96001-06045-00	BOLT, FLANGE, 6X45	2	


E - 8
Generator

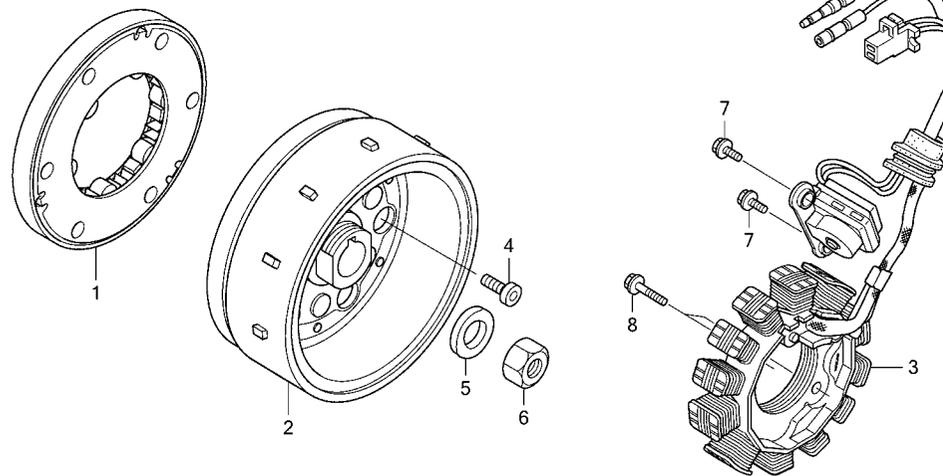

KWZIE0800

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
2	(1)		1	28120-KPH-701	CLUTCH ASSY., ONE WAY	1	
	ROTOR ATAU FLYWHEEL.....	0,8		28120-KWB-921	CLUTCH ASSY., ONE WAY	1	
3	STATOR.....	0,8	2	31110-KWW-711	FLYWHEEL COMP	1	
			3	31120-KWZ-902	STATOR COMP.....	1	
			4	90085-KTC-920	BOLT, SOCKET, 6X14	6	
			5	90426-KVB-900	WASHER, SPECIAL, 14MM.....	1	
			6	94001-14000-0S	NUT, HEX., 14MM	1	
			7	96001-06016-00	BOLT, FLANGE, 6X16	2	
			8	96001-06022-00	BOLT, FLANGE, 6X22.....	2	


E - 11 Oil Pump

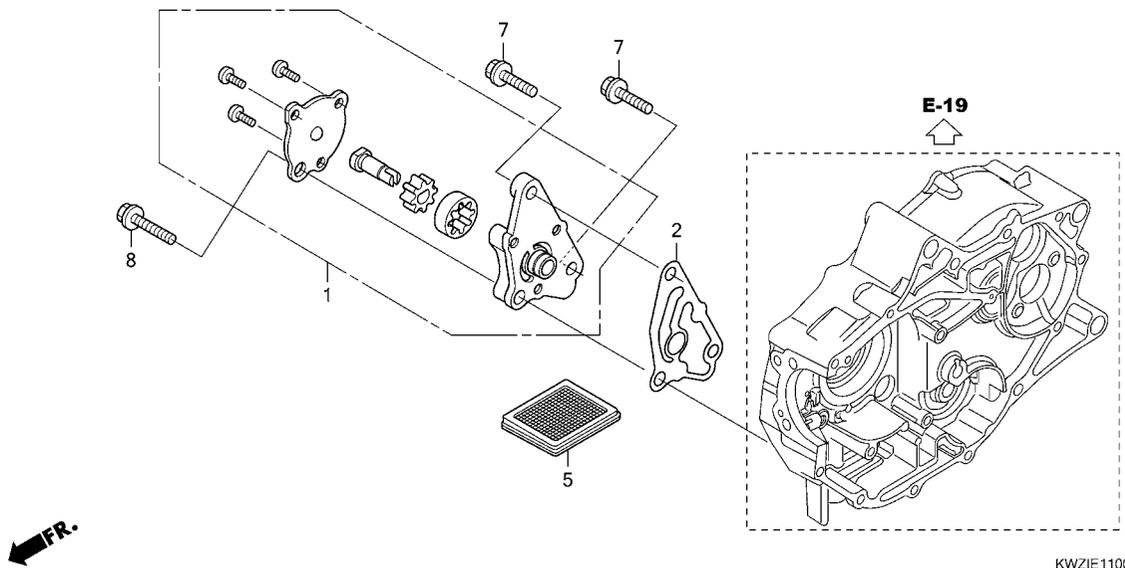

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1 (2) PUMP ASSY., OIL.....	1,3	1	15100-KWB-600	PUMP ASSY., OIL.....	1	
5 SCREEN, OIL FILTER.....	1,2	2	15119-KWB-600	GASKET, OIL PUMP BODY.....	1	
		5	15421-035-010	SCREEN, OIL FILTER.....	1	
		7	96001-06016-00	BOLT, FLANGE, 6X16.....	2	
		8	96001-06022-00	BOLT, FLANGE, 6X22.....	1	

E - 12

Starter Motor

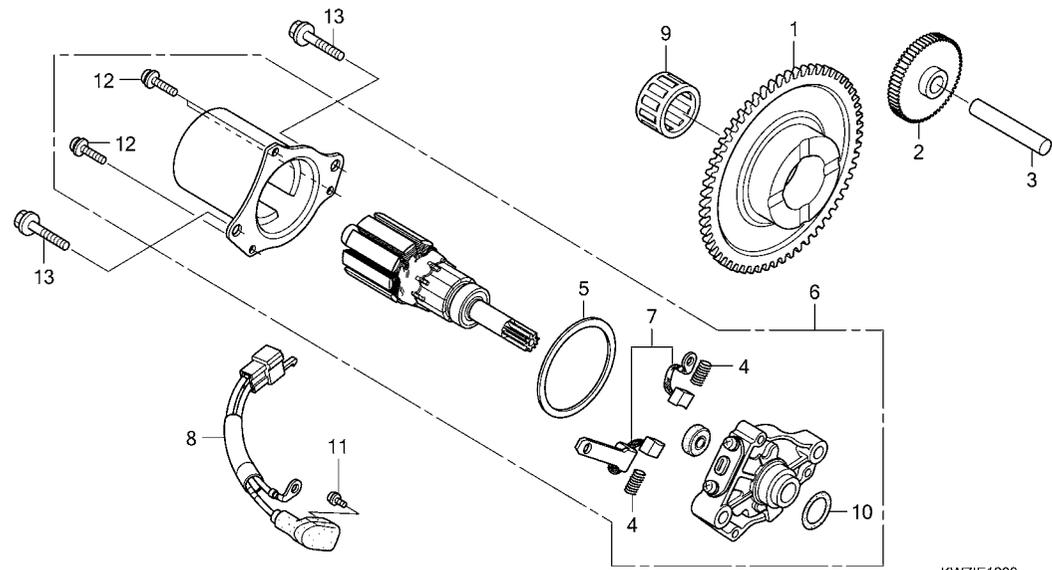


KWZIE1200

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	(9)		1	28110-KWB-920	GEAR., STARTER DRIVEN.....	1	
	GEAR, STARTER DRIVEN.....	0,8	2	28130-KWB-920	GEAR COMP., STARTER REDUCTION	1	
2	(3)		3	28132-KPH-900	SHAFT, REDUCTION GEAR	1	
	GEAR, STARTER REDUCTION.....	0,5	4	31204-KG8-004	SPRING, CARBON BRUSH	2	
			5	31206-GW3-004	PACKING	1	
6	MOTOR, STARTING	0,6	6	31210-KWB-921	MOTOR UNIT, STARTER	1	
7	TERMINAL, BRUSH(STARTER)	0,8	7	32101-GW3-780	BRUSH SET	1	
8	SUB HARNESS, STARTER.....	0,3	8	32105-KWZ-840	SUB CORD, STARTER MOTOR	1	
			9	91005-KWB-921	BEARING, NEEDLE, 20X26X18.2	1	
			10	91309-KEE-630	O-RING	1	
			11	93892-04006-08	SCREW-WASHER, 4X6	1	
			12	93892-05016-08	SCREW-WASHER, 5X16	3	
			13	96001-06032-00	BOLT, FLANGE, 6X32	2	

E - 13


Left Crankcase Cover

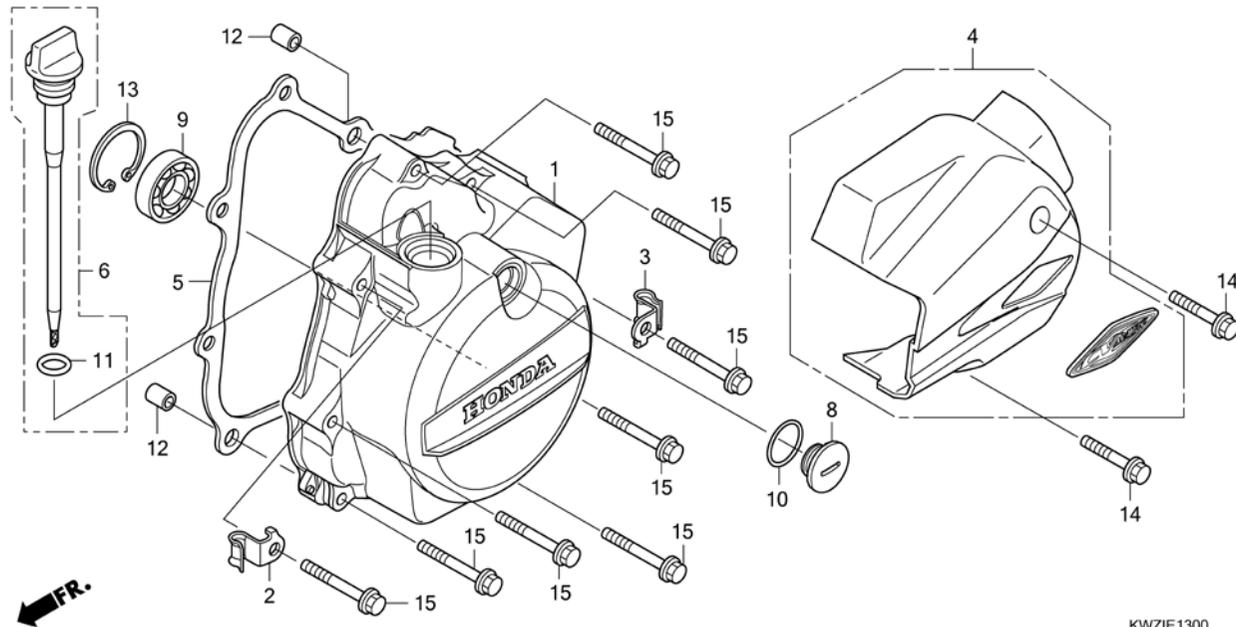

KWZIE1300

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1 COVER, CRANKCASE :LEFT.....	0,7	1	11341-KWZ-900	COVER, L. CRANKCASE.....	1	
4 COVER, CRANKCASE :LEFT REAR....	0,1	2	11346-KTR-940	CLAMPER A, OIL TEMP SENSOR.....	1	
5 GASKET, CRANKCASE COVER : LEFT	0,5	3	11347-KTR-940	CLAMPER B, OIL TEMP SENSOR	1	
9 BEARING, CRANKCASE COVER : LEFT	0,8	4	11360-KWZ-900	COVER COMP., L. RR	1	
		5	11396-KWZ-900	GASKET, L. CRANKCASE COVER	1	
		6	1565A-KWZ-750	GAUGE ASSY, OIL LEVEL	1	
		8	90084-GN5-830	CAP, A.C. GENERATOR	1	
		9	91008-KVY-901	BEARING, RADIAL BALL, 6001	1	
		10	91303-377-001	O-RING, 13.8X2.5	1	
		11	91307-035-001	O-RING, 18X3	1	
		12	94301-08141	DOWEL PIN, 8X14	2	
		13	94520-30000	CIRCLIP, INTERNAL, 30MM	1	
		14	96001-06035-00	BOLT, FLANGE, 6X35	2	
		15	96001-06040-00	BOLT, FLANGE, 6X40	8	


E - 15 Kick Starter Spindle

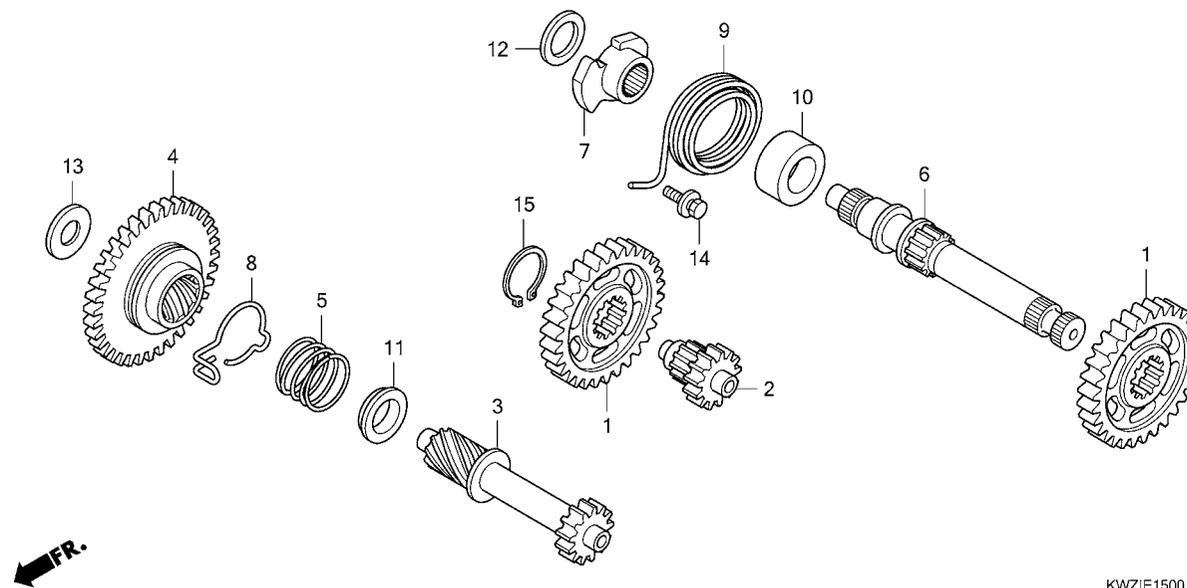

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	GEAR, KICK DRIVE.....	3,5	1	28231-KWZ-900	GEAR, KICK DRIVE (35T)	2	
	.TERMASUK: Pelepasan dan pemasangan mesin		2	28232-KWZ-900	SHAFT, KICK DRIVEN (16T).....	1	
			3	28233-KWZ-900	SHAFT, KICK IDLE (13T)	1	
2	SHAFT, KICK DRIVEN.....	3,5	4	28234-KWZ-900	GEAR A, KICK IDLE (37T)	1	
	.TERMASUK: Pelepasan dan pemasangan mesin		5	28242-KWZ-900	SPRING, KICK IDLE	1	
3	SHAFT, KICK DRIVEN.....	3,5	6	28251-KWZ-900	SPINDLE, KICK STARTER	1	
	.TERMASUK: Pelepasan dan pemasangan mesin		7	28262-041-731	RETAINER, KICK SPRING	1	
			8	28271-KWZ-900	SPRING, FRICTION	1	
			9	28281-KWZ-900	SPRING, KICK RETURN	1	
4	GEAR, KICK STARTER FIRST IDLE	1,2	10	28282-KWZ-900	COLLAR, KICK SPRING	1	
6	SPINDLE, KICK STARTER.....	3,5					
	.TERMASUK: Pelepasan dan pemasangan mesin		11	90402-KWZ-900	SEAT, SPRING	1	
			12	90412-KPH-900	WASHER, SPECIAL, 12X23	1	
9	SPRING, KICK STARTER RETURN	3,5	13	90608-072-001	WASHER, 12MM	1	
	.TERMASUK: Pelepasan dan pemasangan mesin		14	93404-06012-00	BOLT-WASHER, 6X12	1	
			15	94510-20001	CIRCLIP, EXTERNAL, 20MM	1	

E - 16


Drive Face

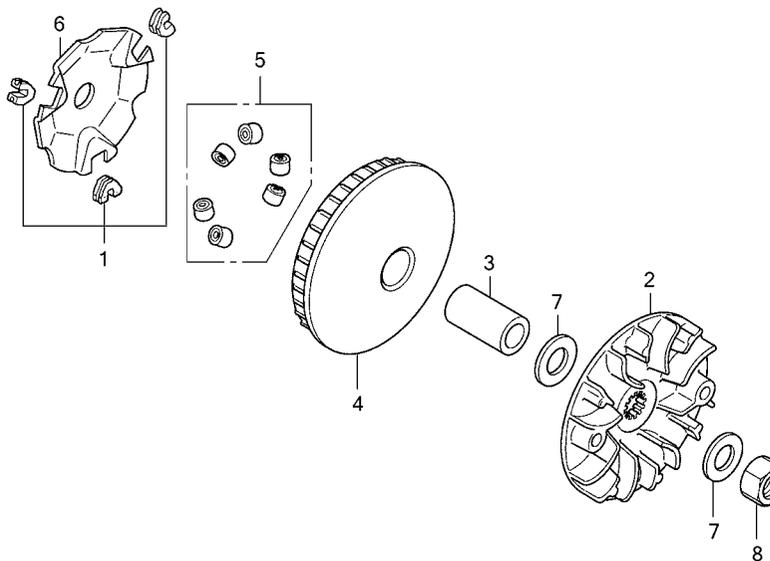

KWZIE1600

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
2 FACE, DRIVE	0,3	1	22011-GCC-770	PIECE, SLIDE	3	
4 (3) FACE, MOVABLE DRIVE	0,3	2	22102-KWZ-900	FACE, DRIVE	1	
5 (2) ROLLER, WEIGHT.....	0,3	3	22105-GGE-900	BOSS, DRIVE FACE	1	
		4	22110-KWZ-900	FACE COMP., MOVABLE DRIVE	1	
		5	22123-KWZ-305	ROLLER SET, WEIGHT	1	
		6	22131-KVB-900	PLATE, RAMP.....	1	
		7	90426-KWZ-900	WASHER, THRUST, 15.1MM	2	
		8	94030-14200	NUT, HEX., 14MM	1	


E - 17
Driven Face

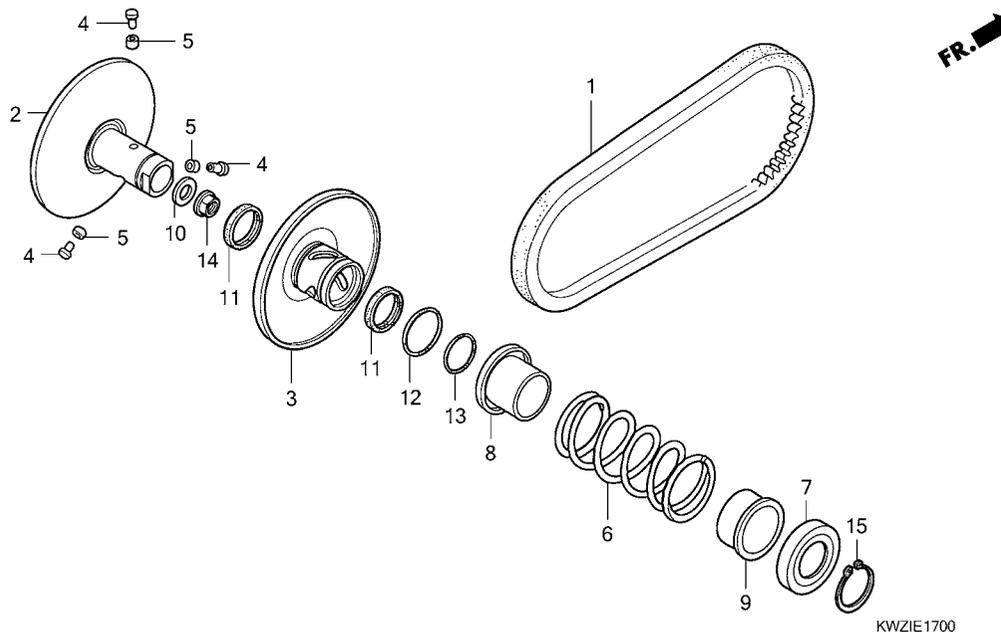

KWZIE1700

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	BELT, DRIVE.....	0,3	1	23100-KWZ-901	BELT, DRIVE	1	
2	(4,5,10) FACE, DRIVEN.....	0,4	2	23210-KWZ-900	FACE COMP., DRIVEN	1	
3	(11,12,13) FACE, MOVABLE DRIVEN.....	0,4	3	23220-KWZ-900	FACE COMP, MOVABLE DRIVEN	1	
			4	23225-KSY-900	PIN, ROLLER GUIDE	3	
			5	23226-KVB-900	ROLLER, GUIDE	3	
6	(8,9) SPRING, DRIVEN FACE	0,4	6	23233-KWZ-900	SPRING, DRIVEN FACE.....	1	
			7	23236-KWZ-900	SEAT, DRIVEN FACE SPRING	1	
			8	23237-GCC-C50	COLLAR, SEAL	1	
			9	23238-GCC-000	COLLAR, SPRING	1	
			10	90439-KWZ-900	WASHER, 12X24X2.3	1	
			11	91211-GFC-771	OIL SEAL, 34X39X3.....	2	
			12	91351-GR1-000	O-RING, 38.5X2	1	
			13	91351-642-000	O-RING, PINION CAP.....	1	
			14	94050-12001	NUT, FLANGE, 12MM	1	
			15	94510-34000	CIRCLIP, EXTERNAL, 34MM.....	1	

E - 17 - 10 Transmission

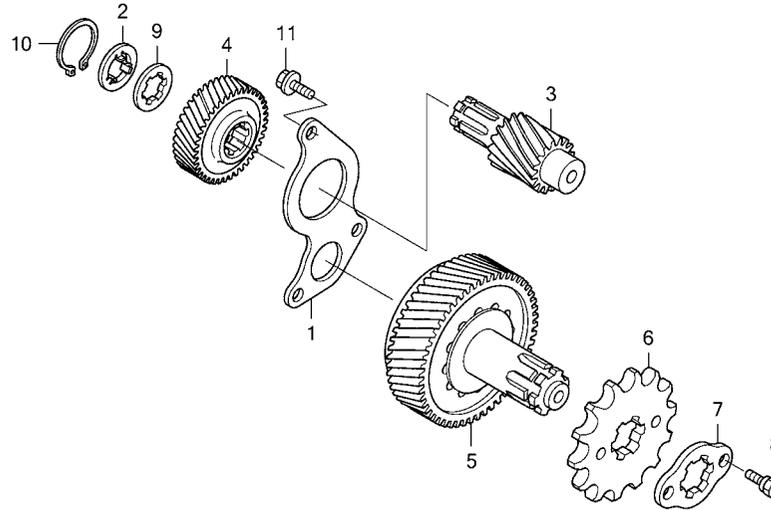


FR.

KWZIE1710

2

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
3 COUNTERSHAFT, TRANSMISSION	3,5	1	11108-KWZ-900	PLATE, BEARING SETTING	1	
.TERMASUK: Pelepasan dan pemasangan mesin		2	23217-KWZ-900	SET RING, 17MM	1	
		3	23421-KWZ-900	SHAFT, COUNTER (16T)	1	
4 GEAR, COUNTER.....	1,3	4	23422-KWZ-900	GEAR, COUNTER (40T)	1	
		5	23430-KWZ-900	GEAR COMP., FINAL (52T)	1	
5 SHAFT, FINAL GEAR	3,5	6	23801-KTE-910	SPROCKET, DRIVE (14T)	1	
.TERMASUK: Pelepasan dan pemasangan mesin		7	23811-KR3-600	PLATE A2, FIXING	1	
		8	90084-041-000	BOLT, DRIVE SPROCKET FIXING	2	
6 SPROCKET, DRIVE.....	0,3	9	90462-KFL-851	WASHER B, SPLINE, 17MM	1	
		10	94510-17000	CIRCLIP, EXTERNAL, 17MM	1	
		11	95701-06012-00	BOLT, FLANGE, 6X12	3	

E - 17 - 20
Clutch

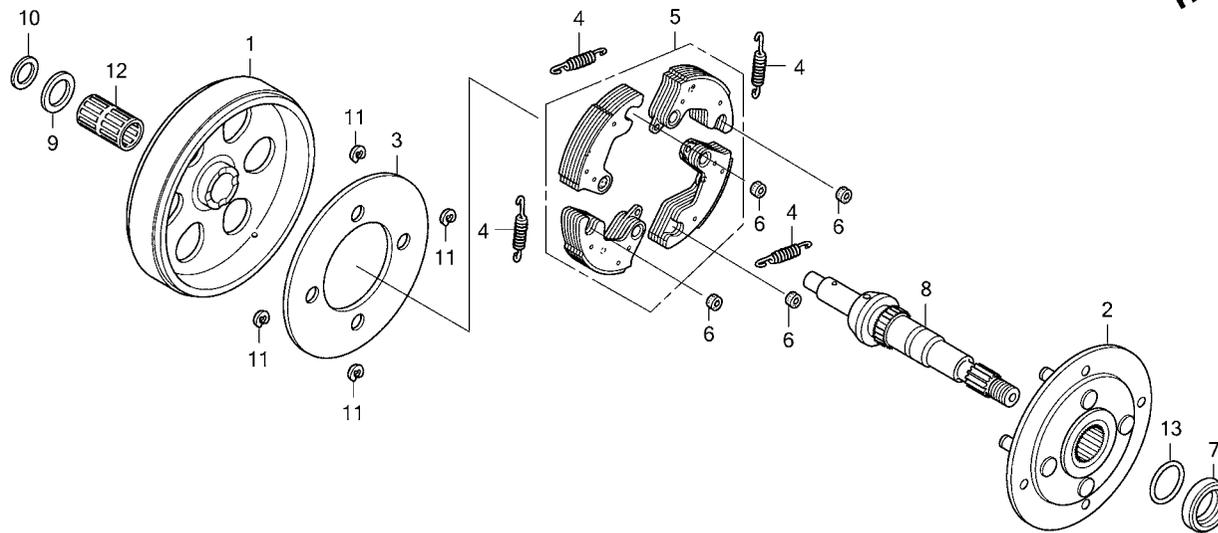


KWZIE1720

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	(9,10,12) OUTER, CLUTCH.....	1,2	1	22100-KWZ-900	OUTER COMP., CLUTCH.....	1	
2	PLATE, CLUTCH DRIVE.....	1,5	2	22350-KWZ-900	PLATE COMP., DRIVE.....	1	
3			3	22361-KWZ-900	PLATE, CLUTCH SIDE.....	1	
4	(4,6,11) WEIGHT SET, CLUTCH.....	1,4	4	22401-KWZ-901	SPRING, CLUTCH.....	4	
5			5	22535-KWZ-305	WEIGHT SET, PRIMARY CLUTCH.....	1	
6			6	22804-GB2-880	RUBBER, CLUTCH DAMPER.....	4	
7			7	23241-KWZ-900	GUIDE, OIL SEAL.....	1	
8	SHAFT, DRIVE.....	1,3	8	23411-KWZ-900	SHAFT, DRIVE.....	1	
9			9	90401-KWZ-900	WASHER, 16.1X27X2.3.....	1	
10			10	90412-KPH-901	WASHER, SPECIAL, 12X23.....	1	
11			11	90605-166-720	CIRCLIP, 7MM.....	4	
12			12	91031-KWZ-901	BEARING, NEEDLE, 16X20X34.....	1	
13			13	91302-KWZ-901	O-RING, 18.5X1.9.....	1	

E - 19


Crankcase

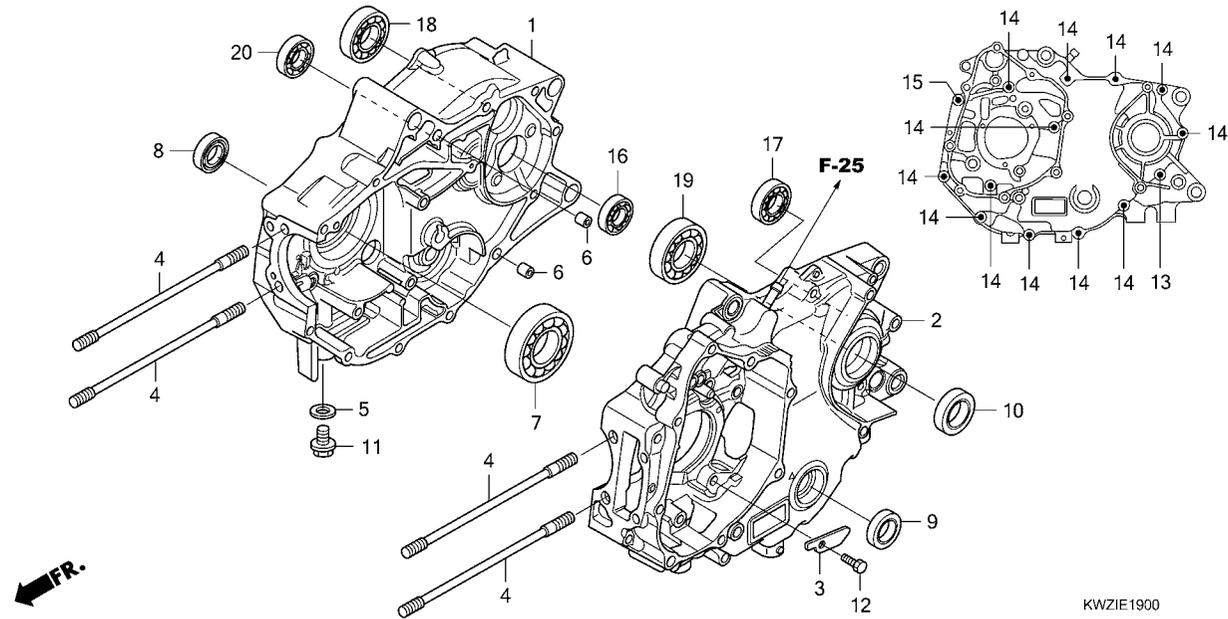

KWZIE1900

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	CRANKCASE :RIGHT	4,6	1	11100-KWZ-900	CRANKCASE COMP., R.	1	
	.TERMASUK: Pelepasan dan pemasangan mesin		2	11200-KWZ-900	CRANKCASE COMP., L	1	
2	CRANKCASE :LEFT	3,8	3	11218-KWB-600	PLATE, OIL STOPPER	1	
	.TERMASUK: Pelepasan dan pemasangan mesin		4	90031-KWB-600	BOLT, STUD, 7X180.5	4	
	CRANKCASE :BOTH	5,0	5	90407-259-000	PACKING, DRAIN COCK, 12.5X20	1	
	.TERMASUK: Pelepasan dan pemasangan mesin		6	90703-HC4-001	DOWEL PIN, 10X14	2	
7	BEARING, CRANKSHAFT :RIGHT	4,1	7	91001-KWZ-901	BEARING, RADIAL BALL, 6305U	1	
9	OIL SEAL, GEARSHIFT SPINDLE	3,6	8	91202-KWZ-901	OIL SEAL, 24.8X34X8	1	
			9	91204-MC7-003	OIL SEAL, 16X28X7	1	
			10	91216-KGH-902	OIL SEAL, 20X34X7	1	
16	BEARING, FINAL GEAR SHAFT : RIGHT	3,6	11	92800-12000	BOLT, DRAIN PLUG, 12MM	1	
	.TERMASUK: Pelepasan dan pemasangan mesin		12	93101-KWB-8A0	BOLT, HEX., 6X14	1	
			13	96001-06040-00	BOLT, FLANGE, 6X40	1	
17	BEARING, COUNTERSHAFT :LEFT	3,6	14	96001-06050-00	BOLT, FLANGE, 6X50	12	
	.TERMASUK: Pelepasan dan pemasangan mesin		15	96001-06065-00	BOLT, FLANGE, 6X65	1	
	BEARING, COUNTERSHAFT :BOTH	3,8	16	HB6201	BEARING, RADIAL BALL, 6201	1	
	.TERMASUK: Pelepasan dan pemasangan mesin		17	HB6202	BEARING, RADIAL BALL, 6202	1	
			18	91002-KWZ-751	BEARING, RADIAL BALL, 6202	(1)	
			18	HB6203	BEARING, RADIAL BALL, 6203	1	
				96100-62030-01	BEARING, RADIAL BALL, 6203	(1)	
			19	HB6204	BEARING, RADIAL BALL, 6204	1	
			20	96100-63010-00	BEARING, RADIAL BALL, 6301	1	
				91001-KWZ-751	BEARING, RADIAL BALL, 6301U	(1)	

E - 19 Crankcase

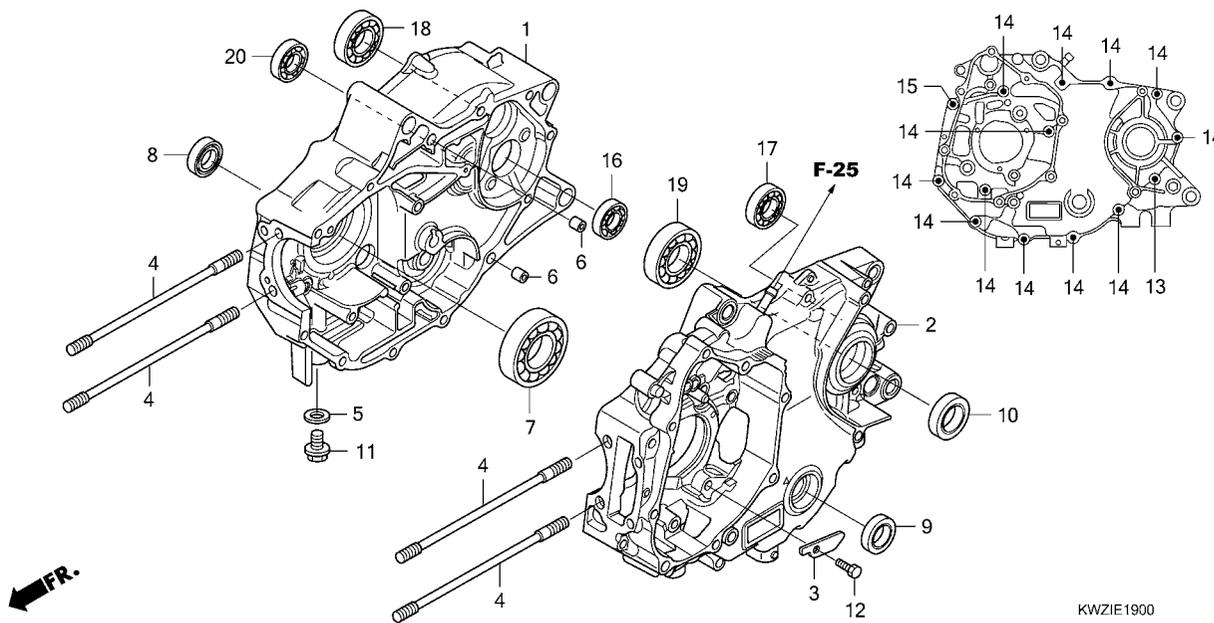


KWZIE1900

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
18	BEARING, COUNTERSHAFT :RIGHT .. .TERMASUK: Pelepasan dan pemasangan mesin	3.6					
19	BEARING, FINAL GEAR SHAFT :LEFT .TERMASUK: Pelepasan dan pemasangan mesin	3.6					
	BEARING, FINAL GEAR SHAFT :BOTH .TERMASUK: Pelepasan dan pemasangan mesin	3.8					
20	BEARING, DRIVESHAFT :LEFT	1.5					

E - 20

Crankshaft/ Piston

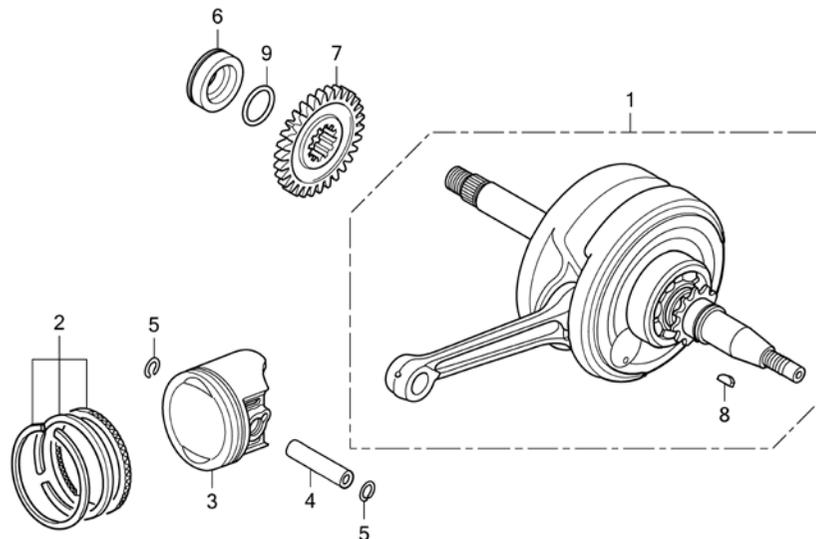


KWZIE2000

2

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	CRANKSHAFT	4,2	1	1300A-KWZ-750	CRANKSHAFT ASSY	1	
	.TERMASUK: Pelepasan dan pemasangan mesin		2	13011-KWZ-305	RING SET, PISTON (STD)	1	
3	(2,4,5) RING, PISTON DAN/ATAU PISTON (SATU)	1,3		13021-KWZ-305	RING SET, PISTON (0.25)	(1)	13013KVBT00
				13031-KWZ-305	RING SET, PISTON (0.50)	(1)	
				13041-KWZ-305	RING SET, PISTON (0.75)	(1)	
				13051-KWZ-305	RING SET, PISTON (1.00)	(1)	
7	GEAR, KICK IDLE	1,3	3	13101-KWZ-900	PISTON	1	
				13102-KWZ-305	PISTON (0.25)	(1)	
				13103-KWZ-305	PISTON (0.50)	(1)	
				13104-KWZ-305	PISTON (0.75)	(1)	
				13105-KWZ-305	PISTON (1.00)	(1)	
			4	13111-087-001	PIN, PISTON	1	
			5	13115-GN5-911	CLIP, PISTON PIN, 13MM	2	
			6	13312-KWZ-900	COLLAR, R. CRANK SIDE	1	
			7	28235-KWZ-900	GEAR B, KICK IDLE (30T)	1	
			8	90741-003-010	KEY, WOODRUFF, 4MM	1	
			9	91303-KF0-003	O-RING, 14.8X2.4	1	

E - 22 Throttle Body

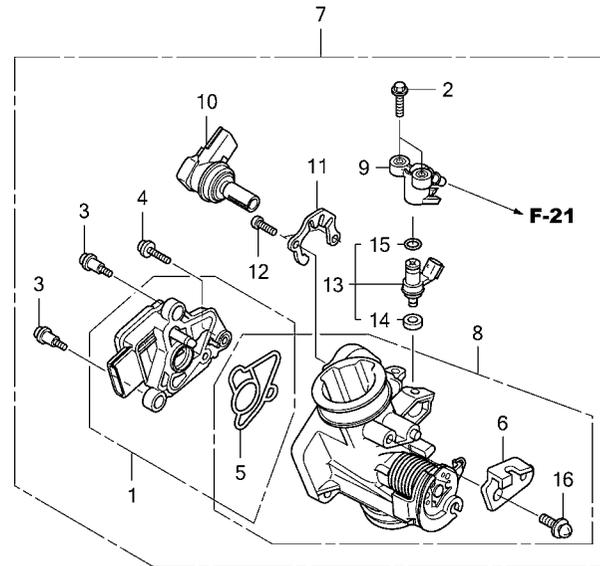


FR.

KWZIE2200

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	SENSOR, THROTTLE.....	0,6	1	37890-GEY-642	SENSOR UNIT COMP.....	1	
7	BODY ASSY., THROTTLE.....	1,0	2	16080-KPH-701	BOLT, FLANGE, 5X20.....	2	
8	COMP THROTTLE.....	1,1	3	16081-KPH-701	SCREW, TORX, 5X8.7.....	2	
10	VALVE, IDLE AIR CONTROL.....	0,4	4	16082-KPH-701	SCREW, TORX, 5X17.....	1	
13	INJECTOR, FUEL.....	0,5	5	16083-KTR-941	O-RING, THROTTLE BODY.....	1	
			6	16169-KTM-D21	STAY, WIRE.....	1	
			7	16400-KWZ-902	THROTTLE BODY ASSY. (GQR9A B).....	1	
			8	16401-KTM-D21	BODY COMP THROTTLE.....	1	
			9	16422-GBJ-M31	JOINT, INJECTOR.....	1	
			10	16436-KTM-D22	VALVE COMP, STARTER IDLE AIR CONTROL.....	1	
			11	16432-GFM-901	PLATE, IDLE AIR CONTROL VALVE.....	1	
			12	16433-HN8-A61	SCREW, TORX.....	2	
			13	16450-KSS-B31	INJECTOR ASSY., FUEL.....	1	
			14	16472-KPH-701	RING, SEAL.....	1	
			15	91301-KPH-701	O-RING, 7.3X2.2.....	1	
			16	93892-05012-18	SCREW-WASHER, 5X12.....	1	


F - 1 Headlight

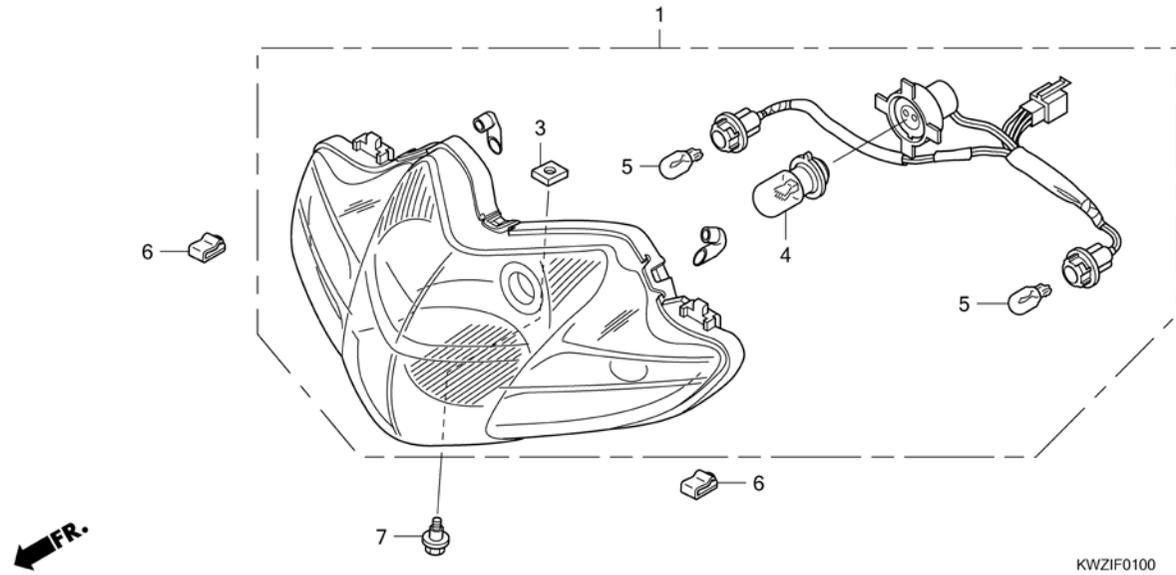

KWZIF0100

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	HEADLIGHT UNIT	0,4	1	33100-KWZ-751	HEADLIGHT ASSY	1	
4	BULB, HEADLIGHT	0,3	3	33115-KBA-830	NUT, ADJUST	1	
5	BULB, WINKER :FRONT	0,3	4	34901-KPH-881	BULB, HEADLIGHT	1	
			5	34905-KAN-W01	BULB, WINKER (12V 10W)	2	
			6	53209-GAH-000	CLIP, HEADLIGHT	2	
			7	90101-GJ6-000	BOLT, ADJUSTING	1	

F - 2 Meter

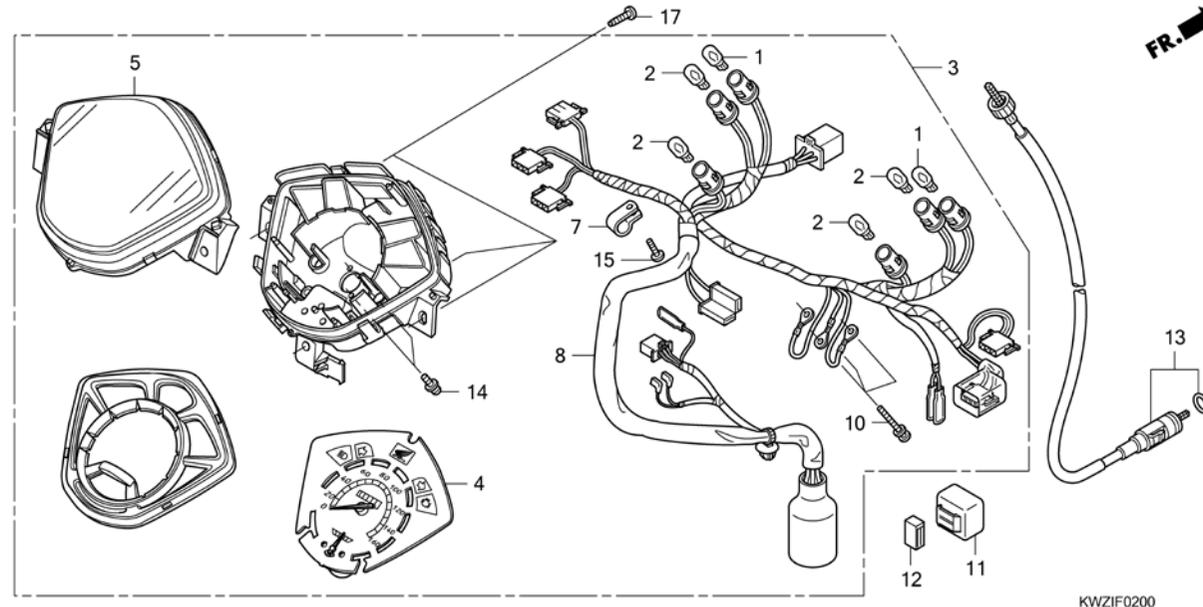

KWZIF0200


3

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1 (2) BULB, METER	0,3	1	34908-GA7-701	BULB, WEDGE BASE (T10)	2	
			34909-KVR-600	BULB, WEDGE BASE (T10)	2	
3 METER ASSY., COMBINATION.....	0,8	2	34908-KVE-900	BULB, WEDGE BASE (T10)	4	
4 METER, COMBINATION	1,0		34908-MB9-871	BULB, WEDGE BASE (T10)	4	
		3	37200-KWZ-751	SPEEDOMETER ASSY	1	
5 LENS, METER	0,8	4	37201-KWZ-751	DIAL DESIGN., SPEED & FUEL	1	
6 CASE, METER	0,9	5	37211-KWW-A01	GLASS	1	
8 SOCKET ASSY., METER BULB	0,8	7	37215-KS3-901	CLAMP	1	
		8	37224-KWZ-751	SOCKET COMP.....	1	
11 RELAY, WINKER	0,4	10	37305-KE5-008	SCREW-WASHER, 3X22	3	
13 CABLE, SPEEDOMETER	0,4					
		11	38301-GBG-911	RELAY COMP., WINKER	1	
		12	38306-KK4-000	SUSPENSION, WINKER RELAY	1	
		13	44830-KWW-A00	CABLE COMP., SPEEDOMETER	1	
		14	90035-166-008	SCREW-WASHER, SPECIAL, 4X10	2	
		15	90109-MZ5-008	SCREW, TAPPING, 4X14	1	
		17	93903-25310	SCREW, TAPPING, 5X16	3	

F - 4

Switch / Cable

/ Mirror

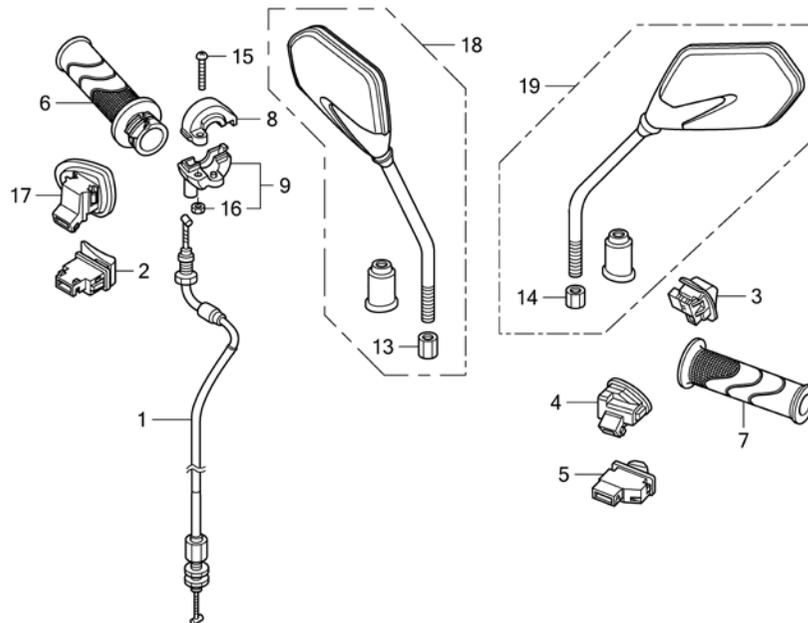


KWZIF0400

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	CABLE, THROTTLE	1,0	1	17910-KWZ-750	CABLE COMP., THROTTLE	1	
2	SWITCH, STARTER KILL.....	0,4	2	35160-KWW-A01	SWITCH UNIT, STARTER	1	
3	SWITCH, DIMMER	0,4	3	35170-KWW-A01	SWITCH UNIT, DIMMER	1	
4	SWITCH, HORN	0,4	4	35180-KWW-A01	SWITCH UNIT, HORN	1	
5	SWITCH, WINKER	0,4	5	35200-KWW-A01	SWITCH UNIT, WINKER	1	
6	GRIP, HANDLE :LEFT	0,1	6	53140-KWW-620	GRIP COMP., THROTTLE	1	
7	GRIP, HANDLE :LEFT	0,1	7	53166-KWB-600	GRIP, L. HANDLE	1	
9	HOUSING, THROTTLE	0,4	8	53167-KFM-900	HOUSING, UPPER THROTTLE	1	
			9	53168-KFM-900	HOUSING, UNDER THROTTLE	1	
17	SWITCH, LIGHTING	0,4					
			13	90314-KTM-850	NUT, LOCK	1	
			14	90314-KFM-840	NUT, LOCK	1	
			15	93500-05025-0G	SCREW, PAN, 5X25	1	
			16	94001-05070-0S	NUT, HEX., 5MM	1	
			17	35150-KWW-A01	SWITCH UNIT, LIGHTING.....	1	
			18	88110-KWW-A00	MIRROR ASSY., R. NH1..... BLACK	1	
			19	88120-KWW-A00	MIRROR ASSY., L. NH1..... BLACK	1	

F - 5

Fr. Brake Master Cylinder

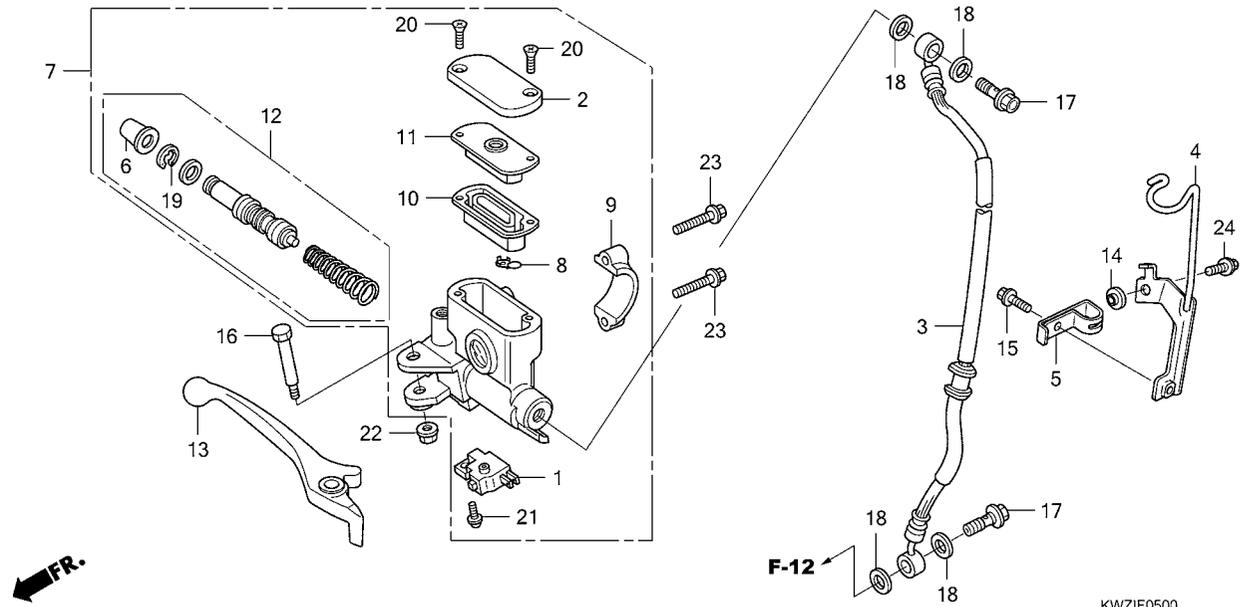


KWZIF0500

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	SWITCH, FRONT STOP	0,5	1	35340-KWB-601	SWITCH ASSY., FR. STOP	1	
3	HOSE, FRONT BRAKE	0,6	2	43513-KBP-882	CAP, MASTER CYLINDER	1	
	.TERMASUK: Mengeluarkan minyak rem		3	45126-KWW-A40	HOSE COMP., FR. BRAKE	1	
7	CYLINDER, FRONT BRAKE MASTER..	0,8	4	45156-KWW-A40	CLAMPER, BRAKE HOSE	1	
	.TERMASUK: Mengeluarkan minyak rem		5	45157-KWW-A00	CLAMPER B, BRAKE HOSE	1	
10	DIAPHRAGM, FRONT BRAKE MASTER CYLINDER	0,1	6	45504-410-004	BOOT COMP	1	
12	PISTON SET, FRONT BRAKE MASTER	0,8	7	45510-KWB-600	CYLINDER SUB ASSY., FR. BRAKE	1	
	.TERMASUK: Mengeluarkan minyak rem		8	45512-MA6-007	PROTECTOR	1	
13	LEVER, HANDLE :RIGHT	0,3	9	45517-GW0-751	HOLDER, MASTER CYLINDER	1	
			10	45520-GW0-912	DIAPHRAGM	1	
			11	45521-GW0-913	PLATE, DIAPHRAGM	1	
			12	45530-KVY-911	CYLINDER SET, MASTER	1	
			13	53175-KRS-T80	LEVER, R. STEERING HANDLE	1	
			14	81312-KPH-900	COLLAR, FR. FENDER	1	
			15	90102-KGH-900	BOLT, FLANGE, 6X10	1	
			16	90114-KGH-901	BOLT, HANDLE LEVER PIVOT	1	
			17	90145-GAZ-981	BOLT, OIL, 10X22	2	
			18	90545-300-000	WASHER, OIL BOLT	4	
			19	90651-MA5-672	CIRCLIP	1	
			20	93600-04012-1G	SCREW, FLAT, 4X12	2	
			21	93893-04012-18	SCREW-WASHER, 4X12	1	
			22	94050-0600	NUT, FLANGE, 6MM	1	
			23	95701-06022-01	BOLT, FLANGE, 6X22	2	
			24	96001-06014-00	BOLT, FLANGE, 6X14	1	

F - 7


Handle Pipe / Handle Cover

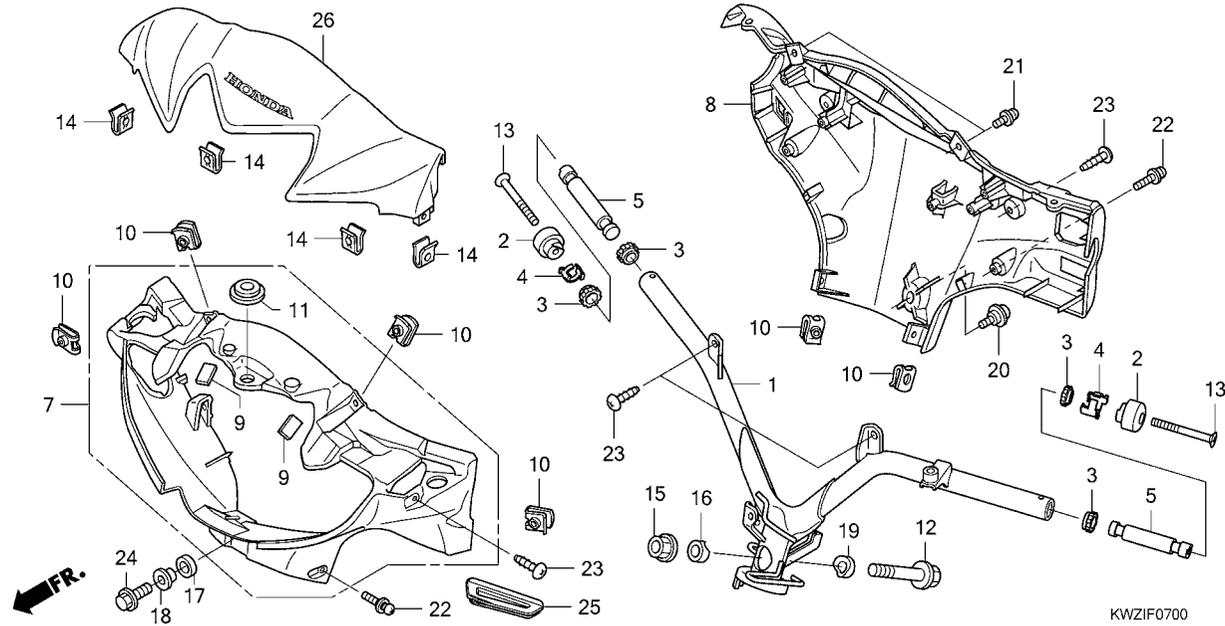

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1 PIPE, STEERING HANDLE	1,3	1	53100-KWW-630	PIPE COMP., STEERING HANDLE	1	
5 WEIGHT B, HANDLE :LEFT.....	0,2	2	53105-KWB-600	WEIGHT A, STEERING HANDLE	2	
WEIGHT B, HANDLE :RIGHT	0,2	3	53106-KR3-000	RUBBER A, HANDLE WEIGHT	4	
WEIGHT B, HANDLE :BOTH	0,4	4	53108-KR3-770	RING, HANDLE WEIGHT SNAP	2	
		5	53125-KWZ-900	WEIGHT B, STEERING HANDLE	2	
7 COVER, HANDLE :FRONT.....	0,4	7	53205-KWW-A00	COVER, FR. HANDLE	1	
8 COVER, HANDLE :REAR	0,7	8	53206-KWZ-840DSM	COVER, RR. HANDLE		
COVER, HANDLE :BOTH	0,7			*NHA30M* DIGITAL SILVER METALLIC.....	1	
26 COVER, HANDLE :UPPER.....	0,1	9	64341-KWW-A00	RUBBER, CUSHION	2	
		10	64521-MN5-000	NUT, CLIP, 4MM	6	
		11	83601-MN5-000	GROMMET, SIDE COVER	1	
		12	90106-GN5-900	BOLT, FLANGE, 10X50	1	
		13	90191-KWB-600	SCREW, OVAL, 6X45	2	
		14	90302-KWW-A00	NUT, SPRING, 4MM	4	
		15	90304-KGH-901	NUT, U, 10MM	1	
		16	90501-KPH-880	COLLAR A, HANDLE SETTING	1	
		17	90501-KWW-A00	RUBBER, HANDLE MOUNTING	1	
		18	90503-KBP-900	COLLAR, MAIN SIDE COVER	1	
		19	90505-KPH-880	COLLAR B, HANDLE SETTING	1	
		20	91509-GE2-760	SCREW, PAN, 5X11.5	1	

F - 7

Handle Pipe / Handle Cover

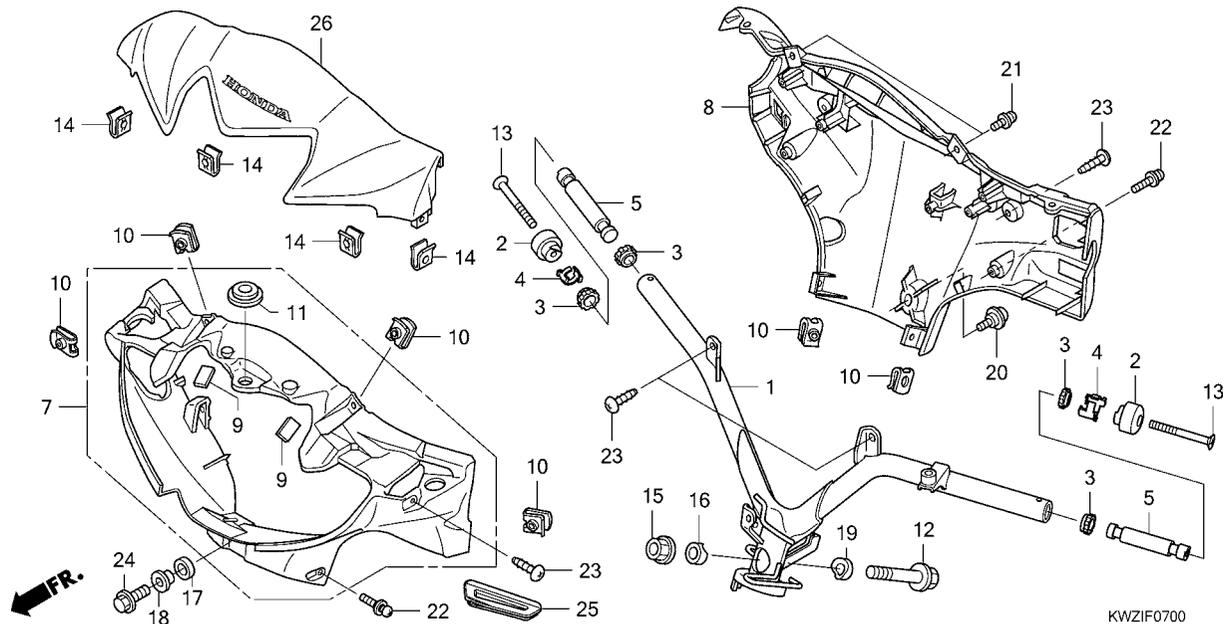


3

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
		21	93891-04012-07	SCREW-WASHER, 4X12	2	
		22	93891-04016-08	SCREW-WASHER, 4X16	4	
		23	93903-24481	SCREW, TAPPING, 4X16	6	
		24	96001-06016-00	BOLT, FLANGE, 6X16	1	
		25	53208-KWZ-840	RUBBER CAP, FR. HANDLE COVER	1	
		26	53203-KWW-A00AFB	COVER, HANDLE TOP (WL) *NHB12M* AFFINITY BLACK METALLIC.....	1	
			53203-KWW-A00POV	*P101P* PEARL ODYSSEY VIOLET	(1)	
			53203-KWW-A00CSR	*R333C* CANDY SCARLET RED	(1)	

F - 9


Steering Stem

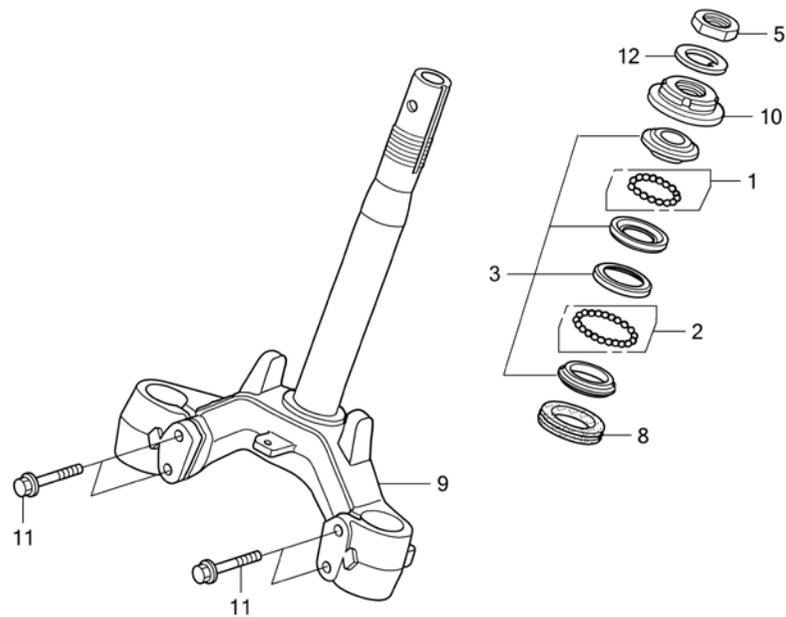

KWZIF0900

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
3	RACE, STEERING BALL :UPPER.....	1,6	1	06530-GBG-B20	BALL SET, STEEL, #6X23	1	
4	RACE, STEERING BALL :LOWER.....	1,8	2	06531-GBG-B20	BALL SET, STEEL, #6X29	1	
	RACE, STEERING BALL :BOTH	1,8	3	06535-GN5-505	RACE STEERING KIT	1	
6	RACE, STEERING TOP CONE	1,6	5	50306-GN5-901	NUT, STEERING STEM LOCK	1	
7	(8)		8	53214-GN5-900	DUST SEAL, STEERING HEAD	1	
	RACE, STEERING BOTTOM CONE.	1,8	9	53200-KWZ-750	STEM COMP., STEERING	1	
9	STEM OR SHAFT ASSY., STEERING...	1,6	10	53220-GN5-900	THREAD COMP., STEERING HEAD	1	
10	THREAD, STEERING HEAD TOP	1,4	11	95801-10045-00	BOLT, FLANGE, 10X45	4	
			12	53216-GN5-830	WASHER, STEERING STEM NUT.....	1	

F - 10 Front Fender

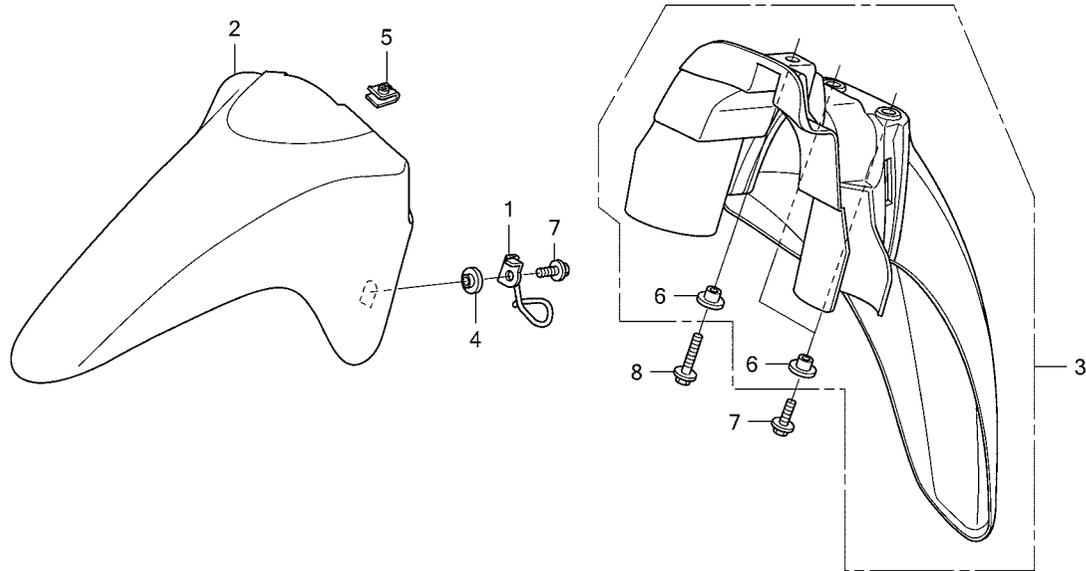


KWZIF1000

3

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
2 FENDER A, FRONT.....	0,3	1	45465-KTL-740	GUIDE, FR. BRAKE CABLE	1	
3 FENDER B, FRONT.....	0,4	2	61100-KWW-A00AFB	FENDER A, FR.		
				NHB12M AFFINITY BLACK METALLIC.....	1	
			61100-KWW-A00POV	*P101P* PEARL ODYSSEY VIOLET	(1)	
			61100-KWW-A00CSR	*R333C* CANDY SCARLET RED	(1)	
		3	61200-KWZ-840	FENDER B, FR	1	
		4	81312-KPH-900	COLLAR, FR. FENDER	1	
		5	90305-KWW-A00	NUT, CLIP, 6MM	1	
		6	90503-KBP-900	COLLAR, MAIN SIDE COVER	3	
		7	96001-06014-00	BOLT, FLANGE, 6X14	3	
		8	96001-06025-00	BOLT, FLANGE, 6X25	1	

F - 11 Front Fork

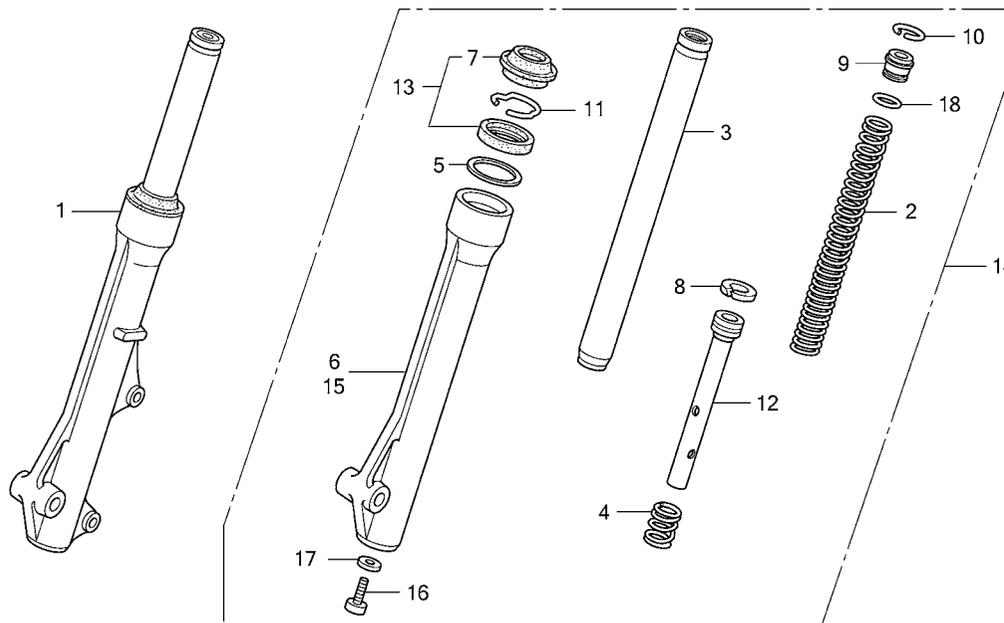


KWZIF1100

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	FORK ASSY., FRONT :RIGHT	0,5	1	51400-KWZ-751	FORK ASSY., R. FR	1	
2	SPRING, FRONT FORK :LEFT	0,7	2	51401-KWB-601	SPRING, FR. FORK	2	
	SPRING, FRONT FORK :RIGHT	0,7	3	51410-KWB-601	PIPE COMP., FR. FORK	2	
	SPRING, FRONT FORK :BOTH	1,0	4	51412-GN5-901	SPRING, REBOUND	2	
3	PIPE, FRONT FORK :LEFT	0,8	5	51412-KWB-601	RING, BACK UP	2	
	PIPE, FRONT FORK :RIGHT	0,8	6	51420-KWW-A31	CASE COMP., R. FR. BOTTOM	1	
	PIPE, FRONT FORK :BOTH	1,3	7	51425-GN5-901	SEAL, DUST	2	
6	CASE, BOTTOM :RIGHT	0,9	8	51437-KWB-601	RING, PISTON	2	
			9	51454-KEV-881	SEAT B, SPRING	2	
13	SEAL SET, FRONT FORK :LEFT	0,9	10	51456-KPH-901	RING, STOPPER	2	
	SEAL SET, FRONT FORK :RIGHT	0,9					
	SEAL SET, FRONT FORK :BOTH	1,5	11	51466-065-901	RING, OIL SEAL STOPPER	2	
14	FORK ASSY., FRONT :LEFT	0,5	12	51470-KWW-A01	PIPE, SEAT	2	
	FORK ASSY., FRONT :BOTH	0,7	13	91255-KWZ-901	SEAL, OIL 26X37X10,5	1	
15	CASE, BOTTOM :LEFT	0,9	14	51500-KWZ-751	FORK ASSY., L. FR	1	
	CASE, BOTTOM :BOTH	1,5	15	51520-KWW-A31	CASE COMP., L. FR. BOTTOM	1	
			16	90116-KV3-702	BOLT, SOCKET, 8MM	2	
			17	90544-283-000	WASHER, SPECIAL, 8MM	2	
			18	91356-GM0-003	O-RING	2	

F - 12

Front Brake Caliper

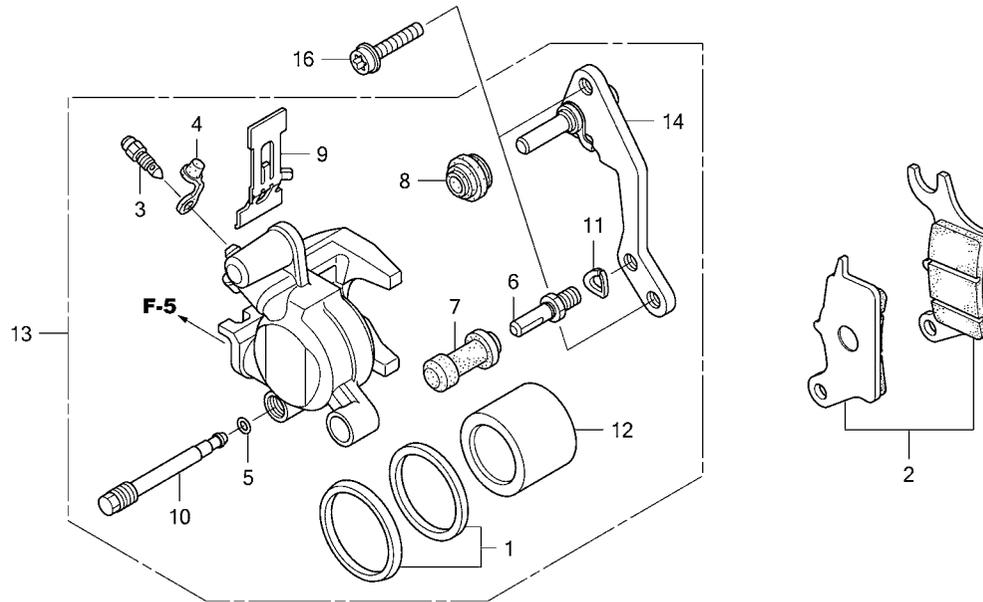


KWZIF1200 

3

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
2	SHOE(PAD) SET, BRAKE :FRONT	0,1	1	06451-961-405	SEAL SET, PISTON	1	
12	(1) PISTON, FRONT BRAKE CALIPER	0,5	2	06455-KWB-601	PAD SET, FR	1	
	.TERMASUK: Mengeluarkan minyak rem		3	43352-568-004	SCREW, BLEEDER	1	
13	CALIPER, FRONT BRAKE.....	0,4	4	43353-461-772	CAP, BLEEDER	1	
	.TERMASUK: Mjengelurkan minyak rem		5	45111-MAJ-G42	RING, STOPPER	1	
14	BRACKET, FRONT CALIPER	0,2	6	45131-GZ0-007	BOLT, PIN	1	
			7	45132-166-017	BOOT, PIN BUSH	1	
			8	45133-MA3-007	BOOT B	1	
			9	45208-KWB-601	SPRING, PAD	1	
			10	45215-KPH-951	PIN, HANGER	1	
			11	45216-166-007	WASHER, WAVE	1	
			12	45218-KWB-601	PISTON	1	
			13	45250-KWB-921	CALIPER SUB ASSY., R. FR	1	
			14	45290-KWB-601	BRACKET SUB ASSY., FR	1	
			16	90131-KPH-881	BOLT, TORX, 8X25	2	

F - 14 - 40 Front Wheel

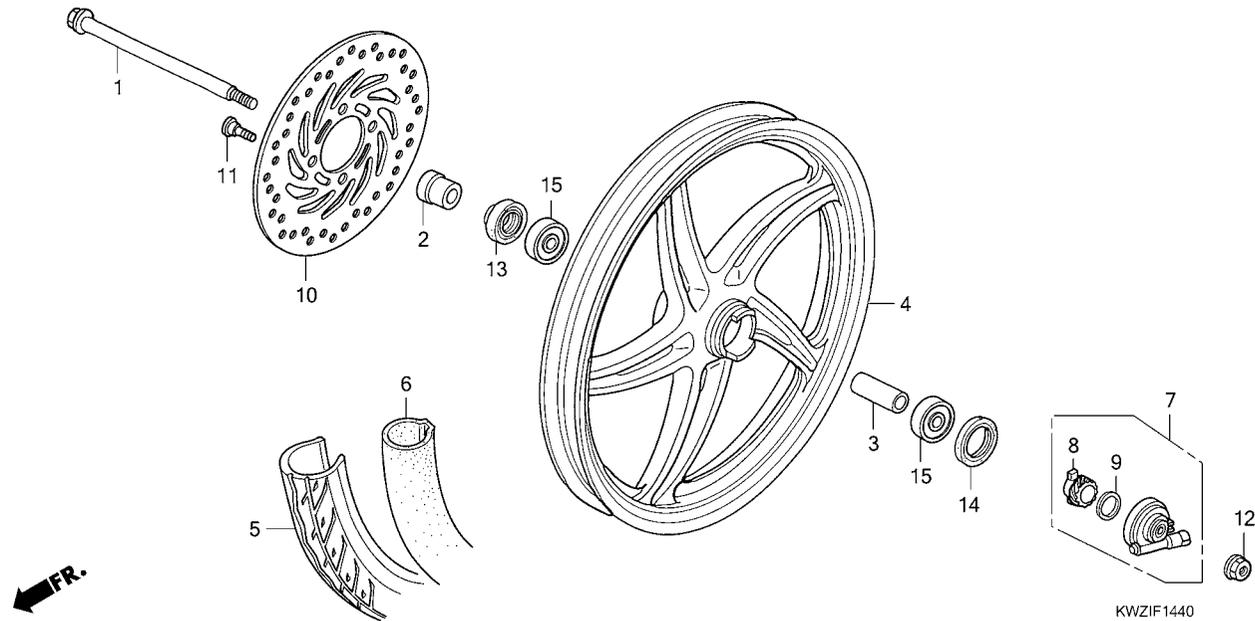


KWZIF1440

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	AXLE, FRONT WHEEL.....	0,2	1	44301-KWB-600	AXLE, FR. WHEEL	1	
4	FRONT WHEEL.....	0,8	2	44311-KWB-920	COLLAR, FR. WHEEL SIDE	1	
5	FRONT TIRE	0,7	3	44620-KPH-951	COLLAR, FR. AXLE DISTANCE	1	
6	TUBE, FRONT TIRE(SATU).....	0,7	4	44601-KWB-921	WHEEL., FR	1	
7	GEARBOX ASSY., SPEEDOMETER.....	0,2	5	44711-KWW-010	TIRE, FR	1	
10	DISC, FRONT BRAKE.....	0,3	6	22517-25017-0000	TUBE, TIRE	1	
15	(3) BEARING, FRONT WHEEL(SATU).....	0,4	7	44800-KWB-600	BOX ASSY., SPEEDOMETER GEAR	1	
			8	44806-KWB-600	GEAR, SPEEDOMETER (19T).....	1	
			9	44809-KFM-900	WASHER, SPEEDOMETER GEAR	1	
			10	45251-KWB-921	DISK, FR. BRAKE	1	
			11	90105-KGH-901	BOLT, BRAKE DISK, 8X24	4	
			12	90306-KGH-901	NUT, U, 12MM	1	
			13	91251-KPH-901	DUST SEAL, 21X37X7	1	
			14	91251-KWB-601	DUST SEAL, 42X54X7	1	
			15	HB62012-RS	BEARING, RADIAL BALL, 6201UU	2	

F - 18

Rear Brake Panel

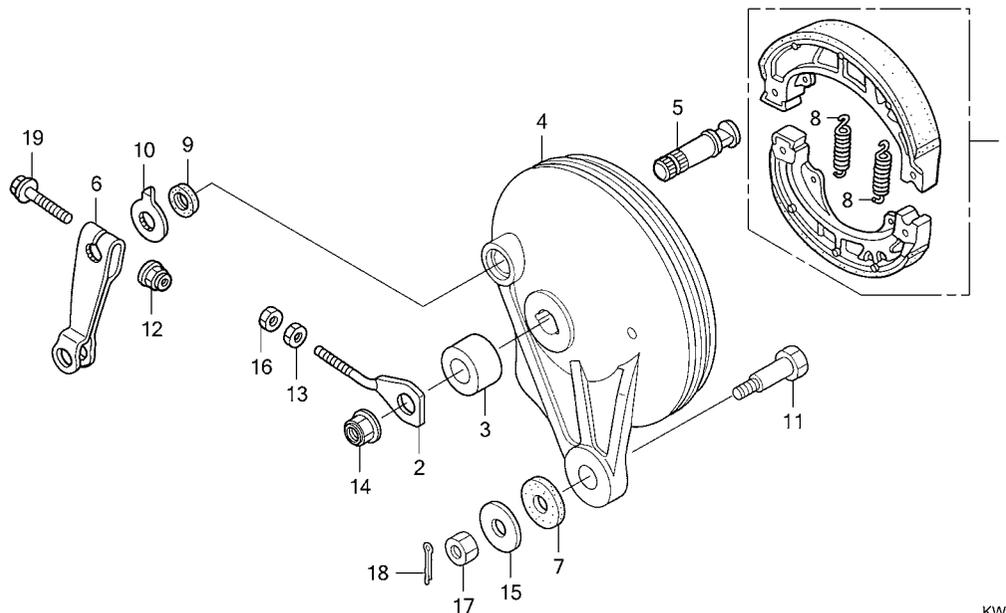


KWZIF1800 **FR.** →

3

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1 SHOE(PAD) SET, BRAKE :REAR	0,4	1	43125-KPH-903	SHOE SET, BRAKE	1	
4 (5) PANEL, REAR BRAKE.....	0,5	2	4054A-KWW-A00	ADJUSTER, R. CHAIN ASSY	1	
		3	42313-GBG-B20	COLLAR, RR. BRAKE PANEL SIDE	1	
6 ARM, BRAKE :REAR.....	0,1	4	43100-KPH-700	PANEL COMP., RR. BRAKE	1	
		5	43141-KTM-850	CAM, RR. BRAKE	1	
		6	43410-KWB-600	ARM, RR. BRAKE	1	
		7	43434-ME1-670	RUBBER, STOPPER ARM	1	
		8	45133-028-000	SPRING, BRAKE SHOE	2	
		9	45134-250-001	DUST SEAL, BRAKE CAM	1	
		10	45145-KFM-900	INDICATOR, FR. BRAKE	1	
		11	92811-10000	BOLT A, BRAKE STOPPER	1	
		12	90301-KGH-901	NUT, U, 6MM	1	
		13	90302-KBP-900	NUT, SPECIAL, 6MM	1	
		14	90306-KGH-901	NUT, U, 12MM	1	
		15	90505-425-000	WASHER, 8MM	1	
		16	94001-06000-0S	NUT, HEX., 6MM	1	
		17	94001-08000-0S	NUT, HEX., 8MM	1	
		18	94201-20150	PIN, SPLIT, 2.0X15	1	
		19	95701-06035-00	BOLT, FLANGE, 6X35	1	

F - 19 - 30


Rear Wheel

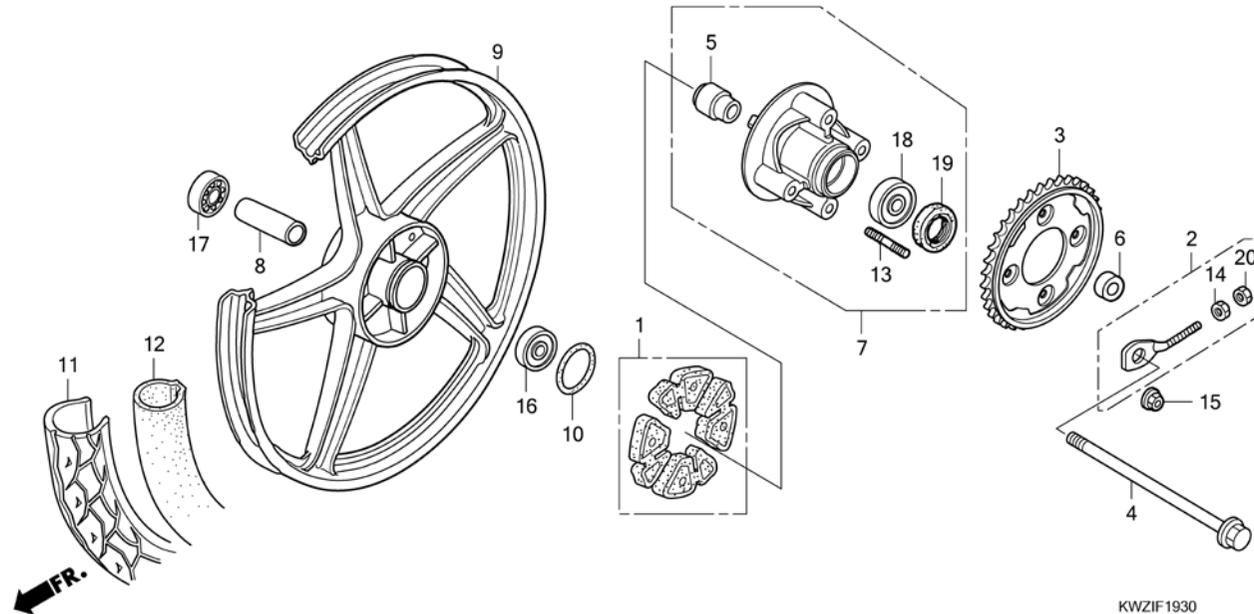

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	DAMPER, REAR WHEEL	0,3	1	41241-KWB-601	DAMPER SET, WHEEL	1	
3	SPROCKET, FINAL DRIVEN	0,4	2	4054A-KWW-A00	ADJUSTER, R. CHAIN ASSY	1	
4	AXLE, REAR WHEEL	0,3	3	41200-KWZ-750	SPROCKET COMP., FINAL DRIVEN	1	
7	FLANGE ASSY., FINAL DRIVEN	0,4	4	42301-KWB-600	AXLE, RR. WHEEL	1	
9	REAR WHEEL.....	0,8	5	42303-KWW-B60	SLEEVE, RR. WHEEL	1	
11	REAR TIRE(ONE).....	0,8	6	42304-KFM-900	COLLAR, RR. WHEEL SIDE	1	
12	TUBE, REAR TIRE(SATU).....	0,8	7	42615-KWB-920	FLANGE SUB ASSY., FINAL DRIVEN	1	
16	(8,17)		8	42620-KFL-851	COLLAR, RR. AXLE DISTANCE	1	
	BEARING, REAR WHEEL(SATU).....	0,5	9	42601-KWB-921	WHEEL COMP., RR	1	
18	BEARING, FINAL DRIVEN FLANGE	0,5	10	42653-001-004	O-RING, 40.5X3 COMP	1	
			11	42711-KWW-010	TIRE, RR	1	
			12	27517-0000-00000	TUBE, TIRE	1	
			13	90128-KWB-600	BOLT, STUD, 8X18	4	
			14	90302-KBP-900	NUT, SPECIAL, 6MM	1	
			15	90309-KPH-971	NUT, U, 8MM	4	
			16	HB6201RS	BEARING, RADIAL BALL, 6201U	1	
			17	HB6301RS	BEARING, RADIAL BALL, 6301U	1	
			18	HB6203RS	BEARING, RADIAL BALL, 6203U	1	
			19	91251-KPH-881	DUST SEAL, 27X40X4.5	1	
			20	94001-06000-0S	NUT, HEX., 6MM	1	

F - 21

Fuel Tank / Fuel Pump

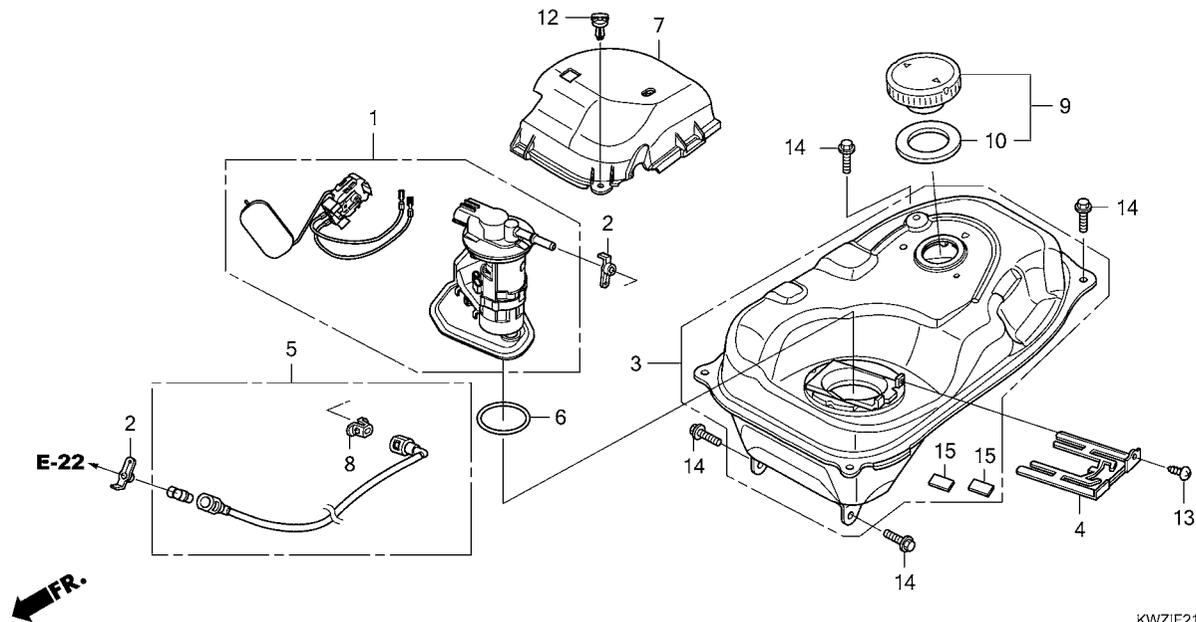


KWZIF2100

3

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1 (6) PUMP, FUEL.....	0,4	1	16700-KWZ-901	PUMP UNIT, FUEL	1	
2		2	16718-KTW-900	DAMPER A, CONNECTOR	2	
3 TANK, FUEL	0,7	3	17510-KWZ-750	TANK COMP., FUEL	1	
5 HOSE, FUEL FEED.....	0,7	5	17570-KWZ-900	HOSE COMP., FUEL FEED	1	
7 COVER, FUEL TANK TOP	0,1					
11 FUEL TANK SENDING UNIT.....	0,5	6	17572-KWB-600	O-RING, FUEL PUMP	1	
		7	1757A-KWZ-750	COVER, ASSY FUEL PUMP	1	
		9	17620-KGH-600	CAP, FUEL FILLER	1	
		10	17631-KEV-900	PACKING, FUEL FILLER CAP	1	
		12	90683-GAZ-003	CLIP, TRIM	1	
		13	93500-04010-0G	SCREW, PAN, 4X10	1	
		14	95701-06012-00	BOLT, FLANGE, 6X12	4	
		15	81257-KWC-900	RUBBER, PROTECTOR	2	

F - 23

Seat / Grab Rail / Luggage Box

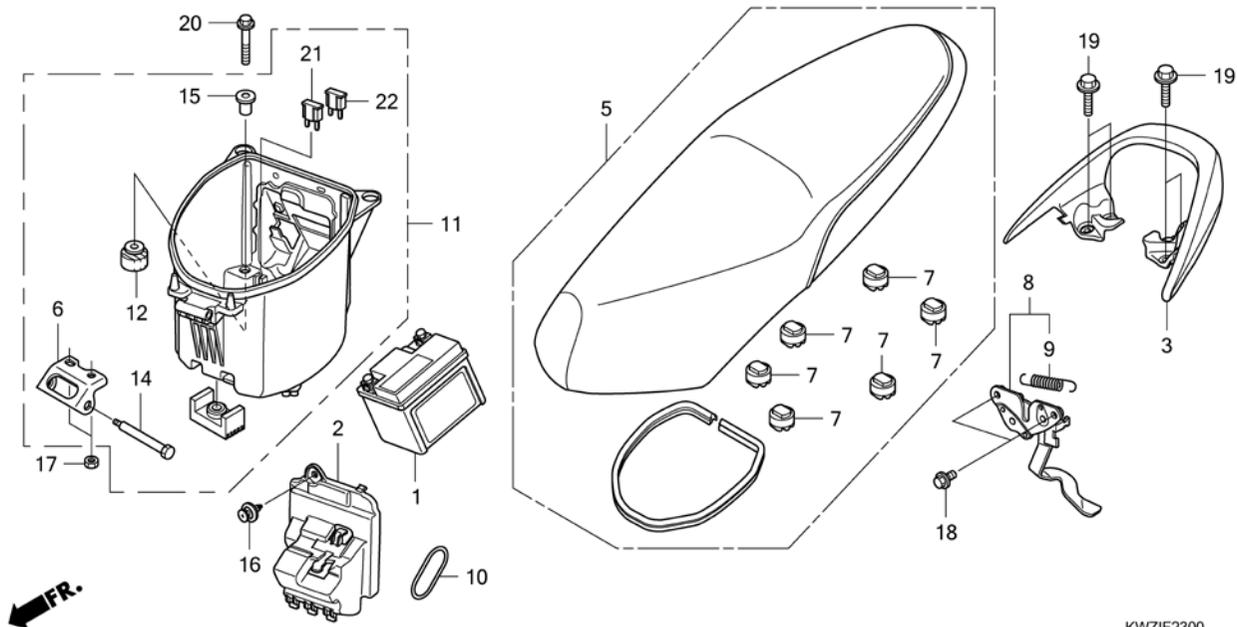


KWZIF2300

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	BATTERY.....	0,2	1	31500-KWW-A01	BATTERY (GTZ4V)	1	
3	RAIL, GRAB :REAR.....	0,1	2	50381-KWZ-750	COVER, BATTERY	1	
5	SEAT :DOUBLE	0,1	3	50400-KWZ-900AFB	RAIL, RR. GRAB		
					NHB12M AFFINITY BLACK METALLIC.....	1	
8	CATCH, SEAT :REAR SIDE	0,1		50400-KWZ-900POV	*P101P* PEARL ODYSSEY VIOLET	(1)	
11	BOX, LUGGAGE	0,6		50400-KWZ-900CSR	*R333C* CANDY SCARLET RED	(1)	
			5	77200-KWZ-750	SEAT ASSY., DOUBLE	1	
			6	77201-KWB-600	HINGE, SEAT	1	
			7	77214-KPH-900	RUBBER B, SEAT SETTING	6	
			8	77230-KWZ-900	CATCH COMP., SEAT	1	
			9	77234-GN2-000	SPRING, SEAT LOCK	1	
			10	80124-KPH-700	BAND (ECU)	1	
			11	8125A-KWZ-750	BOX ASSY., LUGGAGE	1	
			12	81253-KPH-900	RUBBER, LUGGAGE BOX MOUNTING	2	
			14	90105-KPH-900	BOLT, SEAT HINGE	1	
			15	90502-KPH-900	COLLAR, 6.2X20	3	
			16	90634-KPG-900	CLIP, BATTERY COVER	1	
			17	94001-06070-0S	NUT, HEX., 6MM	2	
			18	95701-06012-00	BOLT, FLANGE, 6X12	2	
			19	95701-08020-07	BOLT, FLANGE, 8X20	4	
			20	96001-06030-00	BOLT, FLANGE, 6X30	3	

F - 23

Seat / Grab Rail / Luggage Box

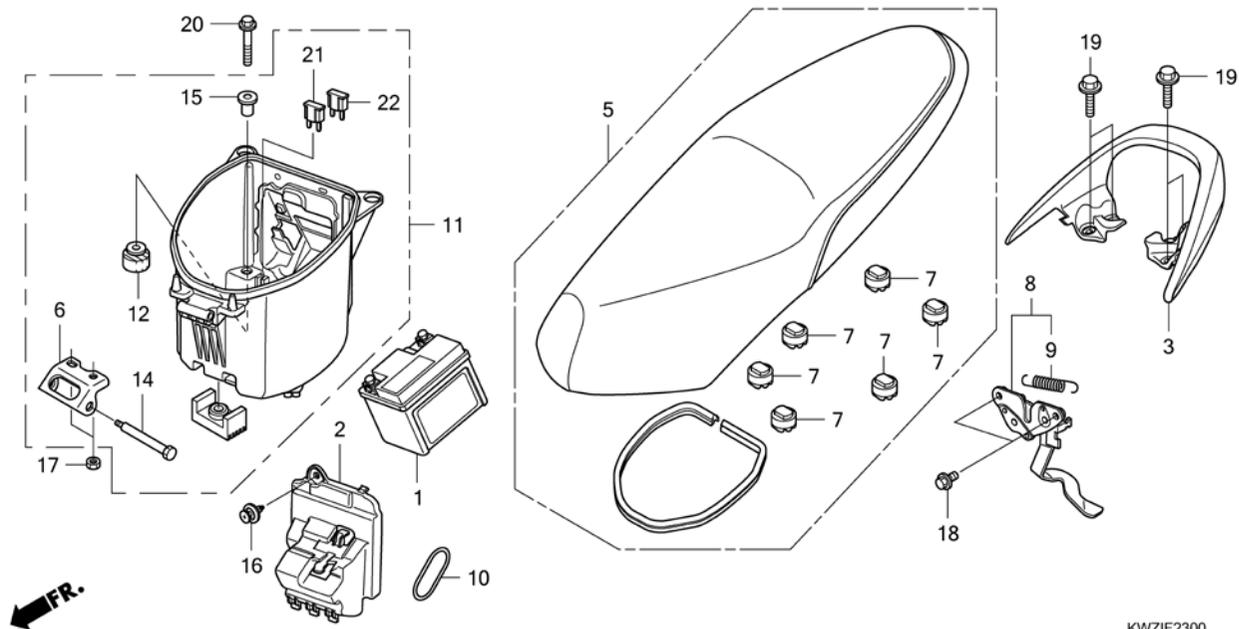


KWZIF2300

3


Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
		21	98200-41000	FUSE, MINI (10A)	1	
		22	98200-41500	FUSE, MINI (15A)	1	

F - 25 Air Cleaner

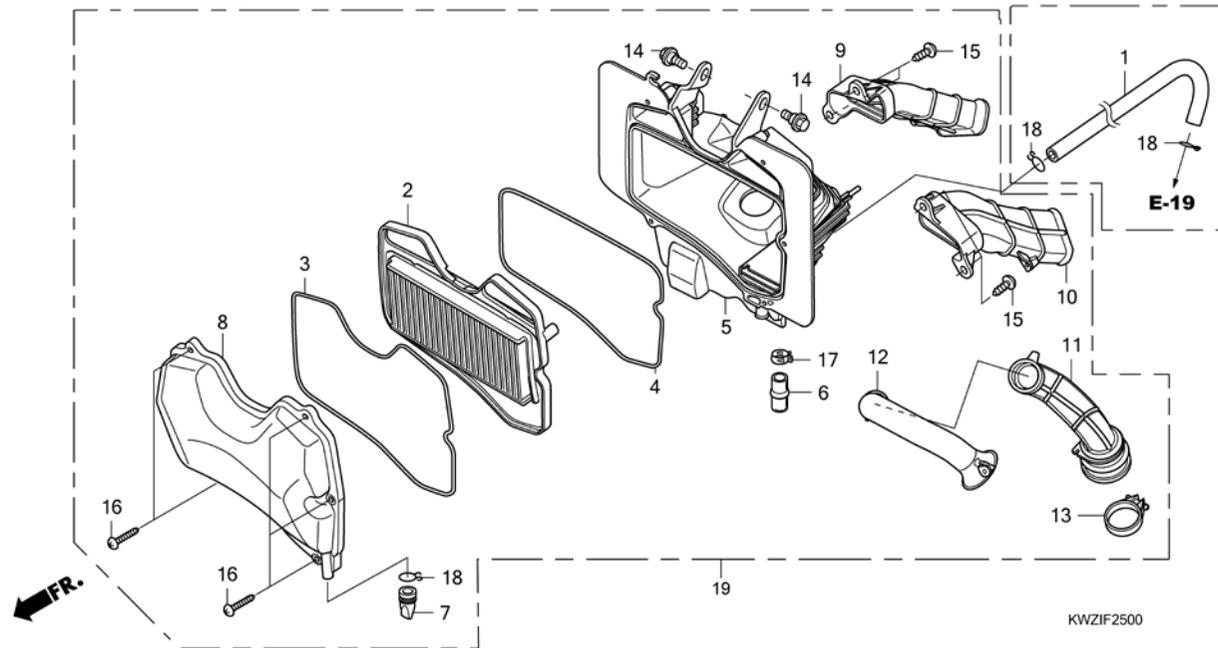

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
2	ELEMENT, AIR CLEANER	0,2	1	1576A-KWB-600	HOSE ASSY, BREATHER	1	
5	(4,9,10) CASE, AIR CLEANER	0,7	2	17210-KWZ-900	ELEMENT COMP., AIR CLEANER	1	
8	(3) COVER, AIR CLEANER CASE	0,2	3	17213-KWB-600	SEAL, AIR CLEANER COVER	1	
11	(12) TUBE, AIR CLEANER CONNECTING ...	0,7	4	17214-KWB-600	SEAL, AIR CLEANER CASE	1	
			5	17230-KWZ-900	CASE., AIR CLEANER	1	
			6	17227-KPK-900	TUBE, VINYL, 11X15X35	1	
			7	17234-KWW-B80	TUBE, AIR CLEANER DRAIN	1	
			8	17231-KWZ-900	COVER., AIR CLEANER	1	
			9	17241-KWZ-900	DUCT R, AIR CLEANER	1	
			10	17242-KWZ-900	DUCT L, AIR CLEANER	1	
			11	17253-KWZ-900	TUBE, AIR CLEANER CONNECTING	1	
			12	17254-KWZ-900	JOINT, AIR CLEANER CONNECTING	1	
			13	17256-KWZ-900	BAND, AIR CLEANER CONNECTING	1	
			14	90116-KVB-900	BOLT, FLANGE, 6MM	2	
			15	93903-25210	SCREW, TAPPING, 5X12	4	
			16	93903-25510	SCREW, TAPPING, 5X25	5	
			17	95002-41300-08	CLAMP, TUBE (D13)	1	
			18	95002-80001	CLIP, TUBE (C12)	3	
			19	1720A-KWZ-750	AIR CLEANER ASSY SET	1	

F - 27 Exhaust Muffler

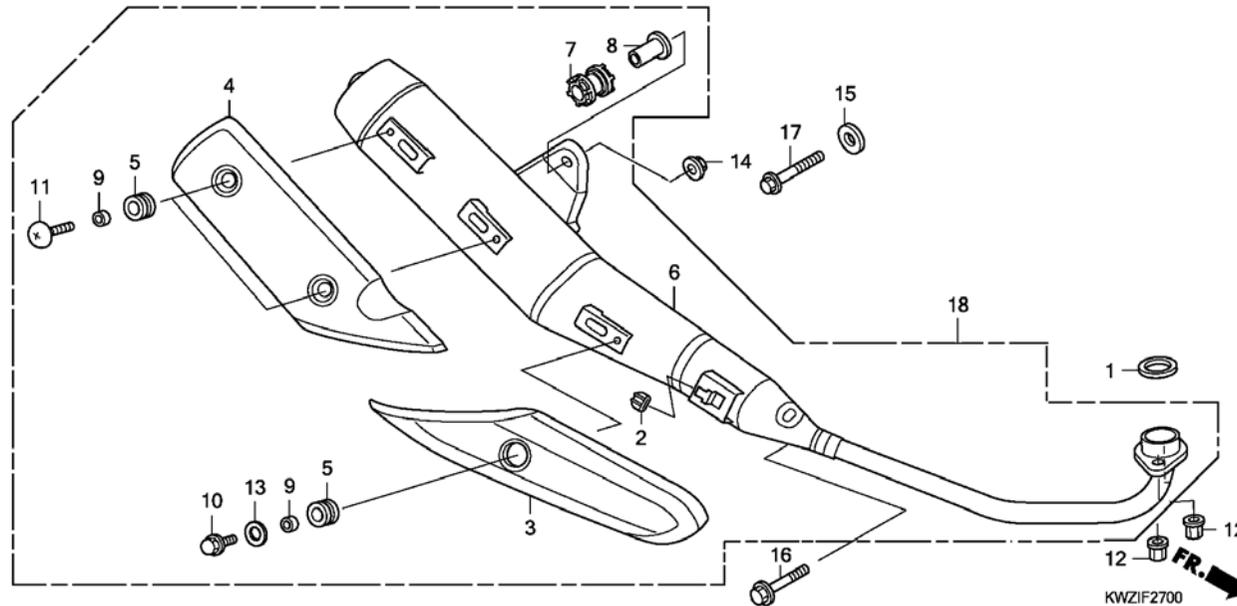


3

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1 GASKET, EXHAUST PIPE.....	0,2	1	18291-GE2-920	GASKET, EX. PIPE	1	
3 COVER, MUFFLER : FRONT.....	0,1	2	18293-KPK-901	RUBBER, PROTECTOR PACKING	1	
4 COVER, MUFFLER : REAR.....	0,1	3	18317-KWZ-900	COVER, FR. MUFFLER	1	
6 MUFFLER.....	0,3	4	18318-KWZ-900	COVER, RR. MUFFLER	1	
		5	18345-MBT-610	RUBBER, PROTECTOR MOUNTING	3	
		6	18350-KWZ-750	MUFFLER COMP., EX	1	
		7	18421-KBA-900	RUBBER, MUFFLER MOUNTING	1	
		8	18422-KWW-A40	COLLAR, PILLION STEP	1	
		9	33619-459-840	COLLAR, WINKER STAY	3	
		10	96001-06014-04	BOLT, FLANGE (SH) 6X14	1	
		11	90107-KVV-900	BOLT, BODY COVER SETTING	2	
		12	90301-KWB-600	NUT, FLANGE, 8MM	2	
		13	90501-KWZ-900	WASHER, PLAIN, 6MM	1	
		14	94050-08000	NUT, FLANGE, 8MM	1	
		15	94103-08000	WASHER, PLAIN, 8MM	1	
		16	95701-08030-00	BOLT, FLANGE, 8X30	1	
		17	95701-08045-00	BOLT, FLANGE, 8X45	1	
		18	18300-KWZ-750	MUFFLER ASSY EXHAUST	1	

F - 29

Pedal / Kick Arm

FR.

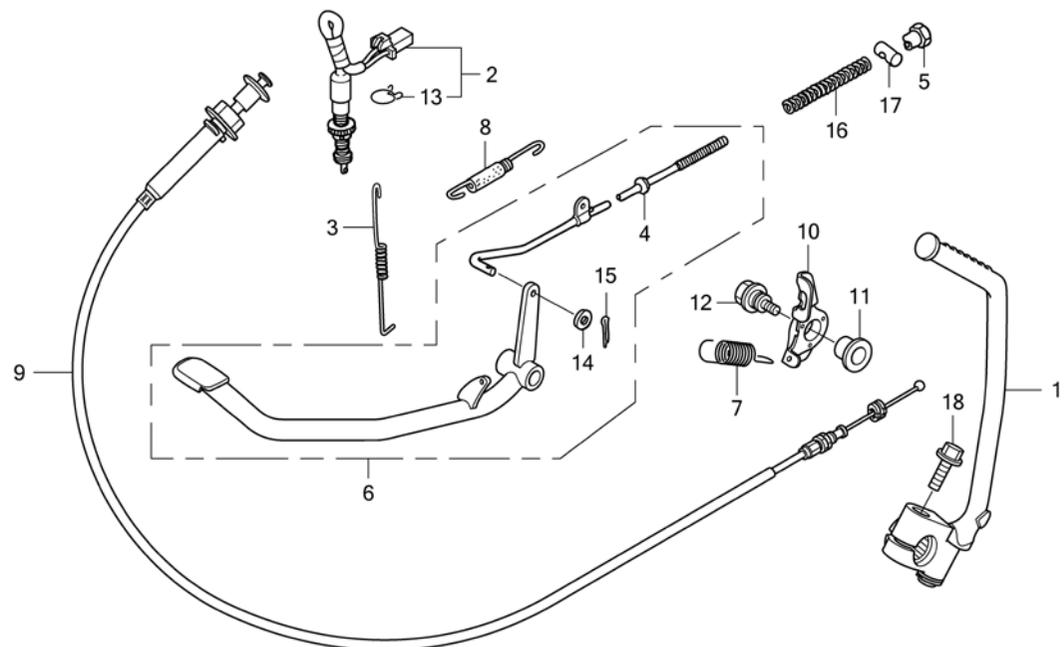


KWZIF2900

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	ARM, KICK STARTER.....	0,1	1	28300-KWZ-840	ARM ASSY., KICK STARTER	1	
2	(3) SWITCH, REAR STOP :PEDAL SIDE...	0,3	2	35350-KWZ-901	SWITCH ASSY., RR. STOP	1	
3	ROD, REAR BRAKE.....	0,5	3	35357-KCC-900	SPRING, STOP SWITCH	1	
4	(16) ROD, REAR BRAKE.....	0,5	4	43451-KWZ-900	ROD COMP., RR. BRAKE	1	
			5	95015-42000	NUT B, BRAKE ROD ADJUSTING	1	
			6	4650A-KWZ-750	PEDAL ASSY., BRAKE	1	
6	PEDAL, REAR BRAKE.....	0,5	7	46510-KJ9-000	SPRING B, BRAKE LOCK CABLE	1	
9	CABLE, PARKING BRAKE.....	0,6	8	46513-KBP-900	SPRING ASSY., RR. BRAKE RETURN	1	
			9	46620-KWZ-840	CABLE COMP., BRAKE LOCK	1	
			10	46625-KWZ-900	PLATE, BRAKE LOCK	1	
			11	46633-KJ9-000	BUSH, STOPPER PLATE	1	
			12	90132-KV7-671	BOLT, FLANGE, 6X9	1	
			13	90601-KAF-003	CLIP, SWITCH COVER	1	
			14	94101-05000	WASHER, PLAIN, 5MM	1	
			15	94201-20150	PIN, SPLIT, 2.0X15	1	
			16	95014-73100	SPRING A, BRAKE ROD	1	
			17	95015-32001	JOINT B, BRAKE ARM	1	
			18	95701-08035-00	BOLT, FLANGE, 8X35	1	

3


F - 30 Step

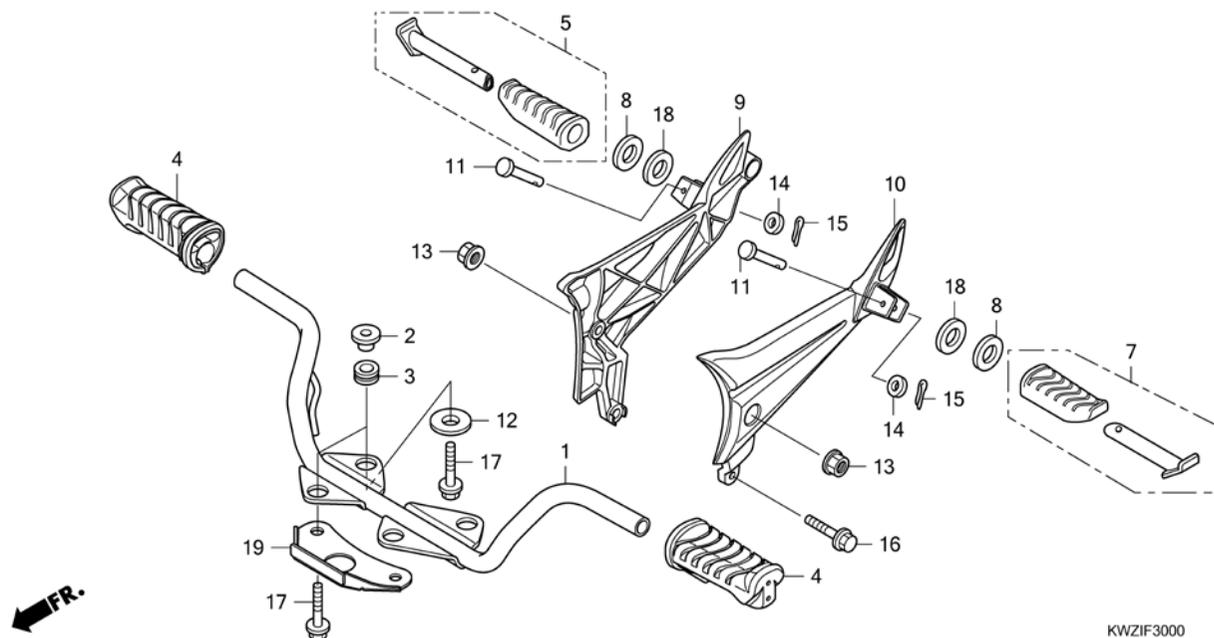

3


Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1 BAR, STEP	0,2	1	50610-KWZ-900	PIPE COMP., STEP	1	
4 RUBBER, STEP :LEFT	0,1	2	50612-KPH-900	COLLAR, MAIN STEP MOUNTING	4	
RUBBER, STEP :RIGHT	0,1	3	50613-KFL-850	RUBBER, MAIN STEP MOUNTING	4	
RUBBER, STEP :BOTH	0,1	4	50661-KWZ-900	RUBBER, STEP	2	
6 (5) BAR, PILLION STEP :RIGHT	0,1	6	50713-KWW-9A0	BAR, R. PILLION STEP SET	1	
7 (5) BAR, PILLION STEP :LEFT	0,1	7	50714-KWW-9A0	BAR, L. PILLION STEP SET	1	
BRACKET, PILLION STEP :BOTH	0,2	8	50715-KE8-000	PLATE, PILLION STEP SIDE	2	
9 BRACKET, PILLION STEP :RIGHT	0,4	9	50715-KWZ-900	HOLDER, R. PILLION STEP	1	
10 BRACKET, PILLION STEP :LEFT	0,2	10	50716-KWZ-900	HOLDER, L. PILLION STEP	1	
BRACKET, PILLION STEP :BOTH	0,6	11	90131-KWB-600	PIN, PILLION STEP	2	
		12	90325-KCC-900	WASHER, PLAIN, 8MM	2	
		13	94050-10000	NUT, FLANGE, 10MM	2	
		14	94101-06000	WASHER, PLAIN, 6MM	2	
		15	94201-16150	PIN, SPLIT, 1.6X15	2	
		16	95701-08030-00	BOLT, FLANGE, 8X30	1	
		17	95701-08032-00	BOLT, FLANGE, 8X32	4	
		18	50714-KBA-930	PLATE, PILLION STEP SIDE	2	
		19	50351-KWZ-900	PLATE, SKID	1	

F - 31 Stand

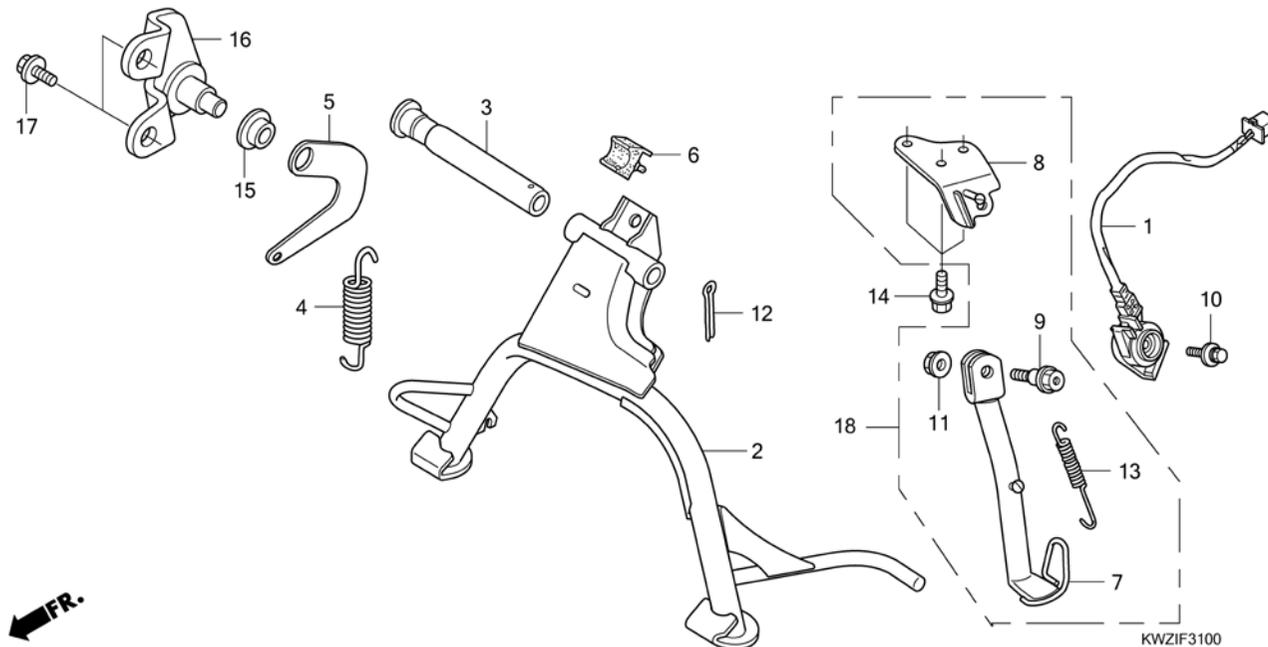

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	SWITCH, SIDE STAND.....	0,3	1	35700-KWZ-900	SWITCH ASSY., SIDE STAND	1	
2	STAND, MAIN	0,5	2	50500-KWZ-900	STAND COMP., MAIN	1	
4	SPRING, MAIN STAND	0,2	3	50512-KWZ-900	SHAFT, RR. BRAKE PIVOT	1	
			4	50520-KWZ-900	SPRING, MAIN STAND	1	
7	BAR, SIDE STAND	0,2	5	50523-KWZ-901	HOOK, MAIN STAND SPRING	1	
13	SPRING, SIDE STAND	0,1	6	50524-397-000	RUBBER, STAND STOPPER	1	
			7	50530-KWZ-750	BAR COMP., SIDE STAND	1	
			8	50535-KWZ-900	BRACKET, SIDE STAND	1	
			9	90108-MK6-670	BOLT, SIDE STAND PIVOT	1	
			10	90147-KVY-900	BOLT, SWITCH SETTING	1	
			11	90203-KVB-900	NUT, SIDE STAND	1	
			12	94201-30251	PIN, SPLIT, 3.0X25	1	
			13	95014-72102	SPRING A, SIDE STAND	1	
			14	95701-10030-00	BOLT, FLANGE, 10X30	3	
			15	46633-KJ9-000	BUSH, STOPPER PLATE	1	
			16	50524-KWZ-900	STAY, MAIN STAND HOOK	1	
			17	95701-06012-00	BOLT, FLANGE, 6X12	2	
			18	5053A-KWZ-750	BAR ASSY, SIDE STAND	1	

F - 32 Swingarm

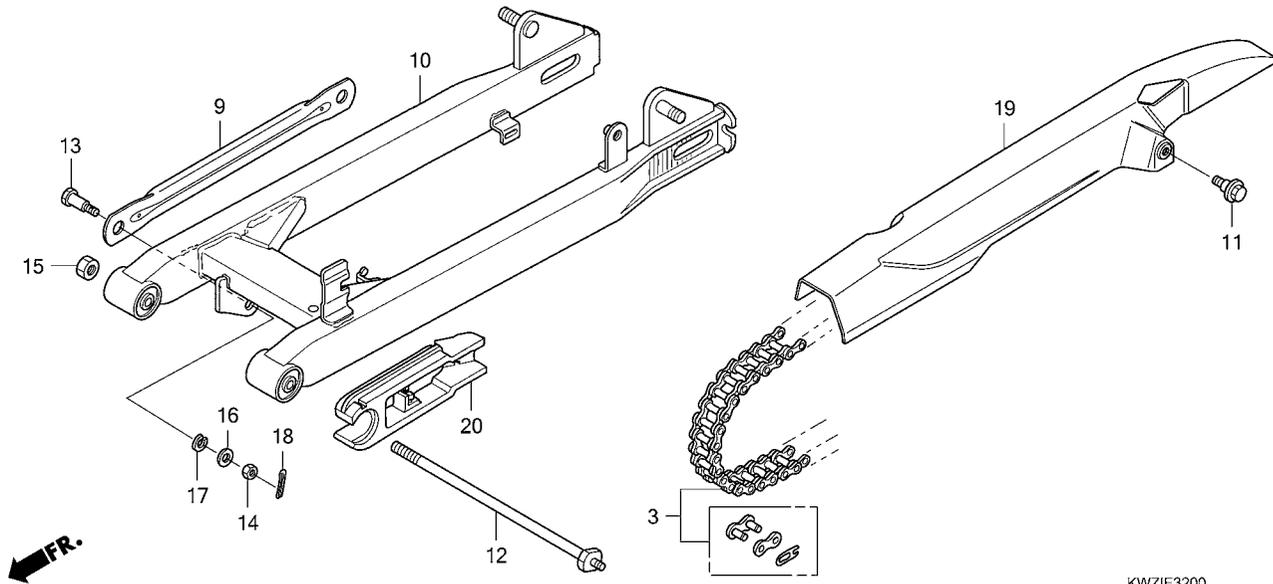



KWZIF3200

3

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
3	CHAIN, DRIVE.....	0,4	3	40530-KWB-602	CHAIN, DRIVE (RK420SL-102RJ)	1	
				40530-KWB-921	CHAIN, DRIVE (420DX-102RB)	1	
10	ARM, REAR BRAKE STOPPER.....	0,6	9	43431-KWB-600	ARM COMP., RR. BRAKE STOPPER	1	
19	SLIDER, CHAIN.....	0,1	10	5210A-KWZ-750	SWINGARM ASSY, RR *NH255M*..... SHIMMER SILVER METALLIC	1	
20	SWINGARM ASSEMBLY.....	0,6					
			11	90111-187-000	BOLT, FLANGE, 6MM	1	
			12	90121-KWZ-900	BOLT, SWINGARM PIVOT	1	
			13	92812-10000	BOLT A, STOPPER ARM	1	
			14	94001-08000-0S	NUT, HEX., 8MM	1	
			15	94031-10000	NUT, HEX., 10MM	1	
			16	94101-08000	WASHER, PLAIN, 8MM	1	
			17	94111-10000	WASHER, SPRING, 10MM	1	
			18	94201-20150	PIN, SPLIT, 2.OX15	1	
			19	40510-KWZ-750	CASE, DRIVE CHAIN	1	
			20	52170-KWZ-750	SLIDER, CHAIN	1	

F - 33

Rear Cushion

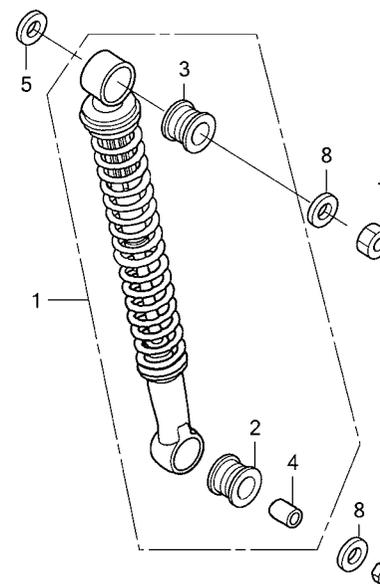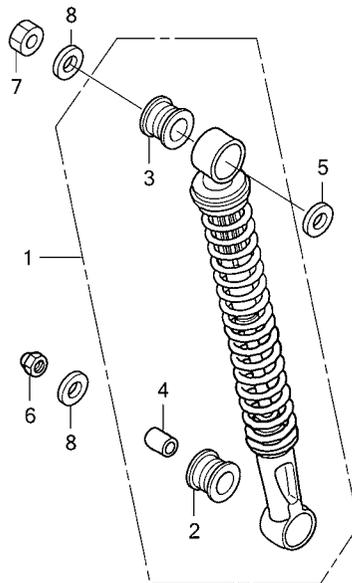


KWZIF3300

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	CUSHION ASSY., REAR :LEFT	0,4	1	52400-KWZ-751	CUSHION ASSY., RR	2	
	CUSHION ASSY., REAR :RIGHT.....	0,4	2	52485-GA7-003	BUSH, RUBBER	2	
	CUSHION ASSY., REAR :BOTH.....	0,5	3	52485-KVY-901	BUSH, RUBBER	2	
			4	52486-GA7-003	COLLAR, RUBBER BUSH	2	
			5	52486-KWZ-900	WASHER, RR. SUSPENSION BAR.....	2	
			6	94021-10000-1S	NUT, CAP, 10MM	2	
			7	94001-10000-0S	NUT, HEX., 10MM	2	
			8	94101-10000	WASHER, PLAIN, 10MM	4	

F - 34

Rear Fender

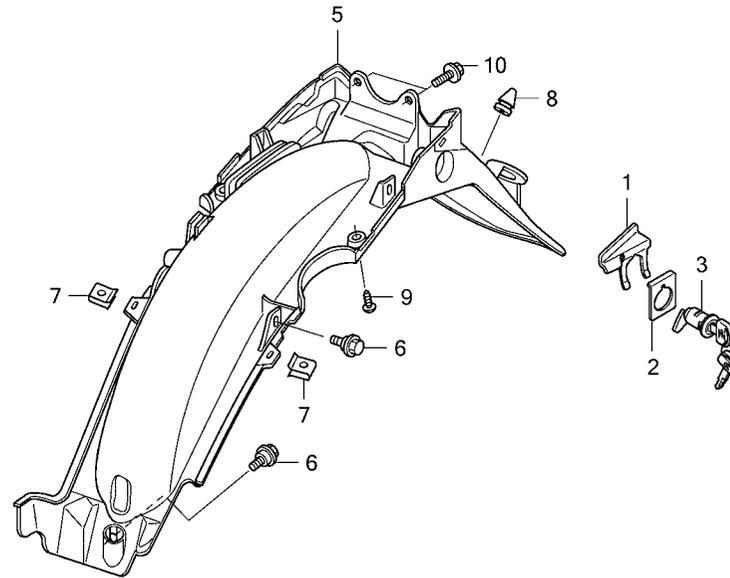


KWZIF3400

3

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
3	LOCK, SEAT	0,1	1	75581-KWZ-900	SPRING, LOCK KEY SETTING	1	
5	FENDER, REAR	0,7	2	77236-KWZ-900	WASHER, SEAT LOCK	1	
			3	77240-KTM-851	LOCK ASSY., SEAT	1	
			5	8010A-KWZ-750	FENDER ASSY, RR	1	
			6	90116-KVB-900	BOLT, FLANGE, 6MM	3	
			7	90302-GW3-980	NUT, SPRING, 4MM	2	
			8	90899-422-610	PLUG, CONE TYPE	1	
			9	93903-34380	SCREW, TAPPING, 4X12	2	
			10	95701-06012-00	BOLT, FLANGE, 6X12	2	

F - 36 - 10

Rear Combination Light

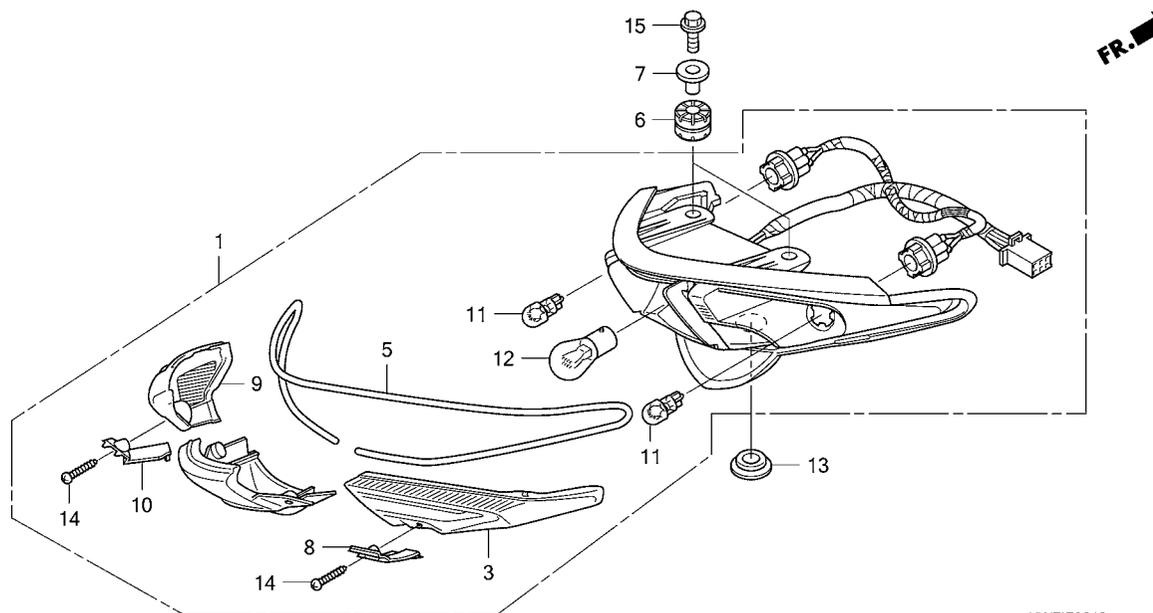


KWZIF3610

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	TAILLIGHT UNIT.....	0,1	1	3370A-KWZ-750	LIGHT ASSY., RR. COMBINATION SET	1	
4	BASE, TAILLIGHT	0,2	3	33702-KWW-A01	LENS COMP., R. WINKER	1	
11	(3,5,6,9) BULB, WINKER :REAR.....	0,1	5	33705-KWW-A01	PACKING	1	
	.CATATAN: Waktu sama untuk 2 unit		6	33705-KW7-900	RUBBER A, TAILLIGHT MOUNTING	2	
12	(2,5,6) BULB, TAILLIGHT.....	0,1	7	33706-KAN-961	COLLAR, TAILLIGHT MOUNTING	2	
			8	33706-KWZ-751	COVER, R. DUMMY	1	
			9	33752-KWW-A01	LENS COMP., L. WINKER	1	
			10	33756-KWZ-751	COVER, L. DUMMY	1	
			11	34905-KAN-W01	BULB, WINKER (12V 10W)	2	
			12	34906-GB6-921	BULB, TAILLIGHT (12V 18/5W)	1	
			13	83601-MN5-000	GROMMET, SIDE COVER	1	
			14	93901-24610	SCREW, TAPPING, 4X25	2	
			15	95701-06025-00	BOLT, FLANGE, 6X25	2	

F - 38


Wire Harness

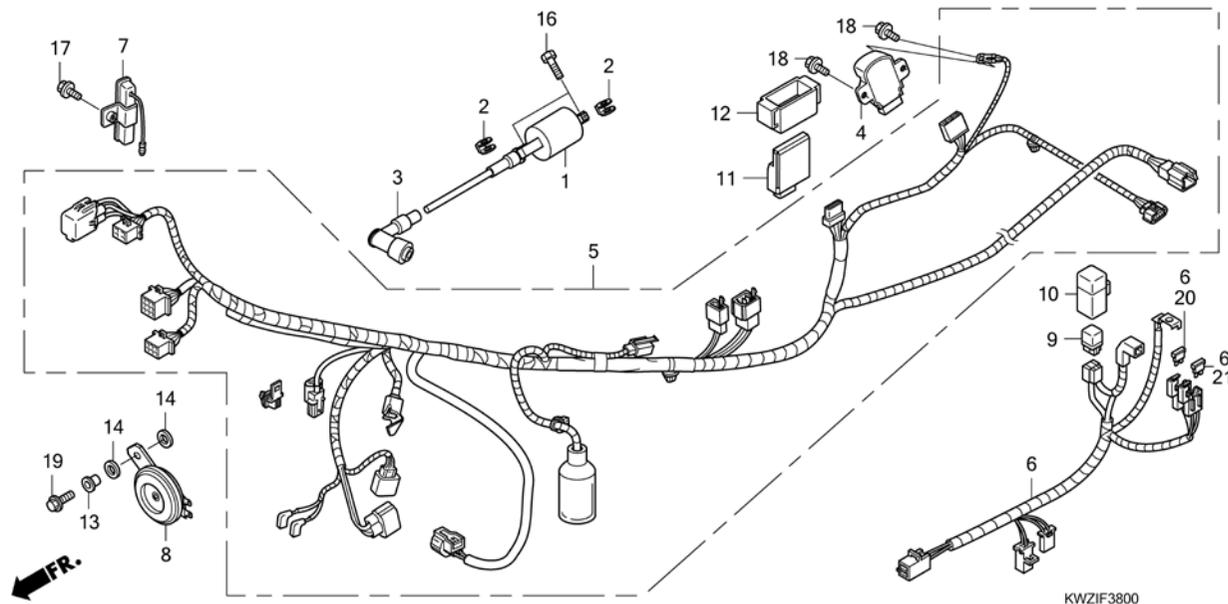

3

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	COIL, IGNITION	0,8	1	30500-KWZ-901	COIL COMP, IGNITION	1	
4	RECTIFIER, REGULATE.....	0,4	2	30520-GFM-900	SPACER, IGNITION COIL	2	
5	HARNESS, WIRE	1,0	3	30700-KWW-A01	CAP ASSY., NOISE SUPPRESSOR	1	
6	SUB HARNESS, BATTERY	0,4	4	31600-KVB-T01	RECTIFIER COMP., REGULATE	1	
7	RESISTOR(FRAME OR ENGINE)	0,3	5	3210A-KWZ-750	HARNESS, WIRE ASSY	1	
8	HORN(S)	0,2	6	32103-KWZ-750	SUB HARNESS, BATTERY	1	
9	RELAY, STARTER	0,2	7	35400-GT3-620	RESISTOR ASSY. (20W)	1	
11	ENGINE CONTROL MODULE(ECM)	0,5	8	38110-KWW-A41	HORN COMP. (HIGH)	1	
			9	38501-KPH-902	RELAY COMP., STARTER	1	
			10	38506-KWW-A41	SUSPENSION, STARTER RELAY	1	
			11	38770-KWZ-751	PGM-FI UNIT	1	
			12	38771-KTY-D30	CUSHION, PGM-FI UNIT	1	
			13	38117-KPH-880	COLLAR, HORN SETTING	1	
			14	33714-KL3-620	RUBBER, TAILLIGHT BRACKET	2	
			16	92101-06020-4J	BOLT, HEX., 6X20	2	
			17	95701-06012-00	BOLT, FLANGE, 6X12	1	
			18	95701-06014-0	BOLT, FLANGE, 6X14	2	
			19	95701-06016-00	BOLT, FLANGE, 6X16	1	
			20	98200-41000	FUSE, MINI (10A)	1	
			21	98200-41500	FUSE, MINI (15A)	1	

F - 39 Frame Body

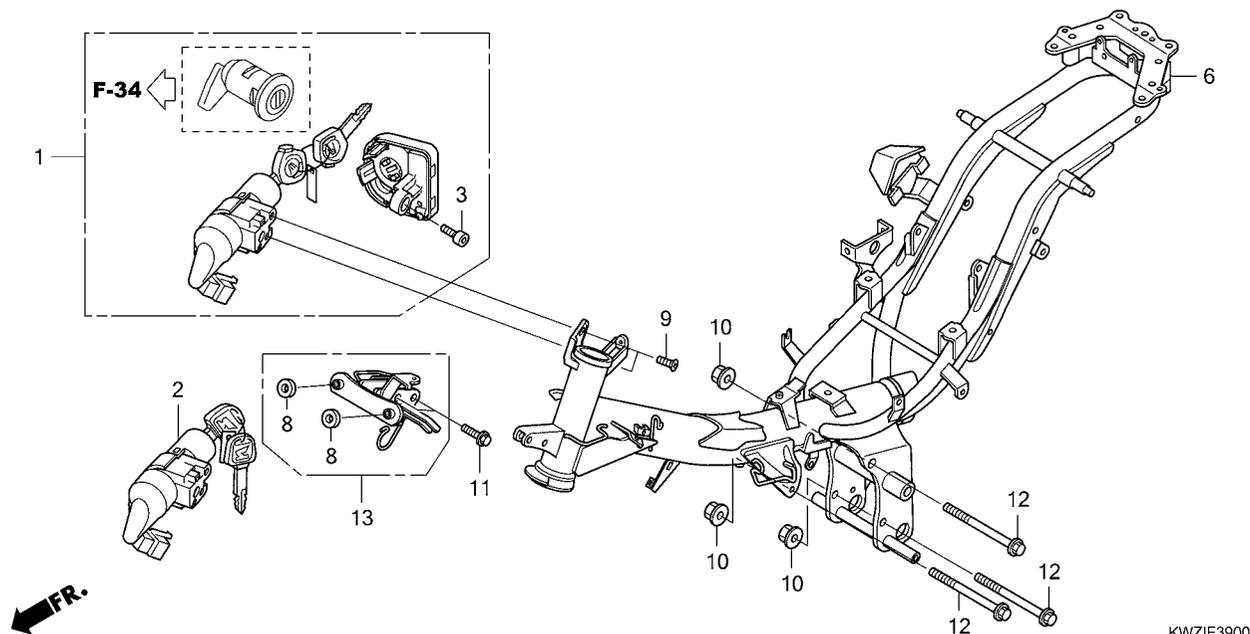


KWZIF3900

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	KEY SET.....	1,8	1	35010-KWZ-840	KEY SET	1	
2	SWITCH, COMBINATION & LOCK	1,7	2	35100-KWZ-841	SWITCH ASSY., COMBINATION & LOCK	1	
4	KEY, SHUTTER	1,6	3	35109-KWW-A01	BOLT, SOCKET, 5X8	1	
6	BODY, FRAME	5,9	6	50100-KWZ-750	BODY COMP., FRAME	1	
	.TERMASUK: Pelepasan dan pemasangan mesin		8	64510-KWW-A00	RUBBER, FR. TOP COVER	2	
			9	90164-028-000	SCREW, U-LOCK FLAT, 6X12.....	2	
			10	94050-10080	NUT, FLANGE, 10MM	3	
			11	95701-08032-00	BOLT, FLANGE, 8X32.....	2	
			12	95801-10110-08	BOLT, FLANGE, 10X110	3	
			13	64220-KWZ-750	STAY SET, FR. TOP COVER	1	

F - 44

Front Top Cover / Position Light

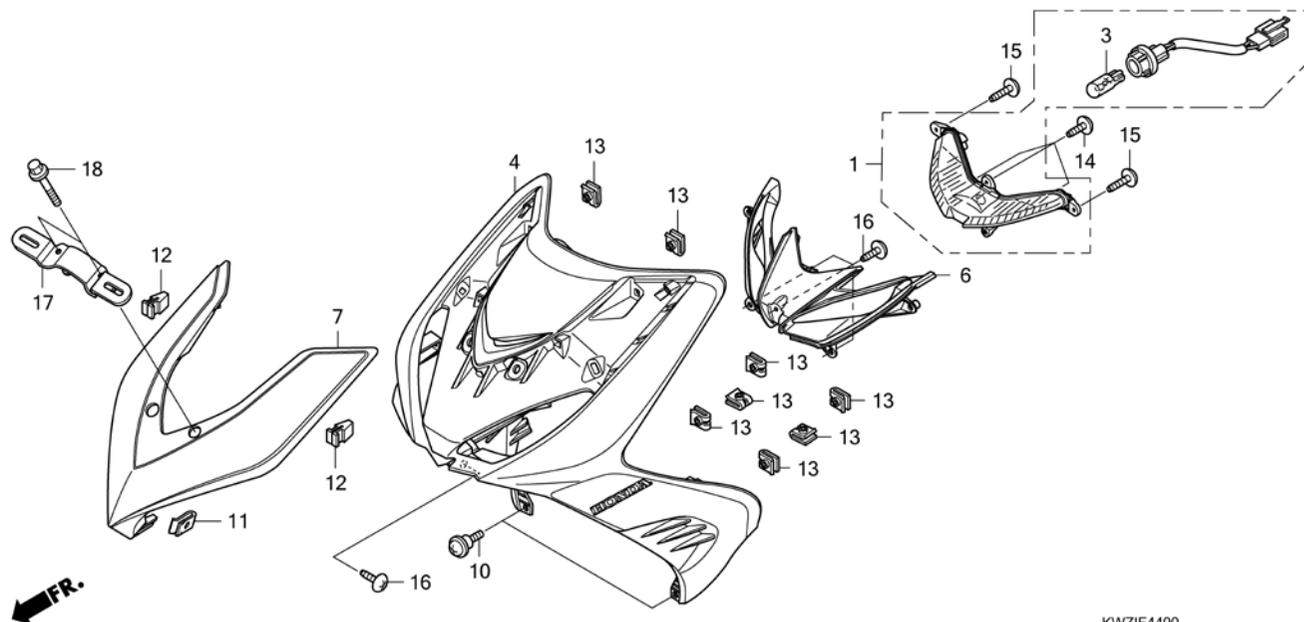


KWZIF4400

3

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1	LENS, POSITION LIGHT.....	0,2	1	33180-KWZ-901	LIGHT ASSY, POSITION	1	
2	SOCKET, POSITION LIGHT.....	0,2	3	34351-657-921	BULB (12V/5W)	1	
3	BULB, POSITION LIGHT.....	0,1	4	64500-KWW-A70AFB	COVER, FR. TOP		
4	COVER, FRONT LOWER	0,3		64500-KWW-A70POV	*NHB12M* AFFINITY BLACK METALLIC	1	
				64500-KWW-A70CSR	*P101P* PEARL ODYSSEY VIOLET	(1)	
6	LOUVER, FRONT TOP	0,3		64500-KWW-A70CSR	*R333C* CANDY SCARLET RED	(1)	
7	COVER, FRONT TOP	0,1	6	64520-KWZ-900AGM	LOUVER, FR. TOP		
				64520-KWZ-900WRD	*NH229MU* ANCHOR GRAY METALLIC-U.....	1	
				64550-KWW-A70DSM	*R258* WINNING RED.....	1	
			7	64550-KWW-A70DSM	COVER, FR. UPPER		
					NHA30M..... DIGITAL SILVER METALLIC	1	
			10	90115-KW7-900	SCREW, VISOR SPECIAL SETTING	2	
			11	90302-GW3-980	NUT, SPRING, 4MM	1	
			12	90666-SDA-A01	CLIP, SNAP FITTING (PO)	2	
			13	90677-KAN-T00	NUT, CLIP, 5MM	8	
			14	93903-24310	SCREW, TAPPING, 4X12	3	
			15	93903-24510	SCREW, TAPPING, 4X20	2	
			16	93903-34320	SCREW, TAPPING, 4X12	4	
			17	81110-KWW-A70	BRACKET, FR. NUMBER PLATE	1	
			18	95701-06045-01	BOLT, FLANGE, 6X45.....	2	

F - 44 - 10


Main Pipe Cover

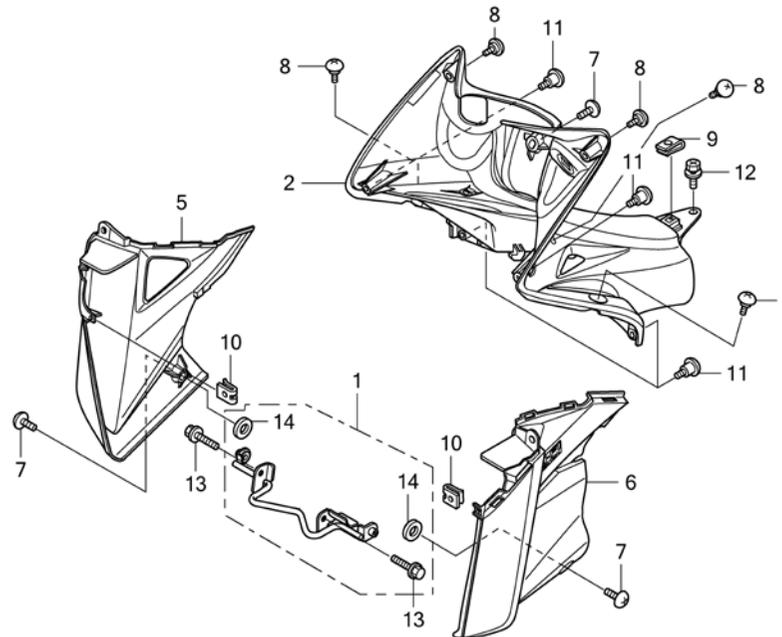

KWZIF4410

Ref No.	(Relative ref. Number) Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes	
2	COVER, MAIN PIPE UPPER.....	0,5	1	6431A-KWZ-750	STAY, LOWER M/P COVER ASSY	1		
5	COVER, MAIN PIPE SIDE :RIGHT	0,2	2	64320-KWZ-750DSM	COVER, MAIN PIPE *NHA30M*....DIGITAL SILVER METALLIC	1		
6	COVER, MAIN PIPE SIDE :LEFT	0,2	5	64400-KWZ-900AFB	COVER, R. MAIN PIPE SIDE *NHB12M* AFFINITY BLACK METALLIC	1		
					64400-KWZ-900POV	*P101P* PEARL ODYSSEY VIOLET	(1)	
					64400-KWZ-900CSR	*R333C* CANDY SCARLET RED	(1)	
6	COVER, MAIN PIPE SIDE :BOTH.....	0,3	6	64410-KWZ-900AFB	COVER, L. MAIN PIPE SIDE *NHB12M* AFFINITY BLACK METALLIC	1		
					64410-KWZ-900POV	*P101P* PEARL ODYSSEY VIOLET	(1)	
					64410-KWZ-900CSR	*R333C* CANDY SCARLET RED	(1)	
7			7	90107-KGH-600	SCREW, 6X12	3		
8			8	90115-KW7-900	SCREW, VISOR SPECIAL SETTING	6		
9			9	90302-GW3-980	NUT, SPRING, 4MM	1		
10			10	90677-KAN-T00	NUT, CLIP, 5MM	2		
11			11	91422-KVB-900	SCREW, SPECIAL PAN, 5MM	4		
12			12	93401-06016-08	BOLT-WASHER, 6X16	1		
13			13	96001-06020-00	BOLT, FLANGE, 6X20.....	2		
14			14	90501-KWW-A00	RUBBER, HANDLE MOUNTING	2		


F - 45 Body Cover

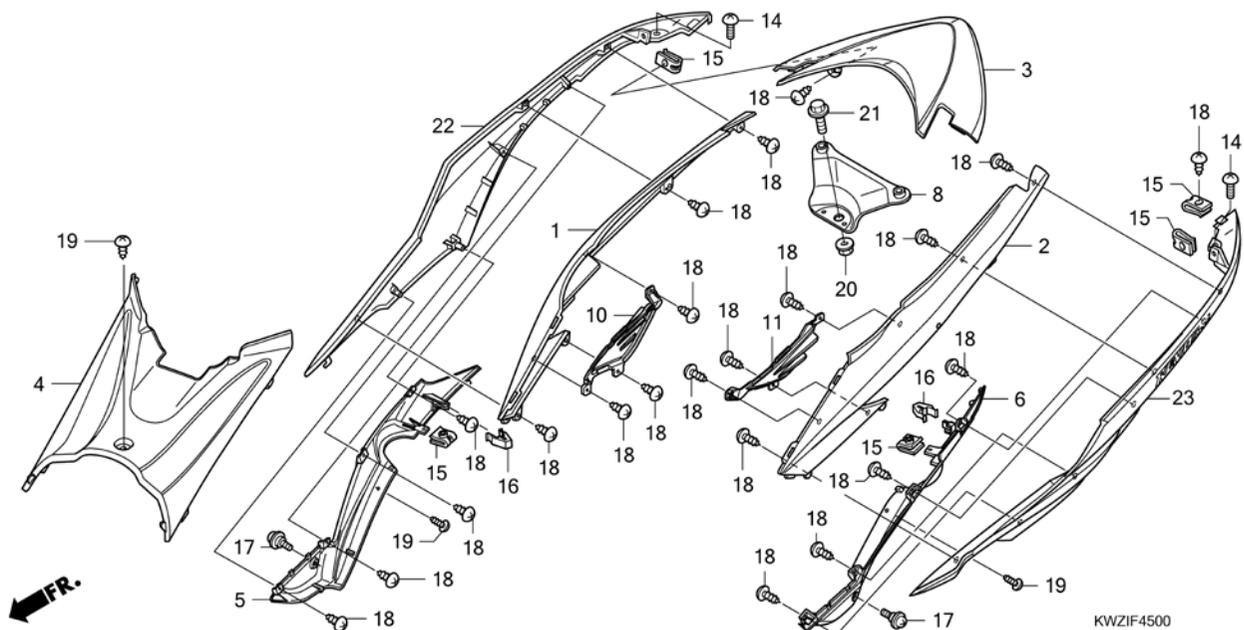

3

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
1 COVER, BODY :RIGHT	0,4	1	64321-KWZ-900AFB	COVER, R. BODY		
2 COVER, BODY :LEFT	0,4			*NHB12M* AFFINITY BLACK METALLIC	1	
COVER, BODY :BOTH.....	0,6		64321-KWZ-900POV	*P101P* PEARL ODYSSEY VIOLET	(1)	
3 COVER, TAILLIGHT	0,1		64321-KWZ-900CSR	*R333C* CANDY SCARLET RED	(1)	
4 COVER, BODY :CENTER.....	0,4	2	64322-KWZ-900AFB	COVER, L. BODY		
5 COVER, SIDE :RIGHT	0,4			*NHB12M* AFFINITY BLACK METALLIC	1	
			64322-KWZ-900POV	*P101P* PEARL ODYSSEY VIOLET	(1)	
6 COVER, SIDE :LEF.....	0,4		64322-KWZ-900CSR	*R333C* CANDY SCARLET RED	(1)	
COVER, SIDE :BOTH	0,5	3	64324-KWZ-900AFB	COVER, TAIL		
				NHB12M AFFINITY BLACK METALLIC	1	
			64324-KWZ-900POV	*P101P* PEARL ODYSSEY VIOLET	(1)	
			664324-KWZ-900CSR	*R333C* CANDY SCARLET RED	(1)	
		4	64325-KWZ-900DSM	COVER, CENTER		
				NHA30M.....DIGITAL SILVER METALLIC.....	1	
		5	64480-KWZ-750	COVER, R. RR. BODY	1	
		6	64490-KWZ-750	COVER, L. RR. BODY	1	
		8	64610-KWZ-900	STAY, SUB COVER BODY	1	
		10	64660-KWZ-900WRD	DUCT, R. RR.		
				R258 WINNING RED	1	
			64660-KWZ-900AGM	*NH229MU* ANCHOR GRAY METALLIC-U.....	(1)	


F - 45 Body Cover

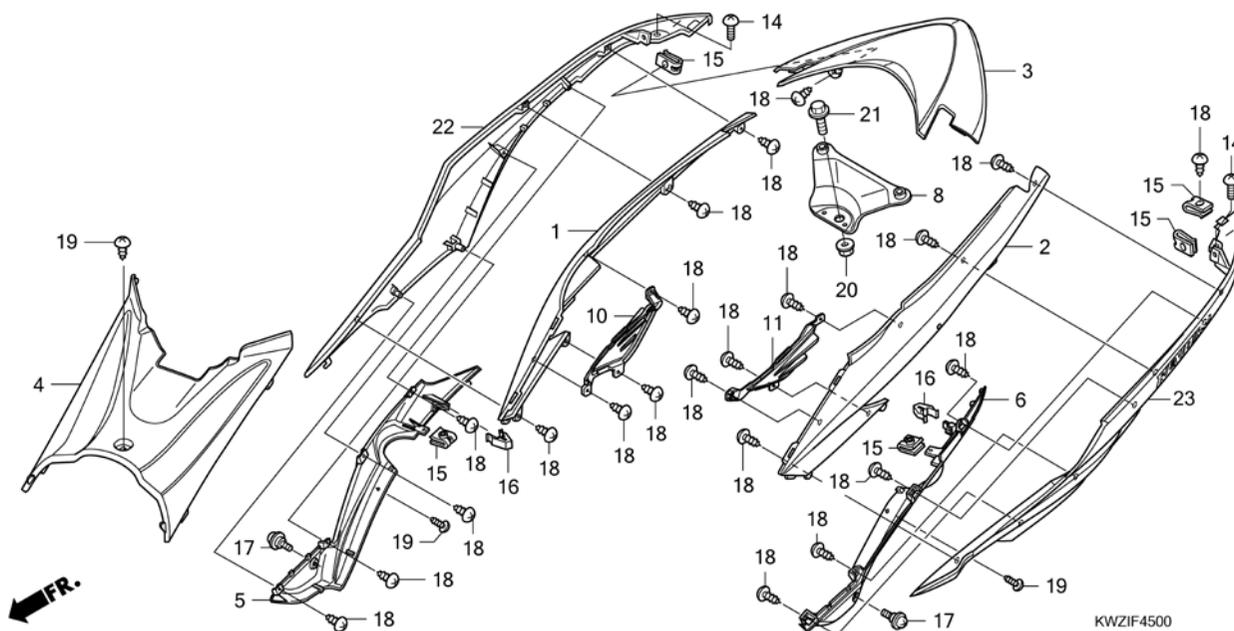

KWZIF4500

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
		11	64670-KWZ-900WRD	DUCT, L. RR. *R258* WINNING RED.....	1	
			64670-KWZ-900AGM	*NH229MU*..... ANCHOR GRAY METALLIC-U	(1)	
		14	90107-KGH-600	SCREW, 6X12	2	
		15	90302-GW3-980	NUT, SPRING, 4MM	5	
		16	90666-SDA-A01	CLIP, SNAP FITTING (PO)	2	
		17	91509-GE2-760	SCREW, PAN, 5X11.5	2	
		18	93903-34320	SCREW, TAPPING, 4X12	23	
		19	93903-34380	SCREW, TAPPING, 4X12	3	
		20	94050-08000	NUT, FLANGE, 8MM	1	
		21	95701-08014-00	BOLT, FLANGE, 8X14	1	
		22	64600-KWZ-900DSM	COVER, R SUB BODY *NHA30M*.....DIGITAL SILVER METALLIC.....	1	
		23	64650-KWZ-900DSM	COVER, L SUB BODY *NHA30M*.....DIGITAL SILVER METALLIC.....	1	

F - 48 Tools

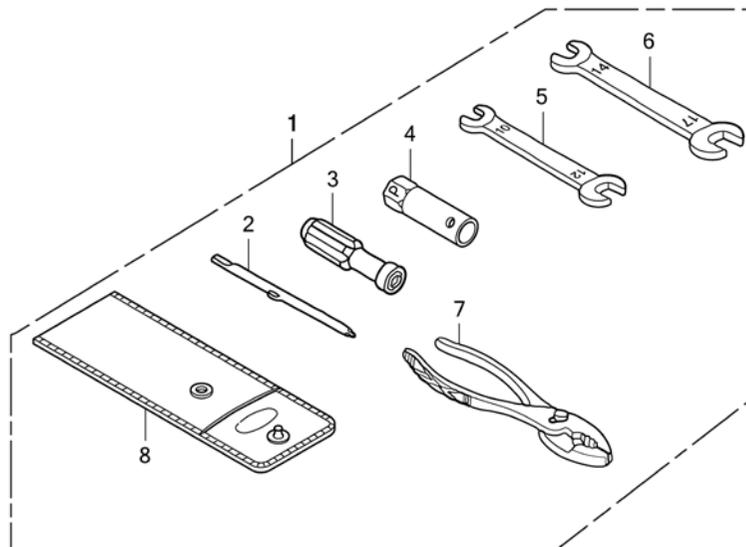


KWZIF4800

3

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
		1	89010-KWW-A00	TOOL SET	1	
		2	89102-538-000	DRIVER, SCREW (NO.2 + -)	1	
		3	89103-538-000	GRIP	1	
		4	89216-KVY-960	WRENCH, SPARK PLUG.....	1	
		5	99001-10120	SPANNER, 10X12	1	
		6	99001-14170	SPANNER, 14X17	1	
		7	99002-13500	PLIERS, 135	1	
		8	99008-01600	BAG, TOOL, 160MM	1	

F - 49


Caution Label

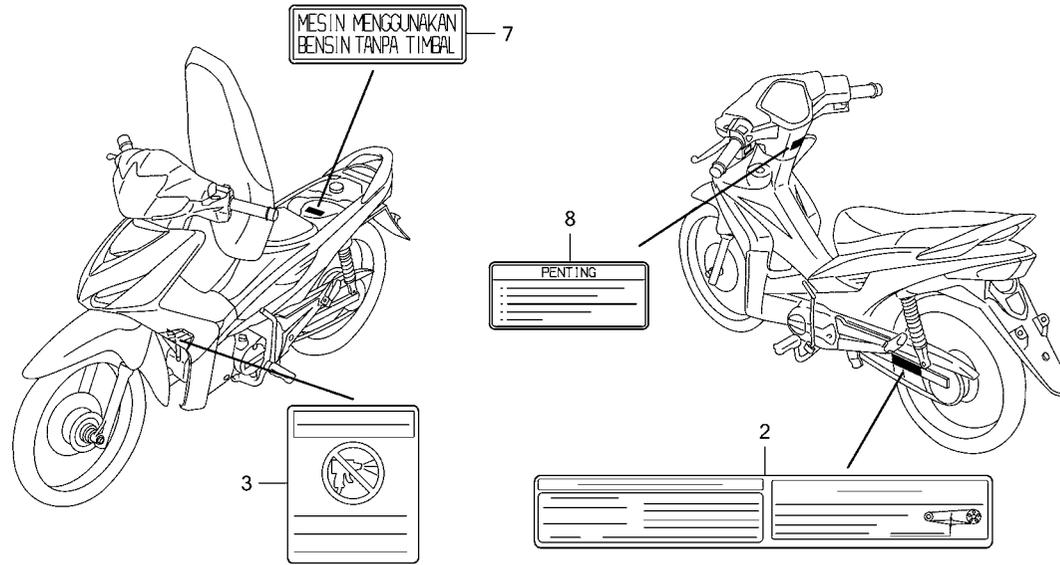

KWZIF4900

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
		2	87505-KWB-920	LABEL, TIRE & DRIVE CHAIN	1	
		3	87509-KWW-A40	LABEL, AIR CLEANER ELEMENT	1	
		7	87586-KVB-930	LABEL, FUEL	1	
		8	87560-KVB-930	LABEL, DRIVE CAUTION	1	

F - 50
Mark / Emblem

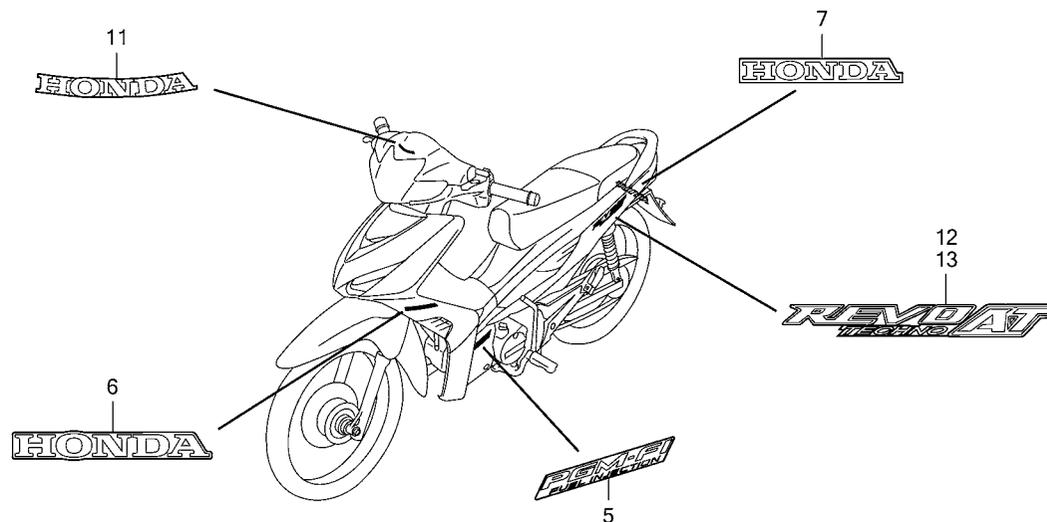

KWZIF5000

Ref (Relative ref. Number) No. Description	F.R.T.	Ref No.	Part No.	Description	QTY	Notes
		5	86642-KWZ-750ZA	MARK, PGM-FI		
				TYPE1.....	2	
			86642-KWZ-750ZB	*TYPE2*.....	2	
			86642-KWZ-750ZC	*TYPE3*.....	2	
		6	86641-KWZ-750ZA	MARK, HONDA (80MM)		
				TYPE1.....	2	
			86641-KWZ-750ZB	*TYPE2*.....	2	
			86641-KWZ-750ZC	*TYPE3*.....	2	
		7	86801-KWZ-750	MARK, HONDA (55MM).....	1	
		11	86531-KWW-A70	EMBLEM, HONDA	1	
		12	86643-KWZ-750	EMBLEM, R. SUB BODY COVER	1	
		13	86644-KWZ-750	EMBLEM, L. SUB BODY COVER	1	

INDEXS PART NUMBER

Part Number	Block No.	Part Number	Block No.	Part Number	Block No.	Part Number	Block No.	Part Number	Block No.
(00000)		13051-KWZ-305	E20	16400-KWZ-902	E22	(20000)		28271-KWZ-900	E15
06451-961-405	F12	13101-KWZ-900	E20	16401-KTM-D21	E22	22011-GCC-770	E16	28281-KWZ-900	E15
06455-KWB-601	F12	13102-KWZ-305	E20	16422-GBJ-M31	E22	22100-KWZ-900	E17-20	28282-KWZ-900	E15
06530-GBG-B20	F9	13103-KWZ-305	E20	16432-GFM-901	E22	22102-KWZ-900	E16	28300-KWZ-840	F29
06531-GBG-B20	F9	13104-KWZ-305	E20	16433-HN8-A61	E22	22105-GGE-900	E16	(30000)	
06535-GN5-505	F9	13105-KWZ-305	E20	16436-KTM-D22	E22	22110-KWZ-900	E16	30500-KWZ-901	F38
(10000)		13111-087-001	E20	16450-KSS-B31	E22	22123-KWZ-305	E16	30520-GFM-900	F38
11100-KWZ-900	E19	13115-GN5-911	E20	16472-KPH-701	E22	22131-KVB-900	E16	30700-KWW-A01	F38
11108-KWZ-900	E17-10	13312-KWZ-900	E20	16700-KWZ-901	F21	22350-KWZ-900	E17-20	31110-KWWW-711	E8
11200-KWZ-900	E19	14100-KWZ-901	E4	16718-KTW-900	F21	22361-KWZ-900	E17-20	31120-KWZ-902	E8
11218-KWB-600	E19	14125-KVY-900	E4	1720A-KWZ-750	F25	22401-KWZ-901	E17-20	31204-KG8-004	E12
11321-KWZ-900	E7	14126-KPG-T00	E4	17210-KWZ-900	F25	22517-25017-0000	F14-40	31206-GW3-004	E12
11322-KWZ-900	E7	14321-KWB-600	E5	17213-KWB-600	F25	22535-KWZ-305	E17-20	31210-KWB-921	E12
11323-KWZ-901	E7	14401-KWB-920	E5	17214-KWB-600	F25	22804-GB2-880	E17-20	31500-KWW-A01	F23
11331-KWZ-900	E7	1443A-KWB-920	E4	17227-KPK-900	F25	23100-KWZ-901	E17	31600-KVB-T01	F38
11332-KWZ-900	E7	1444A-KWB-920	E4	17230-KWZ-900	F25	23210-KWZ-900	E17	31916-KWB-601	E3
11341-KWZ-900	E13	14451-KWB-600	E4	17231-KWZ-900	F25	23217-KWZ-900	E17-10	31926-KWB-601	E3
11346-KTR-940	E7	14500-KWB-600	E5	17234-KWW-B80	F25	23220-KWZ-900	E17	32101-GW3-780	E12
11346-KTR-940	E13	14502-086-001	E5	17241-KWZ-900	F25	23225-KSY-900	E17	32103-KWZ-750	F38
11346-KWZ-900	E7	14531-KWB-600	E5	17242-KWZ-900	F25	23226-KVB-900	E17	32105-KWZ-840	E12
11347-KTR-940	E13	14541-GB4-682	E5	17253-KWZ-900	F25	23233-KWZ-900	E17	3210A-KWZ-750	F38
1134B-KVY-900	E7	1455A-KTL-GB0	E5	17254-KVB-T00	E7	23236-KWZ-900	E17	33100-KWZ-751	F1
11360-KWZ-900	E13	14566-086-031	E5	17254-KWZ-900	F25	23237-GCC-C50	E17	33115-KBA-830	F1
11370-KWZ-900	E7	14610-KWB-600	E5	17256-KWZ-900	F25	23238-GCC-000	E17	33180-KWZ-901	F44
11394-KWZ-900	E7	14615-KFL-851	E5	17510-KWZ-750	F21	23241-KWZ-900	E17-20	33619-459-840	F27
11395-KWZ-900	E7	14670-KWB-600	E5	17517-KWB-600	F21	23411-KWZ-900	E17-20	33702-KWW-A01	F36-10
11396-KWZ-900	E13	14675-KWB-600	E5	17570-KWZ-900	F21	23421-KWZ-900	E17-10	33705-KW7-900	F36-10
12100-KWZ-750	E6	14711-KWB-600	E4	17572-KWB-600	F21	23422-KWZ-900	E17-10	33705-KWW-A01	F36-10
12191-KWB-921	E6	14721-KVY-900	E4	1757A-KWZ-750	F21	23430-KWZ-900	E17-10	33706-KAN-961	F36-10
12204-KVY-901	E3	14751-KWB-921	E4	17620-KGH-600	F21	23801-KTE-910	E17-10	33706-KWZ-751	F36-10
12206-KPL-900	E3	14771-GB4-680	E4	17631-KEV-900	F21	23811-KR3-600	E17-10	3370A-KWZ-750	F36-10
12209-GB4-682	E4	14775-KVY-900	E4	17910-KWZ-750	F4	27517-0000-00000	F19-30	33714-KL3-620	F38
1220A-KWZ-750	E3	14781-MA6-000	E4	18291-GE2-920	F27	28110-KWB-920	E12	33752-KWW-A01	F36-10
12212-KWZ-900	E3	15100-KWB-600	E11	18293-KPK-901	F27	28120-KPH-701	E8	33756-KWZ-751	F36-10
12251-KWB-601	E3	15119-KWB-600	E11	18300-KWZ-750	F27	28120-KWB-921	E8	34351-657-921	F44
12251-KWZ-901	E3	15421-035-010	E11	18317-KWZ-900	F27	28130-KWB-920	E12	34901-KPH-881	F1
12310-KWZ-900	E2	1565A-KWZ-750	E13	18318-KWZ-900	F27	28132-KPH-900	E12	34905-KAN-W01	F1
12391-KWB-600	E2	1576A-KWB-600	F25	18345-MBT-610	F27	28231-KWZ-900	E15	34905-KAN-W01	F36-10
12391-KWW-600	E2	16080-KPH-701	E22	18350-KWZ-750	F27	28232-KWZ-900	E15	34906-GB6-921	F36-10
1300A-KWZ-750	E20	16081-KPH-701	E22	18421-KBA-900	F27	28233-KWZ-900	E15	34908-GA7-701	F2
13011-KWZ-305	E20	16082-KPH-701	E22	18422-KWW-A40	F27	28234-KWZ-900	E15	34908-KVE-900	F2
13021-KWZ-305	E20	16083-KTR-941	E22	19741-KWZ-900	E7	28235-KWZ-900	E20	34908-MB9-871	F2
13031-KWZ-305	E20	16169-KTM-D21	E22	19742-KWZ-900	E7	28242-KWZ-900	E15	34909-KVR-600	F2
13041-KWZ-305	E20	1620A-KWZ-750	E3	19743-KWZ-900	E7	28251-KWZ-900	E15	35010-KWZ-840	F39
		16217-KPH-700	E3			28262-041-731	E15	35100-KWZ-841	F39



INDEXS PART NUMBER

Part Number	Block No.	Part Number	Block No.	Part Number	Block No.	Part Number	Block No.	Part Number	Block No.
35109-KWW-A01	F39	42653-001-004	F19-30	45521-GW0-913	F5	51454-KEV-881	F11	64321-KWZ-900POV	F45
35150-KWW-A01	F4	42711-KWW-010	F19-30	45530-KVY-911	F5	51456-KPH-901	F11	64322-KWZ-900AFB	F45
35160-KWW-A01	F4	43100-KPH-700	F18	4650A-KWZ-750	F29	51466-065-901	F11	64322-KWZ-900CSR	F45
35170-KWW-A01	F4	43125-KPH-903	F18	46510-KJ9-000	F29	51470-KWW-A01	F11	64322-KWZ-900POV	F45
35180-KWW-A01	F4	43141-KTM-850	F18	46513-KBP-900	F29	51500-KWZ-751	F11	64324-KWZ-9000POV	F45
35200-KWW-A01	F4	43352-568-004	F12	46620-KWZ-840	F29	51520-KWW-A31	F11	64324-KWZ-900AFB	F45
35340-KWB-601	F5	43353-461-772	F12	46625-KWZ-900	F29	5210A-KWZ-750	F32	64325-KWZ-900DSM	F45
35350-KWZ-901	F29	43410-KWB-600	F18	46633-KJ9-000	F29	52170-KWZ-750	F32	64341-KWW-A00	F7
35357-KCC-900	F29	43431-KWB-600	F32	46633-KJ9-000	F31	52400-KWZ-751	F33	64400-KWZ-900AFB	F44-10
35400-GT3-620	F38	43434-ME1-670	F18	(50000)		52485-GA7-003	F33	64400-KWZ-900CSR	F44-10
35700-KWZ-900	F31	43451-KWZ-900	F29	50100-KWZ-750	F39	52485-KVY-901	F33	64400-KWZ-900POV	F44-10
36532-KWZ-901	E3	43513-KBP-882	F5	50306-GN5-901	F9	52486-GA7-003	F33	64410-KWZ-900AFB	F44-10
36535-KWB-600	E3	44301-KWB-600	F14-40	50351-KWZ-900	F30	52486-KWZ-900	F33	64410-KWZ-900CSR	F44-10
37200-KWZ-751	F2	44311-KWB-920	F14-40	50381-KWZ-750	F23	53100-KWW-630	F7	64410-KWZ-900POV	F44-10
37201-KWZ-751	F2	44601-KWB-921	F14-40	50400-KWZ-900AFB	F23	53105-KWB-600	F7	64480-KWZ-750	F45
37211-KWW-A01	F2	44620-KPH-951	F14-40	50400-KWZ-900CSR	F23	53106-KR3-000	F7	64490-KWZ-750	F45
37215-KS3-901	F2	44711-KWW-010	F14-40	50400-KWZ-900POV	F23	53108-KR3-770	F7	64500-KWW-A70AFB	F44
37224-KWZ-751	F2	44800-KWB-600	F14-40	50500-KWZ-900	F31	53125-KWZ-900	F7	64500-KWW-A70CSR	F44
37305-KE5-008	F2	44806-KWB-600	F14-40	50512-KWZ-900	F31	53140-KWW-620	F4	64500-KWW-A70POV	F44
37750-KPH-701	E6	44809-KFM-900	F14-40	50520-KWZ-900	F31	53166-KWB-600	F4	64510-KWW-A00	F39
37890-GEY-642	E22	44830-KWW-A00	F2	50523-KWZ-901	F31	53167-KFM-900	F4	64520-KWZ-900AGM	F44
38110-KWW-A41	F38	45111-MAJ-G42	F12	50524-397-000	F31	53168-KFM-900	F4	64520-KWZ-900WRD	F44
38117-KPH-880	F38	45126-KWW-A40	F5	50524-KWZ-900	F31	53175-KRS-T80	F5	64521-MN5-000	F7
38301-GBG-911	F2	45131-GZ0-007	F12	50530-KWZ-750	F31	53200-KWZ-750	F9	64550-KWW-A70DSM	F44
38306-KK4-000	F2	45132-166-017	F12	50535-KWZ-900	F31	53203-KWW-A00AFB	F7	64600-KWZ-900DSM	F45
38501-KPH-902	F38	45133-028-000	F18	5053A-KWZ-750	F31	53203-KWW-A00CSR	F7	64610-KWZ-900	F45
38506-KWW-A41	F38	45133-MA3-007	F12	50610-KWZ-900	F30	53203-KWW-A00POV	F7	64650-KWZ-900DSM	F45
38770-KWZ-751	F38	45134-250-001	F18	50612-KPH-900	F30	53205-KWW-A00	F7	64660-KWZ-900AGM	F45
38771-KTY-D30	F38	45145-KFM-900	F18	50613-KFL-850	F30	53206-KWZ-840DSM	F7	64660-KWZ-900WRD	F45
(40000)		45156-KWW-A40	F5	50661-KWZ-900	F30	53208-KWZ-840	F7	64670-KWZ-900AGM	F45
40510-KWZ-750	F32	45157-KWW-A00	F5	50713-KWW-9A0	F30	53209-GAH-000	F1	64670-KWZ-900WRD	F45
40530-KWB-602	F32	45208-KWB-601	F12	50714-KBA-930	F30	53214-GN5-900	F9	664324-KWZ-900CSR	F45
40530-KWB-921	F32	45215-KPH-951	F12	50714-KWW-9A0	F30	53216-GN5-830	F9	(70000)	
4054A-KWW-A00	F18	45216-166-007	F12	50715-KE8-000	F30	53220-GN5-900	F9	75581-KWZ-900	F34
4054A-KWW-A00	F19-30	45218-KWB-601	F12	50715-KWZ-900	F30	(60000)		77200-KWZ-750	F23
41200-KWZ-750	F19-30	45250-KWB-921	F12	50716-KWZ-900	F30	61100-KWW-A00AFB	F10	77201-KWB-600	F23
41241-KWB-601	F19-30	45251-KWB-921	F14-40	51400-KWZ-751	F11	61100-KWW-A00CSR	F10	77214-KPH-900	F23
42301-KWB-600	F19-30	45290-KWB-601	F12	51401-KWB-601	F11	61100-KWW-A00POV	F10	77230-KWZ-900	F23
42303-KWW-B60	F19-30	45465-KTL-740	F10	51410-KWB-601	F11	61200-KWZ-840	F10	77234-GN2-000	F23
42304-KFM-900	F19-30	45504-410-004	F5	51412-GN5-901	F11	64220-KWZ-750	F39	77236-KWZ-900	F34
42313-GBG-B20	F18	45510-KWB-600	F5	51412-KWB-601	F11	6431A-KWZ-750	F44-10	77240-KTM-851	F34
42601-KWB-921	F19-30	45512-MA6-007	F5	51420-KWW-A31	F11	64320-KWZ-750DSM	F44-10	(80000)	
42615-KWB-920	F19-30	45517-GW0-751	F5	51425-GN5-901	F11	64321-KWZ-900AFB	F45	8010A-KWZ-750	F34
42620-KFL-851	F19-30	45520-GW0-912	F5	51437-KWB-601	F11	64321-KWZ-900CSR	F45	80124-KPH-700	F23

INDEXS PART NUMBER

Part Number	Block No.	Part Number	Block No.	Part Number	Block No.	Part Number	Block No.	Part Number	Block No.
81110-KWW-A70	F44	90107-KGH-600	F44-10	90407-259-000	E19	91008-KVY-901	E13	93893-04012-18	F5
81253-KPH-900	F23	90107-KGH-600	F45	90412-KPH-900	E15	91031-KWZ-901	E17-20	93901-24610	F36-10
81257-KWC-900	F21	90107-KVV-900	F27	90412-KPH-901	E17-20	91102-GE0-003	E7	93903-24310	F44
8125A-KWZ-750	F23	90108-MK6-670	F31	90426-KVB-900	E8	91201-KWZ-902	E7	93903-24481	F7
81312-KPH-900	F5	90109-MZ5-008	F2	90426-KWZ-900	E16	91202-KWZ-901	E19	93903-24510	F44
81312-KPH-900	F10	90111-187-000	F32	90439-KWZ-900	E17	91203-459-771	E7	93903-25210	F25
83601-MN5-000	F7	90114-126-900	E7	90443-MB0-000	E6	91204-MC7-003	E19	93903-25310	F2
83601-MN5-000	F36-10	90114-KGH-901	F5	90462-KFL-851	E17-10	91211-GFC-771	E17	93903-25510	F25
86531-KWW-A70	F50	90115-KW7-900	F44	90463-ML7-000	E5	91216-KGH-902	E19	93903-34120	E7
86641-KWZ-750ZA	F50	90115-KW7-900	F44-10	90475-KWB-600	E5	91251-KPH-881	F19-30	93903-34320	F44
86641-KWZ-750ZB	F50	90116-KV3-702	F11	90501-KPH-880	F7	91251-KPH-901	F14-40	93903-34320	F45
86641-KWZ-750ZC	F50	90116-KVB-900	F25	90501-KWW-A00	F7	91251-KWB-601	F14-40	93903-34380	F34
86642-KWZ-750ZA	F50	90116-KVB-900	F34	90501-KWW-A00	F44-10	91255-KWZ-901	F11	93903-34380	F45
86642-KWZ-750ZB	F50	90121-KWZ-900	F32	90501-KWZ-900	F27	91301-KPH-701	E22	94001-05070-0S	F4
86642-KWZ-750ZC	F50	90128-KWB-600	F19-30	90502-KPH-900	F23	91302-KWZ-901	E17-20	94001-06000-0S	F18
86643-KWZ-750	F50	90131-KPH-881	F12	90503-KBP-900	F7	91303-377-001	E13	94001-06000-0S	F19-30
86644-KWZ-750	F50	90131-KWB-600	F30	90503-KBP-900	F10	91303-KF0-003	E20	94001-06070-0S	F23
86801-KWZ-750	F50	90132-KV7-671	F29	90505-425-000	F18	91304-KPH-700	E3	94001-08000-0S	F18
87505-KWB-920	F49	90145-GAZ-981	F5	90505-KPH-880	F7	91307-035-001	E13	94001-08000-0S	F32
87509-KWW-A40	F49	90147-KVY-900	F31	90543-MV9-671	E2	91309-KEE-630	E12	94001-10000-0S	F33
87560-KVB-930	F49	90164-028-000	F39	90544-283-000	F11	91351-642-000	E17	94001-14000-0S	E8
87586-KVB-930	F49	90191-KWB-600	F7	90544-KF0-000	E5	91351-GR1-000	E17	94021-10000-1S	F33
88110-KWW-A00	F4	90201-GCC-000	E3	90545-300-000	F5	91356-GM0-003	F11	94030-14200	E16
88120-KWW-A00	F4	90203-KVB-900	F31	90601-KAF-003	F29	91422-KVB-900	F44-10	94031-10000	F32
89010-KWW-A00	F48	90301-KGH-901	F18	90605-166-720	E17-20	91509-GE2-760	F7	94050-0600	F5
89102-538-000	F48	90301-KWB-600	F27	90608-072-001	E15	91509-GE2-760	F45	94050-08000	F27
89103-538-000	F48	90302-GW3-980	F34	90634-KPG-900	F23	92101-06020-4J	F38	94050-08000	F45
89216-KVY-960	F48	90302-GW3-980	F44	90651-MA5-672	F5	92800-12000	E19	94050-10000	F30
(90000)		90302-GW3-980	F44-10	90666-SDA-A01	F44	92811-10000	F18	94050-10080	F39
90002-KWB-600	E3	90302-GW3-980	F45	90666-SDA-A01	F45	92812-10000	F32	94050-12001	E17
90005-GHB-610	E7	90302-KBP-900	F18	90677-KAN-T00	F44	92900-08032-1E	E3	94101-05000	F29
9001A-KWC-900	E2	90302-KBP-900	F19-30	90677-KAN-T00	F44-10	93101-KWB-8A0	E19	94101-06000	F30
90031-KWB-600	E19	90302-KWW-A00	F7	90683-GAZ-003	F21	93401-06016-08	F44-10	94101-08000	F32
90035-166-008	F2	90304-KGH-901	F7	90701-KFM-901	E2	93404-06012-00	E3	94101-10000	F33
90081-035-000	E5	90305-KWW-A00	F10	90701-KFM-901	E3	93404-06012-00	E15	94103-08000	F27
90083-KWB-8A0	E5	90306-KGH-901	F14-40	90701-KFM-901	E6	93500-04010-0G	F21	94111-10000	F32
90084-041-000	E17-10	90306-KGH-901	F18	90703-HC4-001	E19	93500-04025-0G	E7	94201-16150	F30
90084-GN5-830	E13	90309-KPH-971	F19-30	90741-003-010	E20	93500-05025-0G	F4	94201-20150	F18
90085-KTC-920	E8	90314-KFM-840	F4	90899-422-610	F34	93600-04012-1G	F5	94201-20150	F29
90101-GJ6-000	F1	90314-KTM-850	F4	91001-KWZ-751	E19	93891-04012-07	F7	94201-20150	F32
90102-KGH-900	F5	90325-KCC-900	F30	91001-KWZ-901	E19	93891-04016-08	F7	94201-30251	F31
90105-KGH-901	F14-40	90401-KWZ-900	E17-20	91002-KWZ-751	E19	93892-04006-08	E12	94301-08141	E7
90105-KPH-900	F23	90402-KWZ-900	E15	91005-KWB-921	E12	93892-05012-18	E22	94301-08141	E13
90106-GN5-900	F7	90404-KWB-600	E5	91005-KWZ-901	E7	93892-05016-08	E12	94510-17000	E17-10



INDEXS PART NUMBER

Part Number	Block No.	Part Number	Block No.	Part Number	Block No.	Part Number	Block No.	Part Number	Block No.
94510-20001	E15	96001-06022-00	E11						
94510-34000	E17	96001-06025-00	E7						
94520-30000	E13	96001-06025-00	F10						
95002-41300-08	F25	96001-06030-00	F23						
95002-80001	F25	96001-06032-00	E12						
95002-80001	E7	96001-06035-00	E7						
95014-72102	F31	96001-06035-00	E13						
95014-73100	F29	96001-06040-00	E7						
95015-32001	F29	96001-06040-00	E13						
95015-42000	F29	96001-06040-00	E19						
95701-06012-00	E17-10	96001-06045-00	E7						
95701-06012-00	F21	96001-06050-00	E19						
95701-06012-00	F23	96001-06065-00	E19						
95701-06012-00	F31	96001-06100-0	E3						
95701-06012-00	F34	96100-62030-01	E19						
95701-06012-00	F38	96100-63010-00	E19						
95701-06014-0	F38	98200-41000	F23						
95701-06014-0	E3	98200-41000	F38						
95701-06016-00	F38	98200-41500	F23						
95701-06018-01	E5	98200-41500	F38						
95701-06020-00	E3	99001-10120	F48						
95701-06022-01	F5	99001-14170	F48						
95701-06025-00	F36-10	99002-13500	F48						
95701-06035-00	F18	99008-01600	F48						
95701-06045-01	F44								
95701-08014-00	F45	(H)							
95701-08020-07	F23	HB6201	E19						
95701-08025-00	E5	HB62012-RS	F14-40						
95701-08030-00	F27	HB6201RS	F19-30						
95701-08030-00	F30	HB6202	E19						
95701-08032-00	F30	HB6203	E19						
95701-08032-00	F39	HB6203RS	F19-30						
95701-08035-00	F29	HB6204	E19						
95701-08045-00	F27	HB6301RS	F19-30						
95701-10030-00	F31								
95801-10045-00	F9								
95801-10110-08	F39								
96001-06014-00	F5								
96001-06014-00	F10								
96001-06014-04	F27								
96001-06016-00	E8								
96001-06016-00	E11								
96001-06016-00	F7								
96001-06020-00	F44-10								
96001-06022-00	E8								

INDEKS DESCRIPTION

Part Name	Block No	Part Name	Block No	Part Name	Block No	Part Name	Block No
(A)		BOLT A, STOPPER ARM	F32	BOLT, FLANGE, 6X40	E7	BULB, HEADLIGHT	F1
ADJUSTER, R. CHAIN ASSY	F18	BOLT, ADJUSTING	F1	BOLT, FLANGE, 6X40	E19	BULB, TAILLIGHT (12V 18/5W)	F36-10
ADJUSTER, R. CHAIN ASSY	F19-30	BOLT, BODY COVER SETTING	F27	BOLT, FLANGE, 6X45	F44	BULB, WEDGE BASE (T10)	F2
AIR CLEANER ASSY SET	F25	BOLT, BRAKE DISK, 8X24	F14-40	BOLT, FLANGE, 6X50	E7	BULB, WEDGE BASE (T10)	F2
ARM ASSY., EX. VALVE ROCKER	E4	BOLT, DRAIN PLUG, 12MM	E19	BOLT, FLANGE, 6X65	E19	BULB, WEDGE BASE (T10)	F2
ARM ASSY., IN. VALVE ROCKER	E4	BOLT, DRIVE SPROCKET FIXING	E17-10	BOLT, FLANGE, 6X9	F29	BULB, WINKER (12V 10W)	F1
ARM ASSY., KICK STARTER	F29	BOLT, FLANGE (SH) 6X14	F27	BOLT, FLANGE, 8X14	F45	BULB, WINKER (12V 10W)	F36-10
ARM COMP., CAM CHAIN TENSIONER	E5	BOLT, FLANGE, 10X110	F39	BOLT, FLANGE, 8X20	F23	BUSH, RUBBER	F33
ARM COMP., RR. BRAKE STOPPER	F32	BOLT, FLANGE, 10X30	F31	BOLT, FLANGE, 8X25	E5	BUSH, RUBBER	F33
ARM, RR. BRAKE	F18	BOLT, FLANGE, 10X45	F9	BOLT, FLANGE, 8X30	F27	BUSH, STOPPER PLATE	F29
AXLE, FR. WHEEL	F14-40	BOLT, FLANGE, 10X50	F7	BOLT, FLANGE, 8X30	F30	BUSH, STOPPER PLATE	F31
AXLE, RR. WHEEL	F19-30	BOLT, FLANGE, 5X12	E3	BOLT, FLANGE, 8X32	F39	(C)	
(B)		BOLT, FLANGE, 5X20	E22	BOLT, FLANGE, 8X32	F30	CABLE COMP., BRAKE LOCK	F29
BAG, TOOL, 160MM	F48	BOLT, FLANGE, 6MM	E7	BOLT, FLANGE, 8X35	F29	CABLE COMP., SPEEDOMETER	F2
BALL SET, STEEL, #6X23	F9	BOLT, FLANGE, 6MM	F32	BOLT, FLANGE, 8X45	F27	CABLE COMP., THROTTLE	F4
BALL SET, STEEL, #6X29	F9	BOLT, FLANGE, 6MM	F34	BOLT, HANDLE LEVER PIVOT	F5	CALIPER SUB ASSY., R. FR	F12
BAND (ECU)	F23	BOLT, FLANGE, 6MM	F25	BOLT, HEAD COVER ASSY	E2	CAM, RR. BRAKE	F18
BAND, AIR CLEANER CONNECTING	F25	BOLT, FLANGE, 6X10	F5	BOLT, HEX., 6X14	E19	CAMSHAFT COMP	E4
BAND, CLUTCH COVER DUCT	E7	BOLT, FLANGE, 6X100	E3	BOLT, HEX., 6X20	F38	CAP ASSY., NOISE SUPPRESSOR	F38
BAND, CONNECTING TUBE (40)	E7	BOLT, FLANGE, 6X12	E17-10	BOLT, KNOCK, 5MM	E5	CAP, A.C. GENERATOR	E13
BAND, INSULATOR	E3	BOLT, FLANGE, 6X12	F34	BOLT, OIL, 10X22	F5	CAP, BLEEDER	F12
BAR ASSY, SIDE STAND	F31	BOLT, FLANGE, 6X12	E7	BOLT, PIN	F12	CAP, FUEL FILLER	F21
BAR COMP., SIDE STAND	F31	BOLT, FLANGE, 6X12	F21	BOLT, SEALING, 14MM	E5	CAP, MASTER CYLINDER	F5
BAR, L. PILLION STEP SET	F30	BOLT, FLANGE, 6X12	F23	BOLT, SEAT HINGE	F23	CASE COMP., L. FR. BOTTOM	F11
BAR, R. PILLION STEP SET	F30	BOLT, FLANGE, 6X12	F31	BOLT, SIDE STAND PIVOT	F31	CASE COMP., R. FR. BOTTOM	F11
BATTERY (GTZ4V)	F23	BOLT, FLANGE, 6X12	F38	BOLT, SOCKET, 5X8	F39	CASE, DRIVE CHAIN	F32
BEARING, NEEDLE, 16X20X34	E17-20	BOLT, FLANGE, 6X14	E3	BOLT, SOCKET, 6X14	E8	CASE., AIR CLEANER	F25
BEARING, NEEDLE, 20X26X18.2	E12	BOLT, FLANGE, 6X14	F10	BOLT, SOCKET, 8MM	F11	CATCH COMP., SEAT	F23
BEARING, RADIAL BALL, 6001	E13	BOLT, FLANGE, 6X14	F5	BOLT, STUD, 7X180.5	E19	CHAIN, CAM (90L)	E5
BEARING, RADIAL BALL, 6201	E19	BOLT, FLANGE, 6X14	F38	BOLT, STUD, 8X18	F19-30	CHAIN, DRIVE (420DX-102RB)	F32
BEARING, RADIAL BALL, 6201U	F19-30	BOLT, FLANGE, 6X16	E8	BOLT, STUD, 8X32	E3	CHAIN, DRIVE (RK420SL-102RJ)	F32
BEARING, RADIAL BALL, 6201UU	F14-40	BOLT, FLANGE, 6X16	E11	BOLT, SWINGARM PIVOT	F32	CIRCLIP	F5
BEARING, RADIAL BALL, 6202	E19	BOLT, FLANGE, 6X16	F7	BOLT, SWITCH SETTING	F31	CIRCLIP, 7MM	E17-20
BEARING, RADIAL BALL, 6202	E19	BOLT, FLANGE, 6X16	F38	BOLT, TORX, 8X25	F12	CIRCLIP, EXTERNAL, 17MM	E17-10
BEARING, RADIAL BALL, 6203	E19	BOLT, FLANGE, 6X18	E5	BOLT-WASHER, 6X12	E3	CIRCLIP, EXTERNAL, 20MM	E15
BEARING, RADIAL BALL, 6203	E19	BOLT, FLANGE, 6X20	E3	BOLT-WASHER, 6X12	E15	CIRCLIP, EXTERNAL, 34MM	E17
BEARING, RADIAL BALL, 6203	E19	BOLT, FLANGE, 6X20	F44-10	BOLT-WASHER, 6X16	F44-10	CIRCLIP, INTERNAL, 30MM	E13
BEARING, RADIAL BALL, 6203U	F19-30	BOLT, FLANGE, 6X22	E8	BOOT B	F12	CLAMP	F2
BEARING, RADIAL BALL, 6204	E7	BOLT, FLANGE, 6X22	E11	BOOT COMP	F5	CLAMP, TUBE (D13)	F25
BEARING, RADIAL BALL, 6204	E7	BOLT, FLANGE, 6X22	F5	BOOT, PIN BUSH	F12	CLAMPER A, OIL TEMP SENSOR	E7
BEARING, RADIAL BALL, 6204	E19	BOLT, FLANGE, 6X25	F10	BOSS, DRIVE FACE	E16	CLAMPER A, OIL TEMP SENSOR	E13
BEARING, RADIAL BALL, 6301	E19	BOLT, FLANGE, 6X25	E7	BOX ASSY., LUGGAGE	F23	CLAMPER B, BRAKE HOSE	F5
BEARING, RADIAL BALL, 6301U	E19	BOLT, FLANGE, 6X25	F36-10	BOX ASSY., SPEEDOMETER GEAR	F14-40	CLAMPER B, OIL TEMP SENSOR	E13
BEARING, RADIAL BALL, 6301U	F19-30	BOLT, FLANGE, 6X25	F23	BRACKET SUB ASSY., FR	F12	CLAMPER, BRAKE HOSE	F5
BEARING, RADIAL BALL, 6305U	E19	BOLT, FLANGE, 6X30	E12	BRACKET, FR. NUMBER PLATE	F44	CLIP, BATTERY COVER	F23
BELT, DRIVE	E17	BOLT, FLANGE, 6X32	E12	BRACKET, SIDE STAND	F31	CLIP, HEADLIGHT	F1
BODY COMP THROTTLE	E22	BOLT, FLANGE, 6X35	E13	BRUSH SET	E12	CLIP, PISTON PIN, 13MM	E20
BODY COMP., FRAME	F39	BOLT, FLANGE, 6X35	E7	BULB (12V/5W)	F44		
BOLT A, BRAKE STOPPER	F18	BOLT, FLANGE, 6X35	F18				
		BOLT, FLANGE, 6X40	E13				

INDEKS DESCRIPTION

Part Name	Block No	Part Name	Block No	Part Name	Block No	Part Name	Block No
CLIP, SNAP FITTING (PO)	F44	COVER, L. RR. BODY	F45	(E)		GROMMET, SIDE COVER	F36-10
CLIP, SNAP FITTING (PO)	F45	COVER, MAIN PIPE	F44-10	ELEMENT COMP., AIR CLEANER	F25	GUARD, OXYGEN SENSOR	E3
CLIP, SWITCH COVER	F29	COVER, OIL COOLER	E7	EMBLEM COMP., R. COVER	E7	GUIDE, FR. BRAKE CABLE	F10
CLIP, TRIM	F21	COVER, R SUB BODY	F45	EMBLEM, HONDA	F50	GUIDE, OIL SEAL	E17-20
CLIP, TUBE (C12)	E7	COVER, R.	E7	EMBLEM, L. SUB BODY COVER	F50	GUIDE, VALVE (OS)	E3
CLIP, TUBE (C12)	F25	COVER, R. BODY	F45	EMBLEM, R. SUB BODY COVER	F50	(H)	
CLIP, VALVE GUIDE	E3	COVER, R. DUMMY	F36-10	(F)		HARNESS, WIRE ASSY	F38
CLUTCH ASSY., ONE WAY	E8	COVER, R. MAIN PIPE SIDE	F44-10	FACE COMP, MOVABLE DRIVEN	E17	HEAD SUB ASSY., CYLINDER	E3
CLUTCH ASSY., ONE WAY	E8	COVER, R. RR. BODY	F45	FACE COMP., DRIVEN	E17	HEAD, CAM CHAIN TENSIONER PUSH	E5
COIL COMP., IGNITION	F38	COVER, RR. HANDLE	F7	FACE COMP., MOVABLE DRIVE	E16	HEADLIGHT ASSY	F1
COLLAR A, HANDLE SETTING	F7	COVER, RR. MUFFLER	F27	FACE, DRIVE	E16	HINGE, SEAT	F23
COLLAR B, HANDLE SETTING	F7	COVER, TAIL	F45	FENDER A, FR.	F10	HOLDER, L. PILLION STEP	F30
COLLAR, 6.2X20	F23	COVER., AIR CLEANER	F25	FENDER ASSY, RR	F34	HOLDER, MASTER CYLINDER	F5
COLLAR, CAM CHAIN TENSIONER	E5	COVER., CLUTCH	E7	FENDER B, FR	F10	HOLDER, R. PILLION STEP	F30
COLLAR, FR. AXLE DISTANCE	F14-40	CRANKCASE COMP., L	E19	FLANGE SUB ASSY., FINAL DRIVEN	F19-30	HOOK, MAIN STAND SPRING	F31
COLLAR, FR. FENDER	F5	CRANKCASE COMP., R.	E19	FLYWHEEL COMP	E8	HORN COMP. (HIGH)	F38
COLLAR, FR. FENDER	F10	CRANKSHAFT ASSY	E20	FORK ASSY., L. FR	F11	HOSE ASSY, BREATHER	F25
COLLAR, FR. WHEEL SIDE	F14-40	CUSHION ASSY., RR	F33	FORK ASSY., R. FR	F11	HOSE COMP., FR. BRAKE	F5
COLLAR, HORN SETTING	F38	CUSHION, PGM-FI UNIT	F38	FUSE, MINI (10A)	F23	HOSE COMP., FUEL FEED	F21
COLLAR, KICK SPRING	E15	CYLINDER COMP	E6	FUSE, MINI (10A)	F38	HOUSING, UNDER THROTTLE	F4
COLLAR, MAIN SIDE COVER	F10	CYLINDER SET, MASTER	F5	FUSE, MINI (15A)	F23	HOUSING, UPPER THROTTLE	F4
COLLAR, MAIN SIDE COVER	F7	CYLINDER SUB ASSY., FR. BRAKE	F5	FUSE, MINI (15A)	F38	(I)	
COLLAR, MAIN STEP MOUNTING	F30	(D)		(G)		INDICATOR, FR. BRAKE	F18
COLLAR, PILLION STEP	F27	DAMPER A, CONNECTOR	F21	GASKET, CLUTCH COVER	E7	INJECTOR ASSY., FUEL	E22
COLLAR, R. CRANK SIDE	E20	DAMPER SET, WHEEL	F19-30	GASKET, CYLINDER	E6	INSULATOR ., THROTTLE BODY	E3
COLLAR, RR. AXLE DISTANCE	F19-30	DIAL DESIGN., SPEED & FUEL	F2	GASKET, CYLINDER HEAD	E3	(J)	
COLLAR, RR. BRAKE PANEL SIDE	F18	DIAPHRAGM	F5	GASKET, CYLINDER HEAD	E3	JOINT B, BRAKE ARM	F29
COLLAR, RR. WHEEL SIDE	F19-30	DISK, FR. BRAKE	F14-40	GASKET, EX. PIPE	F27	JOINT, AIR CLEANER CONNECTING	F25
COLLAR, RUBBER BUSH	F33	DOWEL PIN, 10X14	E19	GASKET, HEAD COVER	E2	JOINT, INJECTOR	E22
COLLAR, SEAL	E17	DOWEL PIN, 8X14	E7	GASKET, HEAD COVER	E2	(K)	
COLLAR, SPRING	E17	DOWEL PIN, 8X14	E13	GASKET, L. CRANKCASE COVER	E13	KEY SET	F39
COLLAR, TAILLIGHT MOUNTING	F36-10	DOWEL PIN, SPECIAL, 8X14	E3	GASKET, OIL COOLER COVER	E7	KEY, WOODRUFF, 4MM	E20
COLLAR, WINKER STAY	F27	DOWEL PIN, SPECIAL, 8X14	E6	GASKET, OIL PUMP BODY	E11	(L)	
COTTER, VALVE	E4	DOWEL PIN, SPECIAL, 8X14	E2	GASKET, R. CRANKCASE COVER	E7	LABEL, AIR CLEANER ELEMENT	F49
COVER COMP., CYLINDER HEAD	E2	DRIVER, SCREW (NO.2 + -)	F48	GAUGE ASSY, OIL LEVEL	E13	LABEL, DRIVE CAUTION	F49
COVER COMP., L. RR	E13	DUCT A, R. COVER INLET	E7	GEAR A, KICK IDLE (37T)	E15	LABEL, FUEL	F49
COVER, ASSY FUEL PUMP	F21	DUCT B, R. COVER INLET	E7	GEAR B, KICK IDLE (30T)	E20	LABEL, TIRE & DRIVE CHAIN	F49
COVER, BATTERY	F23	DUCT L, AIR CLEANER	F25	GEAR COMP., FINAL (52T)	E17-10	LENS COMP., L. WINKER	F36-10
COVER, CENTER	F45	DUCT R, AIR CLEANER	F25	GEAR COMP., STARTER REDUCTION	E12	LENS COMP., R. WINKER	F36-10
COVER, FR. HANDLE	F7	DUCT, AIR FEED	E7	GEAR, COUNTER (40T)	E17-10	LEVER, R. STEERING HANDLE	F5
COVER, FR. MUFFLER	F27	DUCT, L. RR.	F45	GEAR, KICK DRIVE (35T)	E15	LIGHT ASSY, POSITION	F44
COVER, FR. TOP	F44	DUCT, R. COVER OUTLET	E7	GEAR, SPEEDOMETER (19T)	F14-40	LIGHT ASSY., RR. COMBINATION SET	F36-10
COVER, FR. UPPER	F44	DUCT, R. RR.	F45	GEAR., STARTER DRIVEN	E12	LOCK ASSY., SEAT	F34
COVER, HANDLE TOP (WL)	F7	DUST SEAL, 21X37X7	F14-40	GLASS	F2	LOUVER, FR. TOP	F44
COVER, L SUB BODY	F45	DUST SEAL, 27X40X4.5	F19-30	GRIP	F48	(M)	
COVER, L. BODY	F45	DUST SEAL, 42X54X7	F14-40	GRIP COMP., THROTTLE	F4	MARK, HONDA (55MM)	F50
COVER, L. CRANKCASE	E13	DUST SEAL, BRAKE CAM	F18	GRIP, L. HANDLE	F4		
COVER, L. DUMMY	F36-10	DUST SEAL, STEERING HEAD	F9	GROMMET, SIDE COVER	F7		
COVER, L. MAIN PIPE SIDE	F44-10						

INDEKS DESCRIPTION

Part Name	Block No	Part Name	Block No	Part Name	Block No	Part Name	Block No
SCREW, TORX, 5X17	E22	SPRING, BRAKE SHOE	F18	TOOL SET	F48		
SCREW, TORX, 5X8.7	E22	SPRING, CAM CHAIN TENSIONER	E5	TUBE ASSY, DRAIN	E7		
SCREW, U-LOCK FLAT, 6X12	F39	SPRING, CARBON BRUSH	E12	TUBE, AIR CLEANER CONNECTING	F25		
SCREW, VISOR SPECIAL SETTING	F44	SPRING, CLUTCH	E17-20	TUBE, AIR CLEANER DRAIN	F25		
SCREW, VISOR SPECIAL SETTING	F44-10	SPRING, DRIVEN FACE	E17	TUBE, TIRE	F14-40		
SCREW-WASHER, 3X22	F2	SPRING, FR. FORK	F11	TUBE, TIRE	F19-30		
SCREW-WASHER, 4X12	F5	SPRING, FRICTION	E15	TUBE, VINYL, 11X15X35	F25		
SCREW-WASHER, 4X12	F7	SPRING, KICK IDLE	E15				
SCREW-WASHER, 4X16	F7	SPRING, KICK RETURN	E15	(V)			
SCREW-WASHER, 4X6	E12	SPRING, LOCK KEY SETTING	F34	VALVE, STARTER IDLE AIR CONTROL	E22		
SCREW-WASHER, 5X12	E22	SPRING, MAIN STAND	F31	VALVE, EX.	E4		
SCREW-WASHER, 5X16	E12	SPRING, PAD	F12	VALVE, IN.	E4		
SCREW-WASHER, SPECIAL, 4X10	F2	SPRING, PLUNGER	E4				
SEAL SET, PISTON	F12	SPRING, REBOUND	F11	(W)			
SEAL, AIR CLEANER CASE	F25	SPRING, SEAT LOCK	F23	WASHER B, SPLINE, 17MM	E17-10		
SEAL, AIR CLEANER COVER	F25	SPRING, STOP SWITCH	F29	WASHER, 12MM	E15		
SEAL, DUST	F11	SPRING, VALVE	E4	WASHER, 12X24X2.3	E17		
SEAL, OIL 26X37X10,5	F11	SPROCKET COMP., CAM CHAIN	E5	WASHER, 16.1X27X2.3	E17-20		
SEAL, VALVE STEM	E4	SPROCKET COMP., FINAL DRIVEN	F19-30	WASHER, 8.5X26X2.3	E5		
SEAT ASSY., DOUBLE	F23	SPROCKET, CAM (32T)	E5	WASHER, 8MM	E5		
SEAT B, SPRING	F11	SPROCKET, DRIVE (14T)	E17-10	WASHER, 8MM	F18		
SEAT, DRIVEN FACE SPRING	E17	STAND COMP., MAIN	F31	WASHER, OIL BOLT	F5		
SEAT, SPRING	E15	STATOR COMP	E8	WASHER, PLAIN, 10MM	F33		
SEAT, VALVE SPRING	E4	STAY SET, FR. TOP COVER	F39	WASHER, PLAIN, 5MM	F29		
SENSOR ASSY., THERMOSTAT OIL	E6	STAY, LOWER M/P COVER ASSY	F44-10	WASHER, PLAIN, 6MM	F30		
SENSOR UNIT COMP	E22	STAY, MAIN STAND HOOK	F31	WASHER, PLAIN, 6MM	F27		
SENSOR, OXYGEN	E3	STAY, SUB COVER BODY	F45	WASHER, PLAIN, 8MM	F27		
SET RING, 17MM	E17-10	STAY, WIRE	E22	WASHER, PLAIN, 8MM	F30		
SHAFT, COUNTER (16T)	E17-10	STEM COMP., STEERING	F9	WASHER, PLAIN, 8MM	F32		
SHAFT, DRIVE	E17-20	SUB CORD, STARTER MOTOR	E12	WASHER, RR. SUSPENSION BAR	F33		
SHAFT, KICK DRIVEN (16T)	E15	SUB HARNESS, BATTERY	F38	WASHER, SEALING, 10MM	E6		
SHAFT, KICK IDLE (13T)	E15	SUSPENSION, STARTER RELAY	F38	WASHER, SEALING, 14MM	E5		
SHAFT, REDUCTION GEAR	E12	SUSPENSION, WINKER RELAY	F2	WASHER, SEALING, 6.5MM	E5		
SHAFT, ROCKER ARM	E4	SWINGARM ASSY, RR	F32	WASHER, SEAT LOCK	F34		
SHAFT, RR. BRAKE PIVOT	F31	SWITCHASSY, COMBINATION & LOCK	F39	WASHER, SPECIAL, 12X23	E17-20		
SHOE SET, BRAKE	F18	SWITCH ASSY., FR. STOP	F5	WASHER, SPECIAL, 12X23	E15		
SLEEVE, RR. WHEEL	F19-30	SWITCH ASSY., RR. STOP	F29	WASHER, SPECIAL, 14MM	E8		
SLIDER, CHAIN	F32	SWITCH ASSY., SIDE STAND	F31	WASHER, SPECIAL, 8MM	F11		
SOCKET COMP	F2	SWITCH UNIT, DIMMER	F4	WASHER, SPECIAL, 8MM	F11		
SPACER, IGNITION COIL	F38	SWITCH UNIT, HORN	F4	WASHER, SPEEDOMETER GEAR	F14-40		
SPANNER, 10X12	F48	SWITCH UNIT, LIGHTING	F4	WASHER, SPRING, 10MM	F32		
SPANNER, 14X17	F48	SWITCH UNIT, STARTER	F4	WASHER, STEERING STEM NUT	F9		
SPEEDOMETER ASSY	F2	SWITCH UNIT, WINKER	F4	WASHER, THRUST, 15.1MM	E16		
SPINDLE, CAM CHAIN GUIDE	E5			WASHER, WAVE	F12		
SPINDLE, KICK STARTER	E15	(T)		WEIGHT A, STEERING HANDLE	F7		
SPRING A, BRAKE ROD	F29	TANK COMP., FUEL	F21	WEIGHT B, STEERING HANDLE	F7		
SPRING A, SIDE STAND	F31	THREAD COMP., STEERING HEAD	F9	WEIGHT SET, PRIMARY CLUTCH	E17-20		
SPRING ASSY., RR. BRAKE RETURN	F29	THROTTLE BODY ASSY. (GQR9AB)	E22	WHEEL COMP., RR	F19-30		
SPRING B, BRAKE LOCK CABLE	F29	TIRE, FR	F14-40	WHEEL., FR	F14-40		
		TIRE, RR	F19-30	WRENCH, SPARK PLUG	F48		

PT Astra Honda Motor

TECHNICAL SERVICE DIVISION